

SIEMENS

SINAMICS

SINAMICS S120

Control Units and additional system components

Manual

Edition

04/2014

Answers for industry.

SIEMENS

SINAMICS

S120 Control Units and additional system components

Manual

Preface

Fundamental safety
instructions

1

System overview

2

Control Units and operating
elements

3

Option boards

4

Terminal Modules

5

Hub Modules

6

Voltage Sensing Module
VSM10

7

Encoder system connection

8

Cabinet design and
electromagnetic compatibility
(EMC)

9




Appendix

A

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

SINAMICS documentation

The SINAMICS documentation is organized in the following categories:

- General documentation/catalogs
- User documentation
- Manufacturer/service documentation

Additional information

The following link provides information on the topics:

- Ordering documentation/overview of documentation
- Additional links to download documents
- Using documentation online (find and search in manuals/information)

<http://www.siemens.com/motioncontrol/docu>

Please send any questions about the technical documentation (e.g. suggestions for improvement, corrections) to the following e-mail address:

docu.motioncontrol@siemens.com

My Documentation Manager

Under the following link there is information on how to create your own individual documentation based on Siemens' content, and adapt it for your own machine documentation:

<http://www.siemens.com/mdm>

Training

Information about SITRAIN (Siemens training on products, systems and solutions for automation and drives) is available under the following link:

<http://www.siemens.com/sitrain>

FAQs

You can find Frequently Asked Questions on the Service&Support pages under **Product Support**.

<http://support.automation.siemens.com>

SINAMICS

You can find information on SINAMICS at:

<http://www.siemens.com/sinamics>.

Usage phases and their documents/tools (as an example)

Table 1 Usage phases and the available documents/tools

Usage phase	Document/tool
Orientation	SINAMICS S Sales Documentation
Planning/configuration	<ul style="list-style-type: none"> • SIZER Engineering Tool • Configuration Manuals, Motors
Deciding/ordering	SINAMICS S120 catalogs <ul style="list-style-type: none"> • SIMOTION, SINAMICS S120 and Motors for Production Machines (Catalog PM 21) • SINAMICS and Motors for Single-axis Drives (Catalog D 31) • SINUMERIK & SINAMICS Equipment for Machine Tools (Catalog NC 61) • SINUMERIK 840D sl Type 1B Equipment for Machine Tools (Catalog NC 62)
Installation/assembly	<ul style="list-style-type: none"> • SINAMICS S120 Equipment Manual for Control Units and Additional System Components • SINAMICS S120 Equipment Manual for Booksize Power Units • SINAMICS S120 Equipment Manual for Chassis Power Units • SINAMICS S120 Equipment Manual for AC Drives • SINAMICS S120M Equipment Manual Distributed Drive Technology • SINAMICS HLA System Manual Hydraulic Drive
Commissioning	<ul style="list-style-type: none"> • STARTER Commissioning Tool • SINAMICS S120 Getting Started • SINAMICS S120 Commissioning Manual • SINAMICS S120 CANopen Commissioning Manual • SINAMICS S120 Function Manual • SINAMICS S120 Safety Integrated Function Manual • SINAMICS S120/S150 List Manual • SINAMICS HLA System Manual Hydraulic Drive
Usage/operation	<ul style="list-style-type: none"> • SINAMICS S120 Commissioning Manual • SINAMICS S120/S150 List Manual • SINAMICS HLA System Manual Hydraulic Drive

Usage phase	Document/tool
Maintenance/servicing	<ul style="list-style-type: none"> • SINAMICS S120 Commissioning Manual • SINAMICS S120/S150 List Manual
References	<ul style="list-style-type: none"> • SINAMICS S120/S150 List Manual

Target group

This documentation is intended for machine manufacturers, commissioning engineers, and service personnel who use the SINAMICS drive system.

Benefits

This manual describes all the information, procedures and operational instructions required for commissioning and servicing SINAMICS S120.

Standard scope

The scope of the functionality described in this document can differ from that of the drive system that is actually supplied.

- It may be possible for other functions not described in this documentation to be executed in the drive system. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of servicing.
- Functions that are not available in a particular product version of the drive system may be described in the documentation. The functionality of the supplied drive system should only be taken from the ordering documentation.
- Extensions or changes made by the machine manufacturer must be documented by the machine manufacturer.

For reasons of clarity, this documentation does not contain all of the detailed information on all of the product types, and cannot take into consideration every conceivable type of installation, operation and service/maintenance.

Technical Support

Country-specific telephone numbers for technical support are provided on the Internet at **Contact:**

<http://www.siemens.com/automation/service&support>

EC Declaration of Conformity

The EC Declarations of Conformity for the machinery directive can be found on the Internet at:

<http://support.automation.siemens.com/WW/view/de/21901735/67385845>

Alternatively, you can contact the Siemens office in your region in order to obtain the EC Declaration of Conformity.

The EC Declaration of Conformity for the Low Voltage Directive can be found on the Internet at:

<http://support.automation.siemens.com>

There – as a search term – enter the number **22383669** .

EMC limit values in South Korea

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

For sellers or other users, please bear in mind that this device is an A-grade electromagnetic wave device. This device is intended to be used in areas other than at home.

The EMC limit values to be complied with for South Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3, Category C2 or limit value class A, Group 1 according to EN55011. By applying suitable supplementary measures, the limit values according to Category C2 or according to limit value class A, Group 1 are maintained. Further, additional measures may be required, for instance, using an additional radio interference suppression filter (EMC filter).

The measures for EMC-compliant design of the system are described in detail in this manual respectively in the Configuration Manual EMC Installation Guideline.

Please note that the final statement regarding compliance with the standard is given by the respective label attached to the individual unit.

Spare parts

Spare parts are available on the Internet at:

<http://support.automation.siemens.com/WW/view/de/16612315>

Test certificates

Test certificates for functions of functional safety ("Safety Integrated") can be found at:

<http://support.automation.siemens.com>

An up-to-date list of already certified components is also available on request from your local Siemens office. If you have any questions relating to certifications that have not yet been completed, please ask your Siemens contact.

Grounding symbols

Table 2 Symbols




Symbol	Meaning
	Connection for protective conductor (PE)
	Ground (e.g. M 24 V)
	Connection for function potential bonding

Table of contents

	Preface	5
1	Fundamental safety instructions	19
1.1	General safety instructions	19
1.2	Safety instructions for electromagnetic fields (EMF)	22
1.3	Handling electrostatic sensitive devices (ESD)	23
1.4	Industrial security	23
1.5	Residual risks of power drive systems	24
2	System overview	27
2.1	Field of application	27
2.2	Platform Concept and Totally Integrated Automation	28
2.3	Introduction	30
2.4	SINAMICS S120 components	32
2.5	Power units	34
2.6	System data	34
2.7	Recycling and disposal	36
3	Control Units and operating elements	37
3.1	Introduction	37
3.2	Safety instructions for Control Units	41
3.3	Control Unit CU320-2 PN (PROFINET)	43
3.3.1	Description	43
3.3.2	Interface description	44
3.3.2.1	Overview	44
3.3.2.2	X100-X103 DRIVE-CLiQ interfaces	47
3.3.2.3	X122 digital inputs/outputs	48
3.3.2.4	X132 digital inputs/outputs	50
3.3.2.5	X124 electronics power supply	52
3.3.2.6	X127 LAN (Ethernet)	53
3.3.2.7	X140 serial interface (RS232)	54
3.3.2.8	X150 P1/P2 PROFINET	55
3.3.2.9	Measuring socket contacts	56
3.3.2.10	DIAG button	56
3.3.2.11	Slot for memory card	57
3.3.3	Connection example	59
3.3.4	Meaning of the LEDs	60
3.3.4.1	Description of the LED statuses	60
3.3.4.2	Behavior of the LEDs during booting	60
3.3.4.3	Behavior of the LEDs in the operating state	61

3.3.5	Dimension drawing.....	63
3.3.6	Technical data	64
3.4	Control Unit CU320-2 DP (PROFIBUS).....	65
3.4.1	Description	65
3.4.2	Interface description	66
3.4.2.1	Overview	66
3.4.2.2	X100-X103 DRIVE-CLiQ interfaces	69
3.4.2.3	X122 digital inputs/outputs	70
3.4.2.4	X132 digital inputs/outputs	72
3.4.2.5	X124 electronics power supply	74
3.4.2.6	X126 PROFIBUS	75
3.4.2.7	PROFIBUS address switch	76
3.4.2.8	X127 LAN (Ethernet)	77
3.4.2.9	X140 serial interface (RS232)	78
3.4.2.10	Measuring socket contacts.....	78
3.4.2.11	DIAG button	79
3.4.2.12	Slot for memory card.....	79
3.4.3	Connection example	81
3.4.4	Meaning of the LEDs.....	82
3.4.4.1	Description of the LED statuses.....	82
3.4.4.2	Behavior of the LEDs during booting	82
3.4.4.3	Behavior of the LEDs in the operating state	83
3.4.5	Dimension drawing.....	85
3.4.6	Technical data.....	86
3.5	Mounting Control Units.....	87
3.5.1	Mounting to a Line Module.....	87
3.5.2	Mounting on the mounting surface.....	89
3.5.3	Opening and removing the cover.....	90
3.6	Basic Operator Panel BOP20	91
3.6.1	Description	91
3.6.2	Interface description	91
3.6.3	Mounting at the Control Unit	94
3.6.4	Removal	95
4	Option boards	97
4.1	Safety instructions for option boards.....	97
4.2	CAN Communication Board CBC10	98
4.2.1	Description	98
4.2.2	Interface description	98
4.2.2.1	Overview	98
4.2.2.2	X451 CAN bus interface.....	99
4.2.2.3	X452 CAN bus interface X452	100
4.2.2.4	2-pin SMD DIL switch.....	100
4.2.3	Meaning of the LED	101
4.2.4	Installation	102
4.2.5	Technical data	102
4.3	Communication Board Ethernet CBE20	103
4.3.1	Description	103
4.3.2	Interface description	103
4.3.2.1	Overview	103

4.3.2.2	X1400 Ethernet interface	104
4.3.3	Meaning of the LEDs	105
4.3.4	Installation	107
4.3.5	Technical data	107
4.4	Communication Board Ethernet CBE25	108
4.4.1	Description	108
4.4.2	Interface description	109
4.4.2.1	Overview	109
4.4.2.2	Ethernet interface	109
4.4.3	Meaning of the LEDs	111
4.4.4	Installation	113
4.4.5	Technical data	114
4.5	Terminal Board TB30	115
4.5.1	Description	115
4.5.2	Interface description	115
4.5.2.1	Overview	115
4.5.2.2	X424 power supply, digital outputs	116
4.5.2.3	X481 digital inputs/outputs	117
4.5.2.4	X482 analog inputs/outputs	118
4.5.3	Connection example	119
4.5.4	Installation	120
4.5.5	Shield support	121
4.5.6	Technical data	121
5	Terminal Modules	123
5.1	Safety instructions for Terminal Modules	123
5.2	Terminal Module TM15	125
5.2.1	Description	125
5.2.2	Interface description	126
5.2.2.1	Overview	126
5.2.2.2	X500/X501 DRIVE-CLiQ interfaces	127
5.2.2.3	X520 bidirectional digital inputs/outputs	127
5.2.2.4	X521 bidirectional digital inputs/outputs	128
5.2.2.5	X522 bidirectional digital inputs/outputs	129
5.2.2.6	X524 Electronics power supply	129
5.2.3	Connection example	130
5.2.4	Meaning of the LED	131
5.2.5	Dimension drawing	132
5.2.6	Installation	133
5.2.7	Protective conductor connection and shield support	134
5.2.8	Connector coding	135
5.2.9	Technical data	136
5.3	Terminal Module TM31	138
5.3.1	Description	138
5.3.2	Interface description	139
5.3.2.1	Overview	139
5.3.2.2	X500/X501 DRIVE-CLiQ interfaces	140
5.3.2.3	X520 digital inputs	140
5.3.2.4	X521 analog inputs	142
5.3.2.5	S5 current/voltage changeover switch for analog inputs	143

5.3.2.6	X522 analog outputs/temperature sensor	143
5.3.2.7	X524 Electronics power supply	144
5.3.2.8	X530 digital inputs	145
5.3.2.9	X540 auxiliary voltage for the digital inputs.....	146
5.3.2.10	X541 bidirectional digital inputs/outputs.....	147
5.3.2.11	X542 relay outputs	148
5.3.3	Connection example	149
5.3.4	Meaning of the LED	150
5.3.5	Dimension drawing.....	151
5.3.6	Installation	152
5.3.7	Protective conductor connection and shield support	153
5.3.8	Connector coding	154
5.3.9	Technical data	155
5.4	Terminal Module TM41	156
5.4.1	Description	156
5.4.2	Interface description	157
5.4.2.1	Overview	157
5.4.2.2	X500/X501 DRIVE-CLiQ interfaces	158
5.4.2.3	X514 and X524 Power supply.....	158
5.4.2.4	X520 encoder interface.....	159
5.4.2.5	X521 bidirectional digital inputs/outputs.....	160
5.4.2.6	X522 isolated digital inputs	161
5.4.2.7	X523 analog input	162
5.4.3	Connection example	163
5.4.4	Meaning of the LEDs.....	164
5.4.5	Dimension drawing.....	165
5.4.6	Installation	166
5.4.7	Protective conductor connection and shield support	167
5.4.8	Technical data.....	168
5.5	Terminal Module TM54F	169
5.5.1	Description	169
5.5.2	Interface description	170
5.5.2.1	Overview	170
5.5.2.2	X500/X501 DRIVE-CLiQ interfaces	171
5.5.2.3	X514 power supply for digital outputs and sensors	171
5.5.2.4	X520 sensor power supply	172
5.5.2.5	X521 fail-safe digital inputs + power supply with forced dormant error detection	172
5.5.2.6	X522 fail-safe digital inputs	173
5.5.2.7	X523 fail-safe digital output.....	174
5.5.2.8	X524 electronics power supply	175
5.5.2.9	X525 fail-safe digital output.....	176
5.5.2.10	X531 fail-safe digital inputs + power supply with forced dormant error detection	177
5.5.2.11	X532 fail-safe digital inputs	178
5.5.2.12	X533 fail-safe digital output.....	179
5.5.2.13	X535 fail-safe digital output.....	180
5.5.3	Connection example	181
5.5.4	Meaning of the LEDs.....	182
5.5.5	Dimension drawing.....	184
5.5.6	Installation	185
5.5.7	Protective conductor connection and shield support	186
5.5.8	Technical data	187

5.6	Terminal Module TM120	188
5.6.1	Description	188
5.6.2	Interface description.....	189
5.6.2.1	Overview	189
5.6.2.2	X500/X501 DRIVE-CLiQ interfaces	190
5.6.2.3	X521 temperature sensor input.....	191
5.6.2.4	X524 Electronics power supply.....	193
5.6.3	Connection examples	194
5.6.4	Meaning of the LED	196
5.6.5	Dimension drawing	197
5.6.6	Installation	198
5.6.7	Protective conductor connection and shield support	199
5.6.8	Technical data.....	200
5.7	Terminal Module TM150	201
5.7.1	Description	201
5.7.2	Interface description.....	202
5.7.2.1	Overview	202
5.7.2.2	X500/X501 DRIVE-CLiQ interfaces	203
5.7.2.3	X524 Electronics power supply.....	203
5.7.2.4	X531-X536 temperature sensor inputs	204
5.7.3	Connection examples	206
5.7.4	Meaning of the LED	208
5.7.4.1	Terminal Module TM150	208
5.7.5	Dimension drawing	209
5.7.6	Installation	210
5.7.7	Protective conductor connection and shield support	211
5.7.8	Technical data.....	212
6	Hub Modules.....	213
6.1	Safety instructions for Hub Modules	213
6.2	DRIVE-CLiQ Hub Module DMC20	214
6.2.1	Description	214
6.2.2	Interface description.....	215
6.2.2.1	Overview	215
6.2.2.2	X500-X505 DRIVE-CLiQ interfaces.....	216
6.2.2.3	X524 Electronics power supply.....	217
6.2.3	Meaning of the LED	218
6.2.4	Dimension drawing	219
6.2.5	Installation	220
6.2.6	Protective conductor connection and shield support	221
6.2.7	Technical data.....	221
6.3	DRIVE-CLiQ Hub Module External DME20.....	222
6.3.1	Description	222
6.3.2	Interface description.....	223
6.3.2.1	Overview	223
6.3.2.2	X500-X505 DRIVE-CLiQ interfaces.....	224
6.3.2.3	X524 Electronics power supply.....	224
6.3.3	Dimension drawing	226
6.3.4	Installation	227
6.3.5	Technical data.....	227
6.3.6	Specifications for use with UL approval.....	228

7	Voltage Sensing Module VSM10	229
7.1	Description	229
7.2	Safety instructions for the Voltage Sensing Module (VSM10)	230
7.3	Interface description	232
7.3.1	Overview	232
7.3.2	X500 DRIVE-CLiQ interface.....	234
7.3.3	X520 analog inputs/temperature sensor.....	234
7.3.4	X521 three-phase voltage sensing up to 100 V 3-ph. AC.....	236
7.3.5	X522 three-phase voltage sensing up to 690 V 3-ph. AC.....	237
7.3.6	X524 Electronics power supply	238
7.3.7	X530 neutral point grounding	239
7.4	Connection example	240
7.5	Meaning of the LED	242
7.6	Dimension drawing.....	243
7.7	Installation	244
7.8	Protective conductor connection and shield support	245
7.9	Operation on an isolated-neutral system (IT system)	246
7.10	Technical data.....	246
7.11	Service and maintenance.....	247
8	Encoder system connection	249
8.1	Introduction.....	249
8.2	Overview of Sensor Modules	250
8.3	Safety instructions for Sensor Modules and encoders	252
8.4	Sensor Module Cabinet-Mounted SMC10	255
8.4.1	Description	255
8.4.2	Interface description	255
8.4.2.1	Overview	255
8.4.2.2	X500 DRIVE-CLiQ interface.....	256
8.4.2.3	X520 encoder system interface.....	257
8.4.2.4	X524 Electronics power supply	258
8.4.3	Connection example	259
8.4.4	Meaning of the LED	259
8.4.5	Dimension drawing.....	260
8.4.6	Mounting.....	261
8.4.7	Technical data	262
8.5	Sensor Module Cabinet-Mounted SMC20	264
8.5.1	Description	264
8.5.2	Interface description	264
8.5.2.1	Overview	264
8.5.2.2	X500 DRIVE-CLiQ interface.....	265
8.5.2.3	X520 encoder system interface.....	266
8.5.2.4	X524 Electronics power supply	267
8.5.3	Connection example	268
8.5.4	Meaning of the LED	268

8.5.5	Dimension drawing	269
8.5.6	Mounting	270
8.5.7	Technical data	271
8.6	Sensor Module Cabinet-Mounted SMC30	272
8.6.1	Description	272
8.6.2	Interface description	272
8.6.2.1	Overview	272
8.6.2.2	X500 DRIVE-CLiQ interface	273
8.6.2.3	X520 encoder system interface	274
8.6.2.4	X521 / X531 alternative encoder system interface	276
8.6.2.5	X524 Electronics power supply	278
8.6.3	Connection examples	279
8.6.4	Meaning of the LEDs	281
8.6.5	Dimension drawing	282
8.6.6	Mounting	283
8.6.7	Protective conductor connection and shield support	284
8.6.8	Technical data	285
8.7	Sensor Module Cabinet-Mounted SMC40	290
8.7.1	Description	290
8.7.2	Interface descriptions	291
8.7.2.1	Overview	291
8.7.2.2	X500/1 and X500/2 DRIVE-CLiQ interfaces	292
8.7.2.3	X520/1 and X520/2 encoder system interfaces	293
8.7.2.4	X524 Electronics power supply	294
8.7.3	Connection example	295
8.7.4	Meaning of the LEDs	296
8.7.5	Dimension drawing	297
8.7.6	Installation	298
8.7.7	Technical data	299
8.8	Sensor Module External SME20	300
8.8.1	Description	300
8.8.2	Interface description	300
8.8.2.1	Overview	300
8.8.2.2	DRIVE-CLiQ interface	301
8.8.2.3	Encoder system interface	302
8.8.3	Connection example	303
8.8.4	Dimension drawing	304
8.8.5	Installation	304
8.8.6	Technical data	305
8.9	Sensor Module External SME25	307
8.9.1	Description	307
8.9.2	Interface description	307
8.9.2.1	Overview	307
8.9.2.2	DRIVE-CLiQ interface	308
8.9.2.3	Encoder system interface	309
8.9.3	Connection example	309
8.9.4	Dimension drawing	310
8.9.5	Installation	310
8.9.6	Technical data	311
8.10	Sensor Module External SME120	313

8.10.1	Description	313
8.10.2	Safety instructions for Sensor Modules External	313
8.10.3	Interface description	314
8.10.3.1	Overview	314
8.10.3.2	X100 encoder system interface.....	315
8.10.3.3	X200 thermistor sensor input	316
8.10.3.4	X300 hall sensor input.....	317
8.10.3.5	X500 DRIVE-CLiQ interface.....	317
8.10.4	Connection examples.....	318
8.10.5	Dimension drawing.....	323
8.10.6	Installation	323
8.10.7	Technical data	324
8.11	Sensor Module External SME125	326
8.11.1	Description	326
8.11.2	Safety instructions for Sensor Modules External	326
8.11.3	Interface description	327
8.11.3.1	Overview	327
8.11.3.2	X100 encoder system interface.....	328
8.11.3.3	X200 thermistor sensor input	329
8.11.3.4	X500 DRIVE-CLiQ interface.....	330
8.11.4	Connection examples.....	331
8.11.5	Dimension drawing.....	336
8.11.6	Installation	336
8.11.7	Technical data	337
8.12	DRIVE-CLiQ encoder	339
8.12.1	Description	339
8.12.2	Interface description	339
8.12.2.1	Overview	339
8.12.2.2	DRIVE-CLiQ interface	340
8.12.3	Dimension drawings	340
8.12.4	Installation	342
8.12.5	Technical data	345
9	Cabinet design and electromagnetic compatibility (EMC)	347
9.1	Tightening torques for screws and screw connections	347
9.2	Information on control cabinet installation and EMC	348
A	Appendix	349
A.1	List of abbreviations	349
A.2	Documentation overview.....	358
A.3	Terminal description	359
A.3.1	Spring-loaded terminals	359
A.3.2	Screw terminals.....	360
	Index	363

Fundamental safety instructions

1.1 General safety instructions



DANGER

Danger to life due to live parts and other energy sources

Death or serious injury can result when live parts are touched.

- Only work on electrical devices when you are qualified for this job.
- Always observe the country-specific safety rules.

Generally, six steps apply when establishing safety:

1. Prepare for shutdown and notify all those who will be affected by the procedure.
2. Disconnect the machine from the supply.
 - Switch off the machine.
 - Wait until the discharge time specified on the warning labels has elapsed.
 - Check that it really is in a no-voltage condition, from phase conductor to phase conductor and phase conductor to protective conductor.
 - Check whether the existing auxiliary supply circuits are de-energized.
 - Ensure that the motors cannot move.
3. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water.
4. Isolate or neutralize all hazardous energy sources by closing switches, grounding or short-circuiting or closing valves, for example.
5. Secure the energy sources against switching on again.
6. Ensure that the correct machine is completely interlocked.

After you have completed the work, restore the operational readiness in the inverse sequence.



WARNING

Danger to life through a hazardous voltage when connecting an unsuitable power supply

Touching live components can result in death or severe injury.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



WARNING

Danger to life when live parts are touched on damaged devices

Improper handling of devices can cause damage.

For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.



WARNING

Danger to life through electric shock due to unconnected cable shields

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- As a minimum, connect cable shields and the conductors of power cables that are not used (e.g. brake cores) at one end at the grounded housing potential.



WARNING

Danger to life due to electric shock when not grounded

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



WARNING

Danger to life due to electric shock when opening plug connections in operation

When opening plug connections in operation, arcs can result in severe injury or death.

- Only open plug connections when the equipment is in a no-voltage state, unless it has been explicitly stated that they can be opened in operation.



WARNING

Danger to life due to fire spreading if housing is inadequate

Fire and smoke development can cause severe personal injury or material damage.

- Install devices without a protective housing in a metal control cabinet (or protect the device by another equivalent measure) in such a way that contact with fire is prevented.
- Ensure that smoke can only escape via controlled and monitored paths.

 **WARNING****Danger to life through unexpected movement of machines when using mobile wireless devices or mobile phones**

Using mobile wireless devices or mobile phones with a transmit power > 1 W closer than approx. 2 m to the components may cause the devices to malfunction, influence the functional safety of machines therefore putting people at risk or causing material damage.

- Switch the wireless devices or mobile phones off in the immediate vicinity of the components.

 **WARNING****Danger to life due to the motor catching fire in the event of insulation overload**

There is higher stress on the motor insulation through a ground fault in an IT system. If the insulation fails, it is possible that death or severe injury can occur as a result of smoke and fire.

- Use a monitoring device that signals an insulation fault.
- Correct the fault as quickly as possible so the motor insulation is not overloaded.

 **WARNING****Danger to life due to fire if overheating occurs because of insufficient ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

 **WARNING****Danger of an accident occurring due to missing or illegible warning labels**

Missing or illegible warning labels can result in accidents involving death or serious injury.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, in the national language if necessary.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.



WARNING

Danger to life when safety functions are inactive

Safety functions that are inactive or that have not been adjusted accordingly can cause operational faults on machines that could lead to serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

Note

Important safety notices for safety functions

If you want to use safety functions, you must observe the safety notices in the safety manuals.

1.2 Safety instructions for electromagnetic fields (EMF)



WARNING

Danger to life from electromagnetic fields

Electromagnetic fields (EMF) are generated by the operation of electrical power equipment such as transformers, converters or motors.

People with pacemakers or implants are at a special risk in the immediate vicinity of these devices/systems.

- Ensure that the persons involved are the necessary distance away (minimum 2 m).

1.3 Handling electrostatic sensitive devices (ESD)

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Damage through electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

1.4 Industrial security

Note

Industrial security

Siemens provides automation and drive products with industrial security functions that support the secure operation of plants or machines. They are an important component in a holistic industrial security concept. With this in mind, our products undergo continuous development. We therefore recommend that you keep yourself informed with the latest information and updates of our product.

Information and newsletters can be found at:

<http://support.automation.siemens.com>

To ensure the secure operation of a plant or machine, it is also necessary to take suitable preventive action (e.g. cell protection concept) and to integrate the automation and drive components into a state-of-the-art holistic industrial security concept for the entire plant or machine. Any third-party products used must also be taken into account.

For more detailed information, go to:

<http://www.siemens.com/industrialsecurity>



WARNING

Danger as a result of unsafe operating states resulting from software manipulation

Software manipulation (e.g. by viruses, Trojan horses, malware, worms) can cause unsafe operating states to develop in your installation which can lead to death, severe injuries and/or material damage.

- Keep the software up to date.
Information and newsletters can be found at:
<http://support.automation.siemens.com>
- Incorporate the automation and drive components into a state-of-the-art, integrated industrial security concept for the installation or machine.
For more detailed information, go to:
<http://www.siemens.com/industrialsecurity>
- Make sure that you include all installed products into the integrated industrial security concept.

1.5 Residual risks of power drive systems

The control and drive components of a drive system are approved for industrial and commercial use in industrial line supplies. Their use in public line supplies requires a different configuration and/or additional measures.

These components may only be operated in closed housings or in higher-level control cabinets with protective covers that are closed, and when all of the protective devices are used.

These components may only be handled by qualified and trained technical personnel who are knowledgeable and observe all of the safety instructions on the components and in the associated technical user documentation.

When assessing the machine's risk in accordance with the respective local regulations (e.g., EC Machinery Directive), the machine manufacturer must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of driven machine components during commissioning, operation, maintenance, and repairs caused by, for example:
 - Hardware defects and/or software errors in the sensors, controllers, actuators, and connection technology
 - Response times of the controller and drive
 - Operating and/or ambient conditions outside of the specification
 - Condensation / conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of radio devices / cellular phones in the immediate vicinity of the controller
 - External influences / damage

2. In the event of a fault, exceptionally high temperatures, including an open fire, as well as emissions of light, noise, particles, gases, etc. can occur inside and outside the inverter, e.g.:

- Component malfunctions
- Software errors
- Operating and/or ambient conditions outside of the specification
- External influences / damage

Inverters of the Open Type / IP20 degree of protection must be installed in a metal control cabinet (or protected by another equivalent measure) such that the contact with fire inside and outside the inverter is not possible.

3. Hazardous shock voltages caused by, for example:

- Component malfunctions
- Influence of electrostatic charging
- Induction of voltages in moving motors
- Operating and/or ambient conditions outside of the specification
- Condensation / conductive contamination
- External influences / damage

4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc. if they are too close.

5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly.

Note

The components must be protected against conductive contamination (e.g. by installing them in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12).

Assuming that conductive contamination at the installation site can definitely be excluded, a lower degree of cabinet protection may be permitted.

For more information about residual risks of the components in a drive system, see the relevant sections in the technical user documentation.

System overview

2.1 Field of application

SINAMICS is the family of drives from Siemens designed for machine and plant engineering applications. SINAMICS offers solutions for all drive tasks:

- Simple pump and fan applications in the process industry.
- Complex single drives in centrifuges, presses, extruders, elevators, as well as conveyor and transport systems
- Drive line-ups in textile, plastic film, and paper machines as well as in rolling mill plants
- High-precision servo drives in the manufacture of wind turbines
- Highly dynamic servo drives for machine tools, as well as packaging and printing machines



Figure 2-1 SINAMICS applications

Depending on the application, the SINAMICS range offers the ideal variant for any drive task.

- SINAMICS G is designed for standard applications with induction motors. These applications have less stringent requirements regarding the dynamic performance of the motor speed.
- SINAMICS S handles complex drive tasks with synchronous/induction motors and fulfills stringent requirements regarding:
 - the dynamic performance and accuracy
 - the integration of extensive technological functions in the drive control system
- SINAMICS DC MASTER is the DC drive belonging to the SINAMICS family. As a result of its standard expandability, it addresses both basic as well as demanding drive applications and in complementary markets.

2.2 Platform Concept and Totally Integrated Automation

All SINAMICS versions are based on a platform concept. Joint hardware and software components, as well as standardized tools for design, configuration, and commissioning tasks ensure high-level integration across all components. SINAMICS handles a wide variety of drive tasks with no system gaps. The different SINAMICS versions can be easily combined with each other.

Totally Integrated Automation (TIA) with SINAMICS S120

Apart from SIMATIC, SIMOTION and SINUMERIK, SINAMICS is one of the core components of TIA. The STARTER commissioning tool is an integral element of the TIA platform. It is thus possible to parameterize, program and commission all components in the automation system using a standardized engineering platform and without any gaps. The system-wide data management functions ensure consistent data and simplify archiving of the entire plant project.

SINAMICS S120 supports as standard PROFIBUS DP, the standard fieldbus for the TIA concept. It provides a high-performance, system-wide communication network which links all automation components:

- HMI (operator control and monitoring)
- Control
- Drives and I/O

SINAMICS S120 is also available with a PROFINET interface. This Ethernet-based bus enables control data to be exchanged at high speed via PROFINET IO with IRT or RT and makes SINAMICS S120 a suitable choice for integration in top-performance multi-axis applications. At the same time, PROFINET also uses standard IT mechanisms (TCP/IP) to transport information, e.g. operating and diagnostic data, to higher-level systems. This makes it easy to integrate into an IT corporate network.



Figure 2-2 SINAMICS as part of the Siemens modular automation system

2.3 Introduction

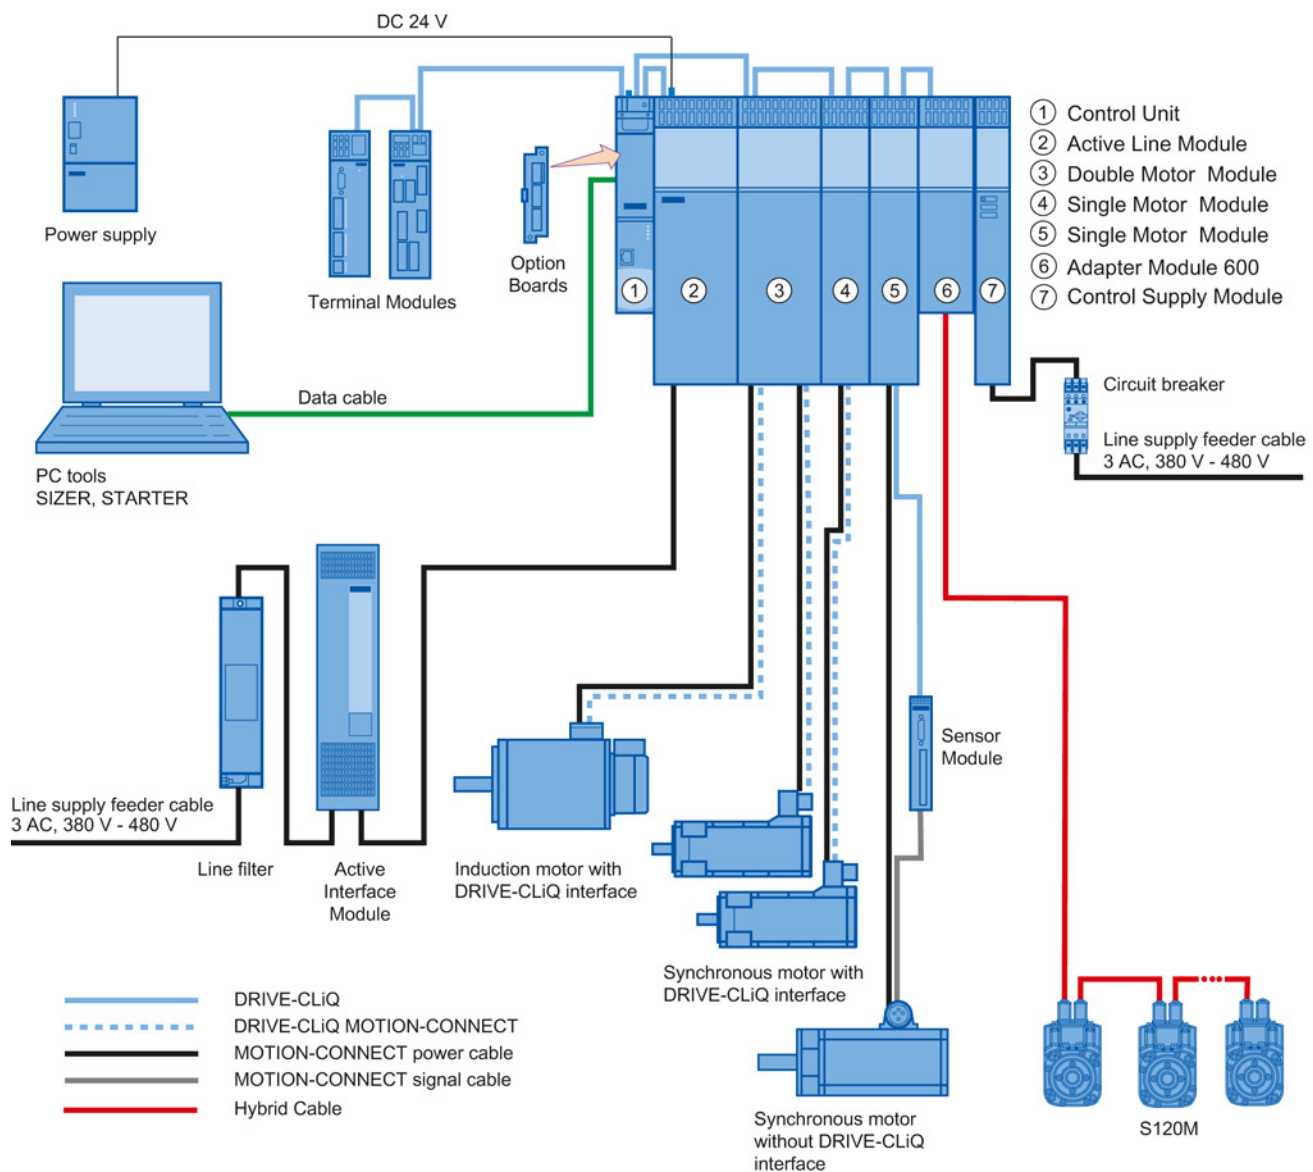


Figure 2-3 SINAMICS S120 system overview

Modular system for sophisticated drive tasks

SINAMICS S120 solves complex drive tasks for a wide range of industrial applications and is, therefore, designed as a modular system. Users can choose from many different harmonized components and functions to create a solution that best meets their requirements. SIZER, a high-performance engineering tool, makes it easier to choose and determine the optimum drive configuration.

SINAMICS S120 is supplemented by a wide range of motors. Whether torque, synchronous or induction motors, whether rotating or linear motors, all of these motors are optimally supported by SINAMICS S120.

System architecture with a central Control Unit

On the SINAMICS S120, the drive intelligence is combined with closed-loop control functions into Control Units. These units are capable of controlling drives in the vector, servo and V/f modes. They also perform the speed and torque control functions plus other intelligent drive functions for all axes on the drive. Inter-axis connections can be established within a component and easily configured in the STARTER commissioning tool using a mouse.

Functions for higher efficiency

- Basic functions: Speed control, torque control, positioning functions
- Intelligent starting functions for independent restart after power supply interruption
- BICO technology with interconnection of drive-related I/Os for easy adaptation of the drive system to its operating environment
- Integrated safety functions for rational implementation of safety concepts
- Regulated infeed/regenerative feedback functions for preventing undesirable reactions on the supply, allowing recovery of braking energy and ensuring greater stability against line fluctuations.

DRIVE-CLiQ – the digital interface between SINAMICS components

The SINAMICS S120 components, including the motors and encoders, are interconnected via a joint serial interface called DRIVE-CLiQ. The standardized cables and connectors reduce the variety of different parts and cut storage costs. Encoder evaluations for converting standard encoder signals to DRIVE-CLiQ are available for third-party motors or retrofit applications.

Electronic rating plates in all components

An important digital linkage element of the SINAMICS S120 drive system are the electronic type plates integrated in every component. They allow all drive components to be detected automatically via a DRIVE-CLiQ link. As a result, data does not have to be entered manually during commissioning or component replacement – helping to ensure that drives are commissioned more reliably.

The rating plate contains all the relevant technical data about that particular component. In the motors, for example, this data includes the parameters of the electric equivalent circuit diagram and characteristic values for the built-in motor encoder.

In addition to the technical data, the rating plate includes logistical data (manufacturer ID, order number, and ID). Since this data can be called up electronically on site or remotely, all the components used in a machine can always be individually identified, which helps simplify servicing.

2.4 SINAMICS S120 components

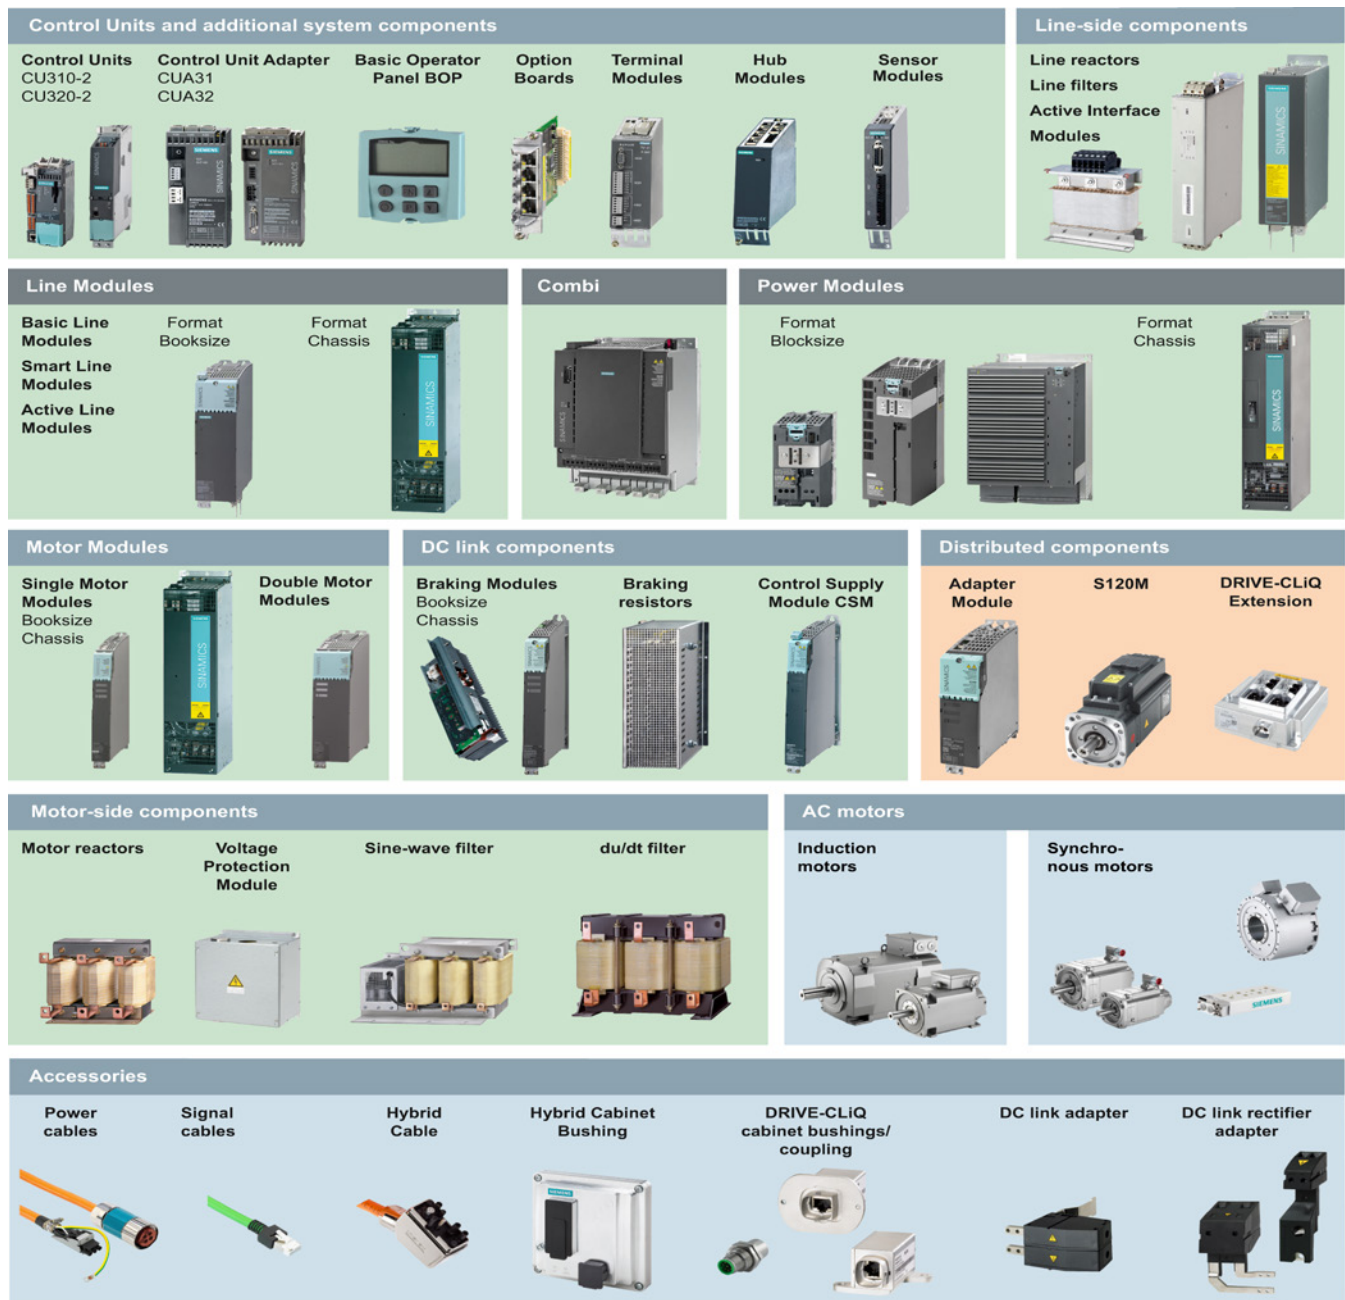


Figure 2-4 Overview of SINAMICS S120 components

System components

- Line-side power components, such as fuses, contactors, reactors, and filters for switching the power supply and meeting EMC requirements.
- Line Modules, which supply power centrally to the DC link
- DC link components (optional), which stabilize the DC link voltage.
- Motor Modules, which act as inverters, receive power from the DC link, and supply the connected motors

To carry out the required functions, SINAMICS S120 is equipped with:

- Control Units that process the drive and technological functions across all axes
- Additional system components to expand the functionality and to handle various interfaces for encoders and process signals

SINAMICS S120 components are intended for installation in cabinets. They have the following features and characteristics:

- Easy to handle, simple installation and wiring
- Practical connection system, cable routing in accordance with EMC requirements
- Standardized design, side-by-side mounting

Note

Installation location in the cabinet

The SINAMICS S120 components must always be mounted vertically in the cabinet. Other permissible installation locations are given in the descriptions for the individual components.

Booksize format

Booksize format units are optimized for multi-axis applications and are mounted adjacent to one another. The connection for the shared voltage-source DC link is an integral feature.

The booksize format offers various cooling options:

- Internal air cooling
- External air cooling
- Cold plate cooling
- Liquid Cooled

Booksize compact format

The booksize compact format combines all benefits of the booksize format and provides the same performance with an even smaller overall height. The booksize compact format is thus particularly well suited for integration into machines with high dynamic requirements and confined installation conditions.

The booksize compact format offers the following cooling options:

- Internal air cooling
- Cold plate cooling

2.5 Power units

Line Modules

Generating a DC voltage for the DC link from the 3-phase line voltage.

- **Basic Line Modules**
Basic Line Modules generate a non-regulated DC link voltage and are not capable of regenerative feedback.
- **Smart Line Modules**
The Smart Line Modules generate a non-regulated DC link voltage and are capable of regenerative feedback.
- **Active Line Modules**
The Active Line Modules generate a regulated DC link voltage and are capable of regenerative feedback.

Motor Modules

Convert energy from the DC link for the connected motors with variable voltage and variable frequency.

2.6 System data

Unless explicitly specified otherwise, the following technical data are valid for components of the SINAMICS S120 booksize drive system.

Table 2- 1 Electrical data

Electronics power supply	24 VDC -15/+20% ¹⁾ , protective extra low voltage PELV or SELV
Line connection voltage	380 ... 480 V 3 AC ± 10 % (-15 % < 1 min)
Line frequency	47 ... 63 Hz
Radio interference suppression acc. to EN 61800-3	Category C3 (standard) Category C2 (option) for systems implemented in conformance with the EC Declaration of Conformity for EMC and Configuration Manual, EMC Installation Guidelines, Order No.: 6FC5297-xAD30-0APx
Overvoltage category	III
Pollution degree	2

¹⁾ The supply voltage may not exceed the minimum value of 24 V - 15 % on the last device in the assembly, as otherwise malfunctions can occur. The amplitude of the test current must be set adequately high for this. In order to avoid exceeding the 24 V supply voltage, the voltage can be supplied at different points in the line-up.

Table 2- 2 Environmental conditions

Degree of protection	IPXXB acc. to EN 60529, open type according to UL 508
Degree of protection for SME20/25/120/125 and DME20	IP67, with mounted connectors or protective caps
Protection class, line supply circuits Electronic circuits	I with protective conductor connection) safety extra-low voltage PELV / SELV
Permissible ambient temperature in the cabinet during operation	0 °C to +55 °C up to 2000 m above sea level. Above an altitude of 2000 m, the max. ambient temperature decreases by 3.5 °C every 500 m. Installation altitude: max. 4000 m above sea level
Chemically active substances	
Long-term storage in the transport packaging	Class 1C2 according to EN 60721-3-1
Transport in the transport packaging	Class 2C2 according to EN 60721-3-2
Operation	Class 3C2 according to EN 60721-3-3
Biological environmental conditions	
Long-term storage in the transport packaging	Class 1B1 according to EN 60721-3-1
Transport in the transport packaging	Class 2B1 according to EN 60721-3-2
Operation	Class 3B1 according to EN 60721-3-3
Vibratory load	
Long-term storage in the transport packaging	Class 1M2 according to EN 60721-3-1
Transport in the transport packaging	Class 2M3 according to EN 60721-3-2
Shock load	
Long-term storage in the transport packaging	Class 1M2 according to EN 60721-3-1
Transport in the transport packaging	Class 2M3 according to EN 60721-3-2
Operation (except SME20/25/120/125)	Test values: 15 g / 11 ms
Test values for SME20/25/120/125 and DME20	
Operation	Test values: 25 g / 6 ms
Climatic environmental conditions	
Long-term storage in the transport packaging	Class 1K4 acc. to EN 60721-3-1 Temperature: -25 ... +55 °C
Transport in the transport packaging	Class 2K4 acc. to EN 60721-3-2 Temperature: -40 ... +70 °C
Operation	Class 3K3 acc. to EN 60721-3-3 Temperature: 0 ... +40 °C ¹⁾ Relative humidity: 5 ... 90 % Oil mist, salt mist, ice formation, condensation, dripping water, spraying water, splashing water and water jets are not permitted
SME20/25/120/125 and DME20	
Operation	Temperature: 0 ... +55 °C Humidity: ≥ 5 % to ≤ 65 % annual average ≤ 85 % for max. 2 months / year moisture condensation and the formation of ice not permissible

¹⁾ The components described in this manual comply with Class 3K3 according to EN 60721-3-3. However, the components can be operated in the control cabinet in a wider temperature range than defined in Class 3K3 (0 °C to +55 °C).

2.7 Recycling and disposal

Table 2- 3 Certificates

Declarations of Conformity	CE (Low-Voltage and EMC Directives)
Approvals	cULus

2.7 Recycling and disposal

Dispose of the product according to the applicable national regulations.

The products described in this Equipment Manual are extensively recyclable on account of the low-toxic composition of the materials used. To recycle and dispose of your old device in an environmentally friendly way, please contact a company that disposes of electronic waste.

Control Units and operating elements

3.1 Introduction

Description

Control Units CU320-2 PN and CU320-2 DP of the SINAMICS S system are designed for use with several drives.

The number of variable-speed drives depends on:

- The required performance
- The required additional functions
- The required operating mode (servo, vector or U/f)

The software and the parameters are stored on a plug-in memory card.

The option slot is used to expand the number of terminals or adapt to other communication interfaces (to the higher-level control).

Compatible firmware versions:

- CU320-2 PN V4.4 or higher
- CU320-2 DP V4.3 or higher

3.1 Introduction

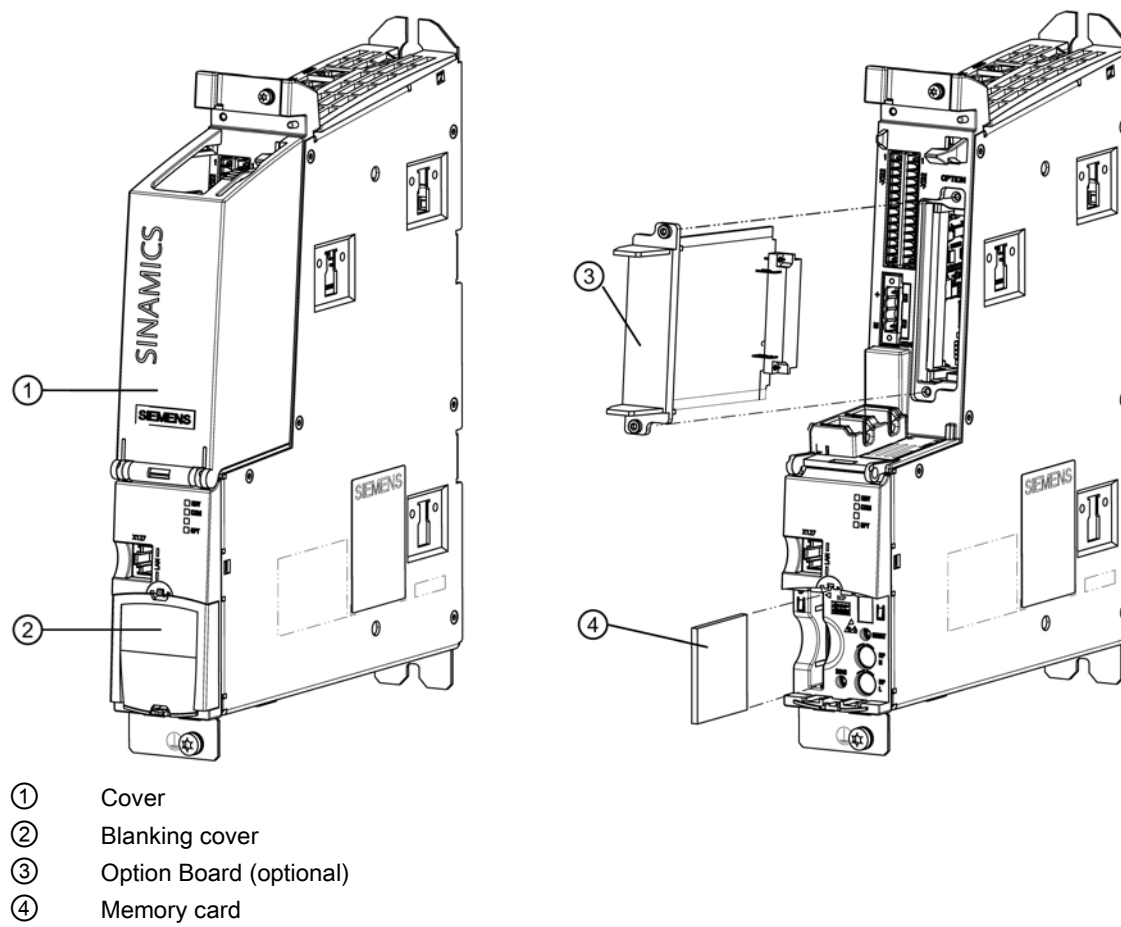


Figure 3-1 Overview, Control Unit CU320-2 PN

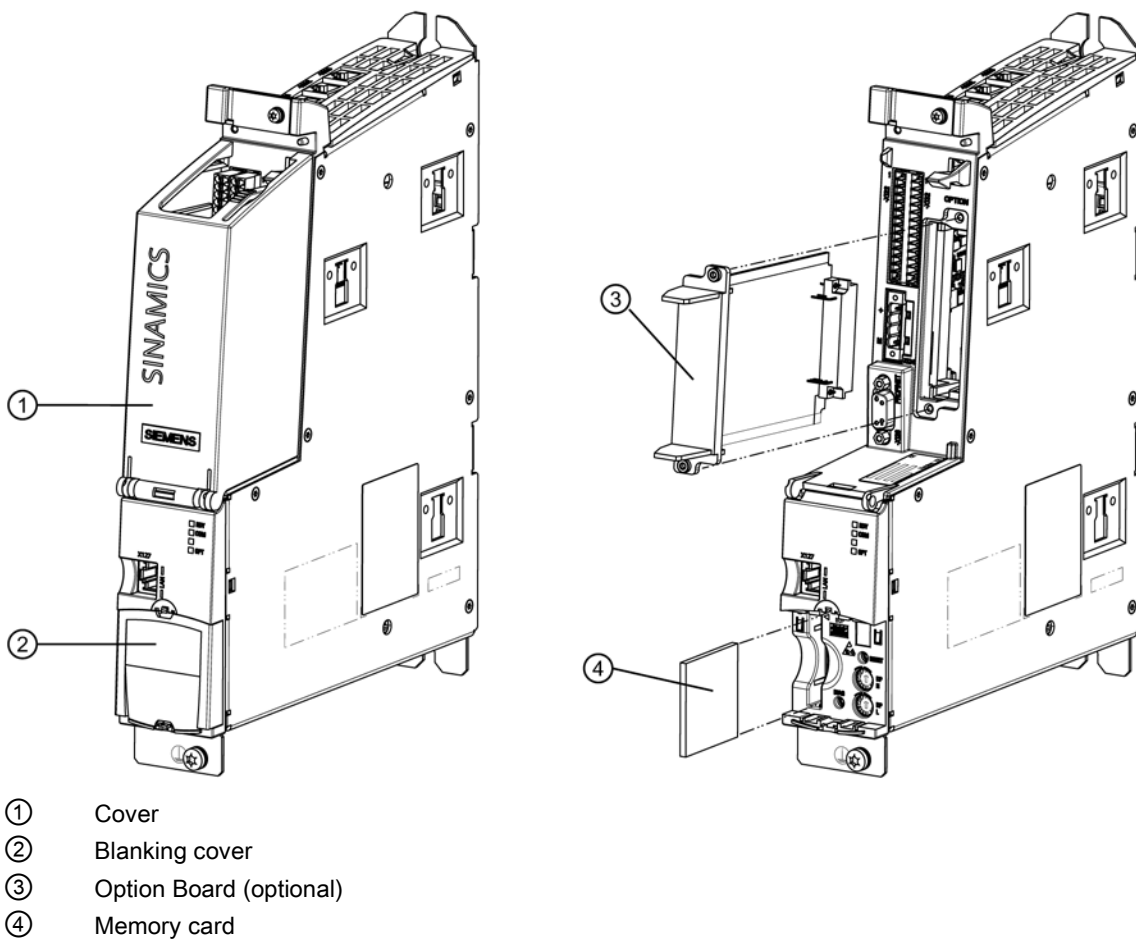


Figure 3-2 Overview, Control Unit CU320-2 DP

Note

The Control Unit, the option board, and the memory card must be ordered separately.

If your application requires more than one Control Unit, the number can be increased accordingly. The Control Units are then interconnected via PROFIBUS, for example.

A Control Unit communicates with the associated components (Motor Modules, Line Modules, Sensor Modules, Terminal Modules, and so on) via the system-internal DRIVE-CLiQ interface.

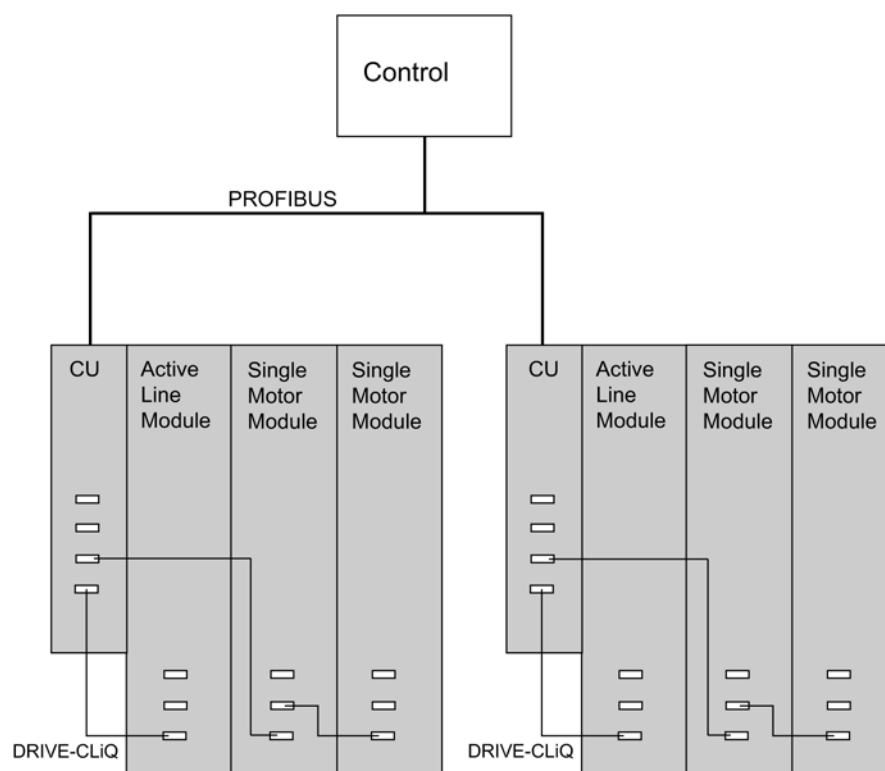


Figure 3-3 Sample configuration

3.2 Safety instructions for Control Units

WARNING

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

WARNING

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and a reduced service life for the Control Unit.

- For this reason, it is imperative that you maintain the 80 mm clearances above and below the Control Unit.

NOTICE

Risk of destroying components resulting from high discharge currents

The Control Unit or other PROFIBUS and/or PROFINET nodes can be destroyed, if significant discharge currents flow via the PROFIBUS or PROFINET cable.

- A functional equipotential bonding conductor with a cross-section of at least 25 mm² must be used between components in a system that are located at a distance from each other.

NOTICE

Malfunctions or damage to the option board by inserting and withdrawing in operation

Withdrawing and inserting the option board in operation can damage it or cause it to malfunction.

- Only withdraw or insert the Option Board when the Control Unit is current-free.

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.
-

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. This applies to all distributed DRIVE-CLiQ nodes such as DM20, SME2x, SME12x, etc.

3.3 Control Unit CU320-2 PN (PROFINET)

3.3.1 Description

The Control Unit CU320-2 PN is a central control module in which the closed-loop and open-loop functions are implemented for one or more Line Modules and/or Motor Modules. It can be used with firmware version 4.4 or higher.

The CU320-2 PN has the following interfaces (ports):

Table 3- 1 Overview of the CU320-2 PN interfaces

Type	Quantity
Isolated digital inputs	12
Non-isolated digital inputs/outputs	8
DRIVE-CLiQ interfaces	4
PROFINET interfaces	2
LAN (Ethernet)	1
Serial interface (RS232)	1
Option slot	1
Measuring socket contacts	3

3.3.2 Interface description

3.3.2.1 Overview

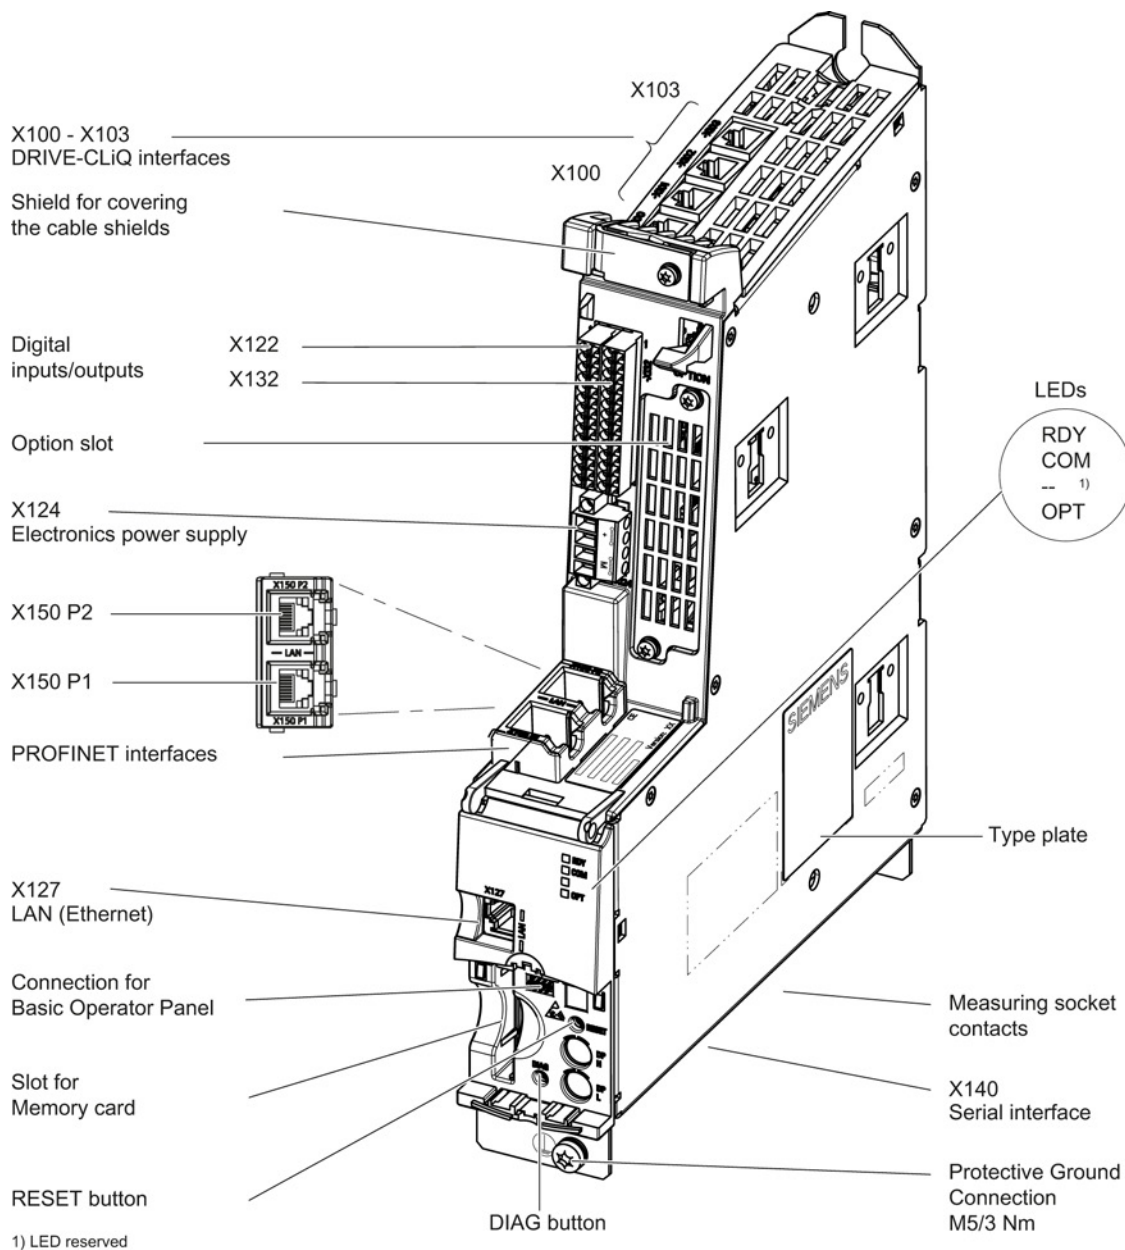


Figure 3-4 Interface overview CU320-2 PN (without cover and blanking cover)

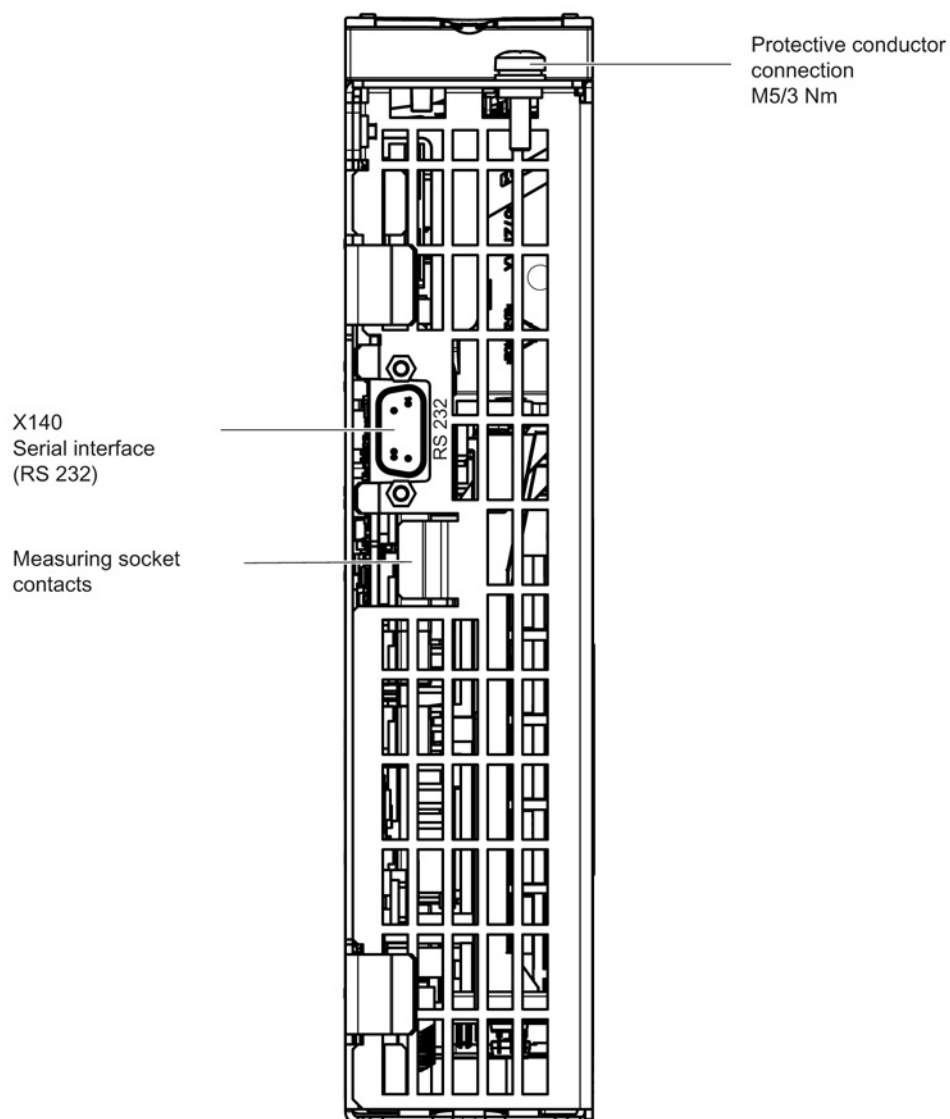


Figure 3-5 Interface X140 and measuring socket contacts - CU320-2 PN (view from below)

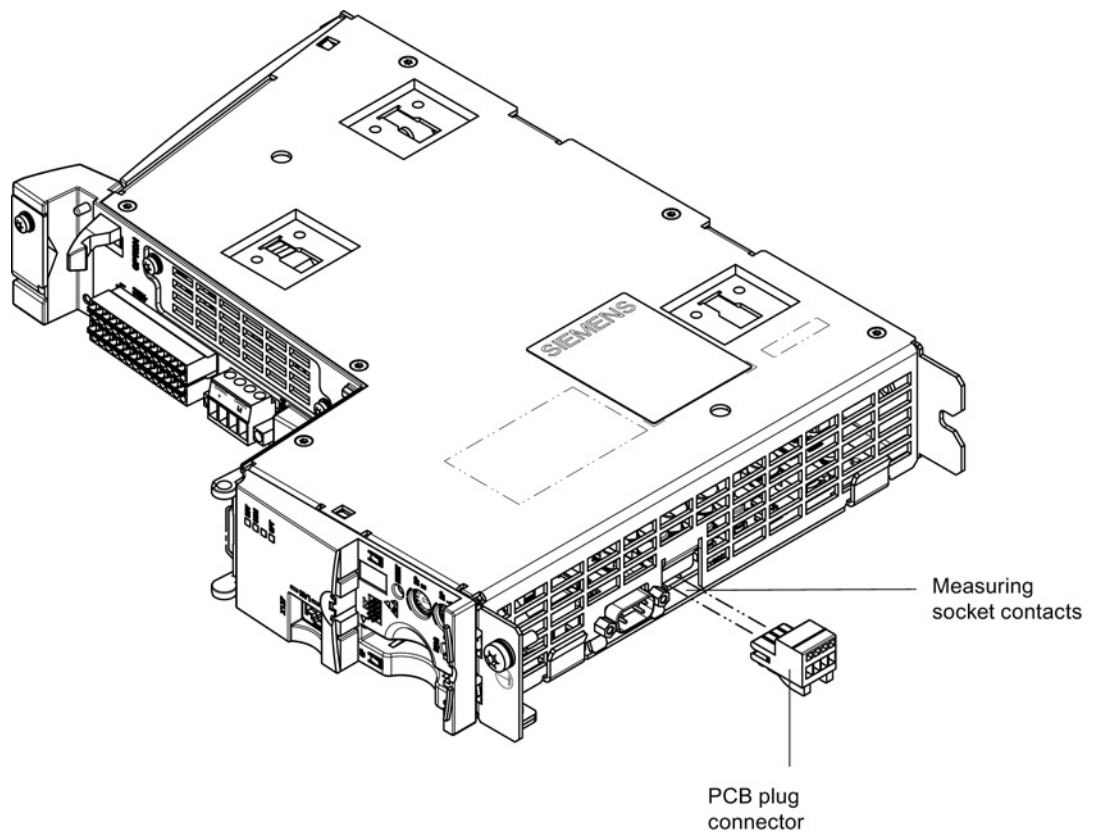
 


Figure 3-6 Installing a PCB plug connector (from Phoenix Contact) into the measuring socket contacts

3.3.2.2 X100-X103 DRIVE-CLiQ interfaces

Table 3- 2 X100-X103 DRIVE-CLiQ interfaces


	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

3.3.2.3 X122 digital inputs/outputs

Table 3- 3 X122 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage (max.): -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M1 Signal level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 µs For "1" → "0": 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	DI 16	
	6	DI 17	
	7	M1	Reference potential for terminals 1 ... 6
	8	M	Electronics ground
	9	DI/DO 8	As input: Voltage: -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Signal level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 8, 9, 10, and 11 are "rapid inputs" ²⁾ Input delay (typ.) For "0" → "1": 5 µs For "1" → "0": 50 µs As output: Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max): ³⁾ For "0" → "1": 150 µs / 400 µs For "1" → "0": 75 µs / 100 µs Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 9	
	11	M	
	12	DI/DO 10	
	13	DI/DO 11	
	14	M	

Type: Spring-loaded terminal 3 (Page 359)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M1: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark.

³⁾ Data for: V_{cc} = 24 V; load 48 Ω; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:


1. Providing the ground reference of the digital inputs
 2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)
-

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.3.2.4 X132 digital inputs/outputs

Table 3- 4 X132 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage (max.): -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M2 Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 µs For "1" → "0": 150 µs
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	DI 20	
	6	DI 21	
	7	M2	Reference potential for terminals 1 ... 6
	8	M	Electronics ground
	9	DI/DO 12	As input: Voltage: -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 12, 13, 14, and 15 are "rapid inputs" ²⁾ Input delay (typ.): For "0" → "1": 5 µs For "1" → "0": 50 µs As output: Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max): ³⁾ For "0" → "1": 150 µs / 400 µs For "1" → "0": 75 µs / 100 µs Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 13	
	11	M	
	12	DI/DO 14	
	13	DI/DO 15	
	14	M	

Type: Spring-loaded terminal 3 (Page 359)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M2: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark

³⁾ Data for: V_{cc} = 24 V; load 48 Ω; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:


1. Providing the ground reference of the digital inputs
2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.3.2.5 X124 electronics power supply

Table 3- 5 X124 electronics power supply

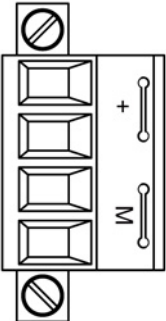	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 1.0 A (without DRIVE-CLiQ or digital outputs)
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.


The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

Note

The terminal block must be screwed on tightly using a flat-bladed screwdriver.

3.3.2.6 X127 LAN (Ethernet)

Table 3- 6 X127 LAN (Ethernet)

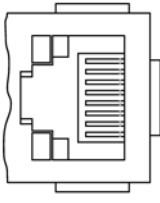	Pin	Signal name	Technical data
	1	TXP	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket			

Note

The LAN (Ethernet) interface does not support Auto MDI(X). For this reason, only crossed cables may be used to connect devices.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:


Table 3- 7 LED statuses for the X127 LAN interface

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving

3.3.2.7 X140 serial interface (RS232)

An external display and operator device for operator control/parameterization can be connected via the serial interface. The interface is located on the lower side of the Control Unit.

 
Table 3- 8 X140 serial interface (RS232)

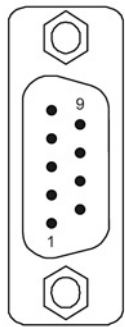	Pin	Signal name	Technical data
	1	Reserved, do not use	
	2	RxD	Receive data
	3	TxD	Transmit data
	4	Reserved, do not use	
	5	Ground	Ground reference
	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Reserved, do not use	
	9	Reserved, do not use	
Connector type: 9-pin SUB D connector			

3.3.2.8 X150 P1/P2 PROFINET

The PROFINET interfaces can be operated isochronously.

Table 3- 9 X150 P1 and X150 P2 PROFINET

	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	TXP	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket Cable type: PROFINET			

Note

The PROFINET interfaces support Auto MDI(X). It is therefore possible to use both crossed and uncrossed cables to connect the devices.

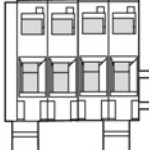
For diagnostic purposes, the two PROFINET interfaces are equipped with a green and a yellow LED. These LEDs indicate the following status information:

Table 3- 10 LED states at the X150 P1/P2 PROFINET interface

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Data is being received or sent at port x

3.3.2.9 Measuring socket contacts

Table 3- 11 Measuring socket contacts

	Socket	Function	Technical data
<div>M T0 T1 T2</div> 	M	Ground	Voltage: 0... 5 V
	T0	Measuring socket contact 0	Resolution: 8 bits
	T1	Measuring socket contact 1	Load current: max. 3 mA
	T2	Measuring socket contact 2	Continuous short-circuit proof
The reference potential is terminal M			
PCB plug connector from Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, order number: 1893708			

Note

Cable cross section

The measuring socket contacts are only suitable for cable cross-sections of 0.2 mm² to 1 mm².

Note

Using the measuring socket contacts

The measuring socket contacts support commissioning and diagnostic functions. It must not be connected for normal operation.

3.3.2.10 DIAG button

The DIAG pushbutton is reserved for service functions.

3.3.2.11 Slot for memory card



Figure 3-7 Slot for memory card

WARNING

Danger to life through software manipulation when using removable storage media

The storage of files on removable storage media involves a high risk of infection, e.g. via viruses or malware. As a result of incorrect parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the files on removable storage media against malware through appropriate protective measures, e.g. virus scanners.

Note

Possible plant standstill by withdrawing or inserting the memory card in operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

- Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

Note

Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



NOTICE

Memory card damage caused by electric fields or electrostatic discharge

Electrical fields or electrostatic discharge may result in the memory card being damaged.

- When removing and inserting the memory card, always observe the ESD regulations (Page 23).

Note

Possible data loss when returning the Control Unit with memory card

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

- Do not return the memory card as well, but keep it in a safe place so that it can be inserted in the replacement unit.

Note

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

3.3.3 Connection example

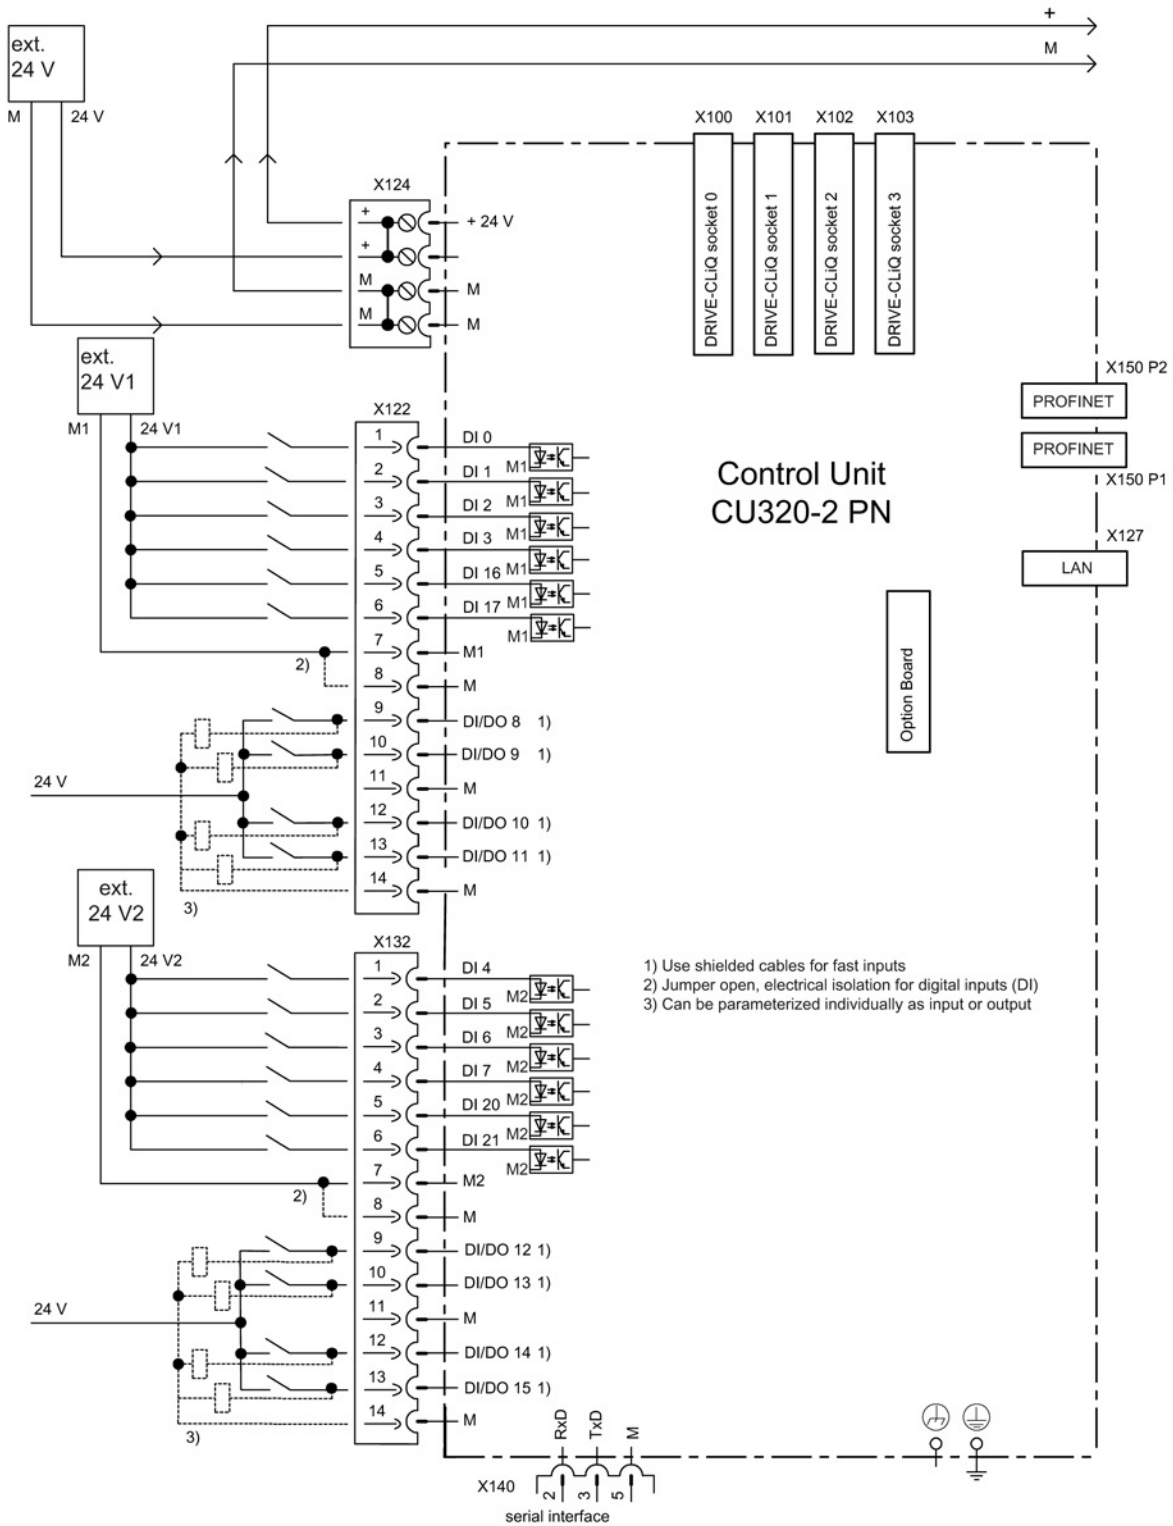


Figure 3-8 Connection example of a Control Unit CU320-2 PN

3.3.4 Meaning of the LEDs

3.3.4.1 Description of the LED statuses

The different statuses that arise during the booting procedure are indicated by means of the LEDs on the Control Unit.

- The duration of the individual statuses varies.
- If an error occurs, the booting procedure is terminated and the cause is indicated accordingly via the LEDs.
- Once the unit has successfully booted up, all the LEDs are switched off briefly.
- Once the unit has booted up, the LEDs are controlled via the loaded software.

3.3.4.2 Behavior of the LEDs during booting

Table 3- 12 Load software

LED			Status	Comment
RDY	COM	OPT		
Red	Orange	Orange	Reset	Hardware reset RDY LED lights up red, all other LEDs light up orange
Red	Red	Off	BIOS loaded	–
Red flashing light 2 Hz	Red	Off	BIOS error	<ul style="list-style-type: none"> • Error occurred while loading the BIOS
Red flashing light 2 Hz	Red flashing light 2 Hz	Off	File error	<ul style="list-style-type: none"> • Memory card not inserted or faulty • Software on memory card not present or corrupted
Red	Orange flashing light	Off	FW loading	RDY LED lights up red, COM LED flashes orange without fixed frequency
Red	Off	Off	FW loaded	–
Off	Red	Off	FW checked (no CRC error)	–
Red flashing light 0.5 Hz	Red flashing light 0.5 Hz	Off	FW checked (CRC error)	<ul style="list-style-type: none"> • CRC invalid

Table 3- 13 Firmware

LED			Status	Comment
RDY	COM	OPT		
Orange	Off	Off	Initializing	–
Alternating			Running	See the table below

3.3.4.3 Behavior of the LEDs in the operating state

Table 3- 14 Control Unit CU320-2 PN – Description of the LEDs after booting

LED	Color	Status	Description, cause	Remedy
RDY (READY)	–	OFF	Electronics power supply is missing or outside the permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	–
		Flashing light 0.5 Hz	Commissioning/reset	–
		Flashing light 2 Hz	Writing to the memory card	–
	Red	Flashing light 2 Hz	General error	Check parameterization / configuration
	Red/ green	Flashing light 0.5 Hz	Control Unit is ready for operation. However, there are no software licenses.	Obtain licenses
	Orange	Flashing light 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components	–
		Flashing light 2 Hz	DRIVE-CLiQ component firmware update complete. Wait for POWER ON for the components in question.	Turn POWER ON for the components in question
	Green/ orange or red/ orange	Flashing light 2 Hz	Component detection via LED is activated (p0124[0]). Note: Both options depend on the LED status when component recognition is activated via p0124[0] = 1.	–

3.3 Control Unit CU320-2 PN (PROFINET)

LED	Color	Status	Description, cause	Remedy
COM PROFIdrive cyclic operation	–	Off	Cyclic communication has not (yet) taken place. Note: PROFIdrive is ready for communication when the Control Unit is ready (see LED RDY).	–
	Green	Continuous light	Cyclic communication is taking place.	–
		Flashing light 0.5 Hz	Full cyclic communication has not yet taken place. Possible causes: <ul style="list-style-type: none"> The controller is not transferring any setpoints. During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the controller. "Shared Device" is selected (p8929=2) and only one controller connected. 	–
	Red	Flashing light 0.5 Hz	Bus error, incorrect parameter assignment/configuration	Adapt configuration between controller and devices
		Flashing light 2 Hz	Cyclic bus communication has been interrupted or could not be established	Remove fault
OPT (OPTION)	–	Off	Electronics power supply is missing or outside the permissible tolerance range. Component is not ready. Option board not installed or no associated drive object has been created.	Check power supply and/or component
	Green	Continuous light	Option board is ready.	–
		Flashing light 0.5 Hz	Depends on the option board used.	–
	Red	Flashing light 2 Hz	This component has at least one fault. The Option Board is not ready (e.g. after switching on).	Remove the fault and acknowledge
RDY and DP	Red	Flashing light 2 Hz	Bus error - communication has been interrupted	Remove fault
RDY and OPT	Orange	Flashing light 0.5 Hz	Firmware update in progress for connected Option Board CBE20	–

3.3.5 Dimension drawing

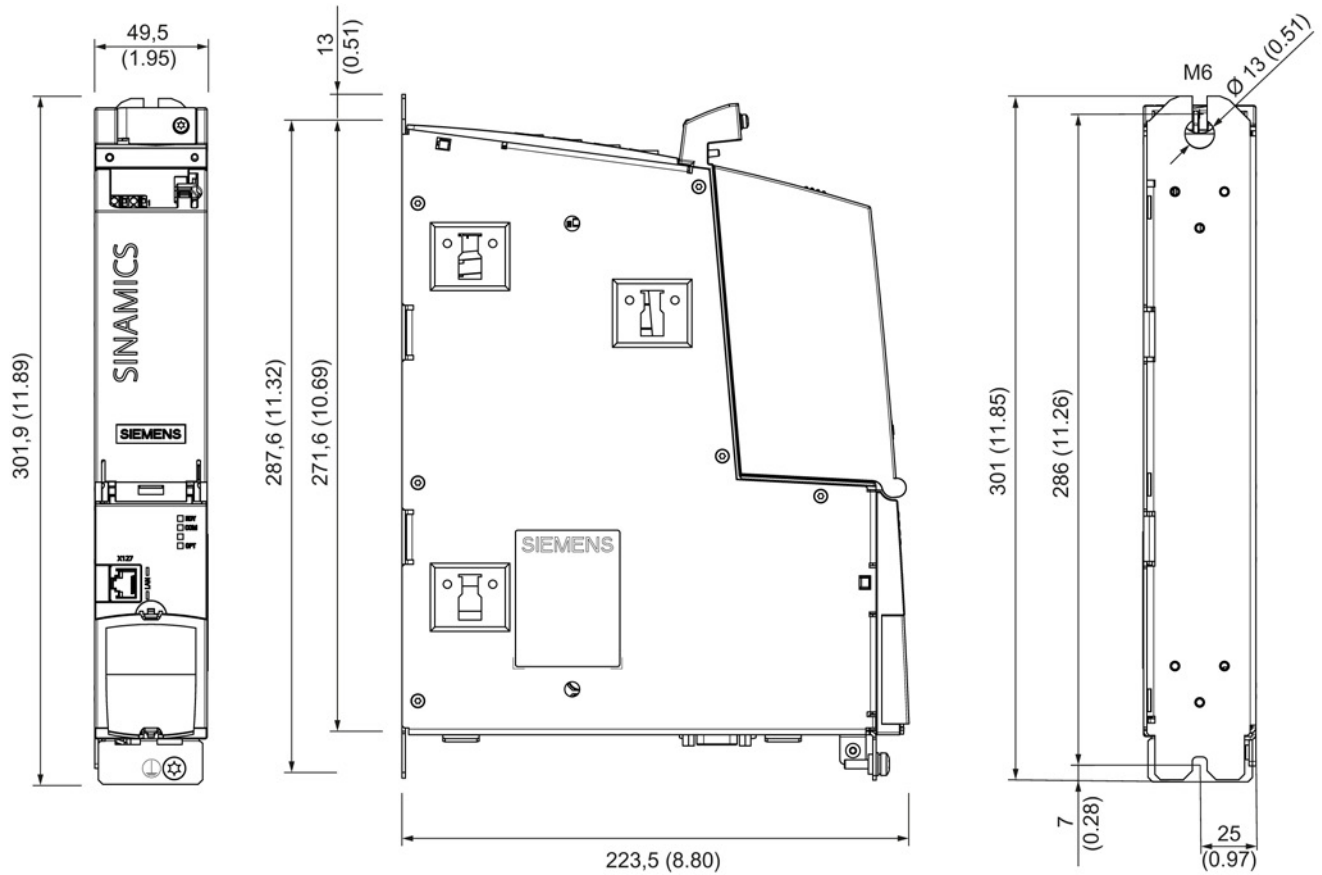


Figure 3-9 Dimension drawing of CU320-2 PN, all data in mm and (inches)

3.3.6 Technical data

Table 3- 15 Technical data

6SL3040-1MA01-0AA0	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ and digital outputs)	A _{DC}	1,0
Power loss	W	24
Total maximum permissible output currents	A	5,5
Maximum DRIVE-CLiQ cable length	m	100
PE/ground connection	On the housing with M5/3 Nm screw	
Response time	The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram). Further information: SINAMICS S120/S150 List Manual, Chapter "Function block diagrams".	
Weight	kg	2,3

3.4 Control Unit CU320-2 DP (PROFIBUS)

3.4.1 Description

The Control Unit CU320-2 DP is a central control module in which the closed-loop and open-loop functions are implemented for one or more Line Modules and/or Motor Modules. It can be used with firmware version 4.3 or higher.

The CU320-2 DP has the following interfaces (ports):

Table 3- 16 Overview of the CU320-2 DP interfaces

Type	Quantity
Isolated digital inputs	12
Non-isolated digital inputs/outputs	8
DRIVE-CLiQ interfaces	4
PROFIBUS interface	1
LAN (Ethernet)	1
Serial interface (RS232)	1
Option slot	1
Measuring socket contacts	3

3.4.2 Interface description

3.4.2.1 Overview

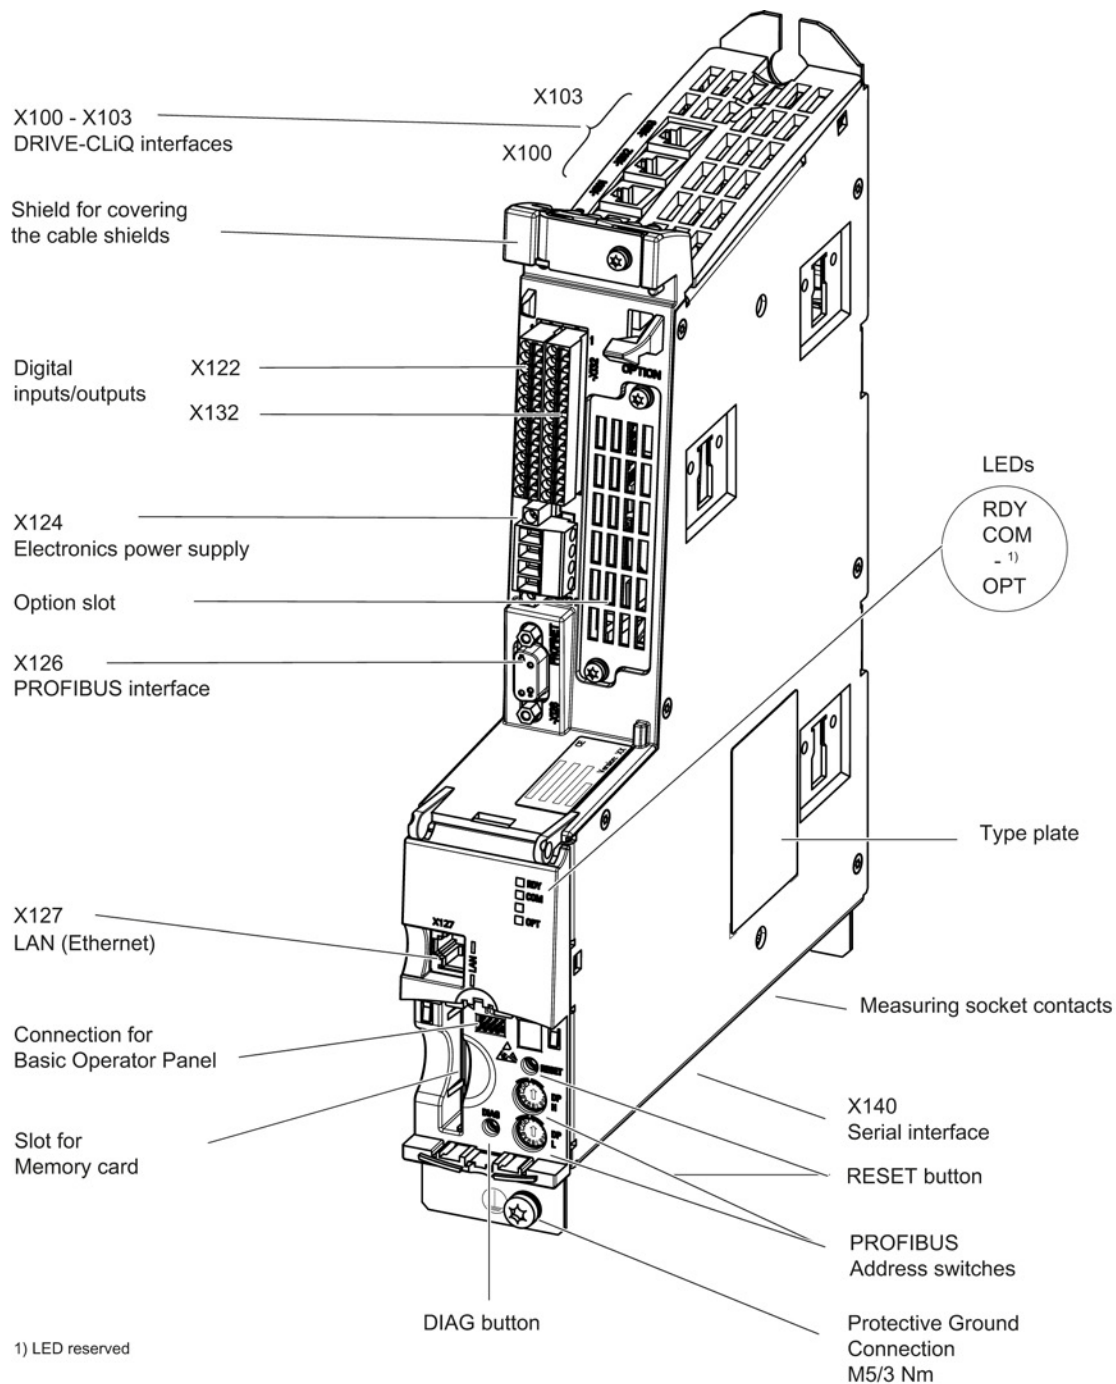


Figure 3-10 Interface overview CU320-2 DP (without cover and blanking cover)

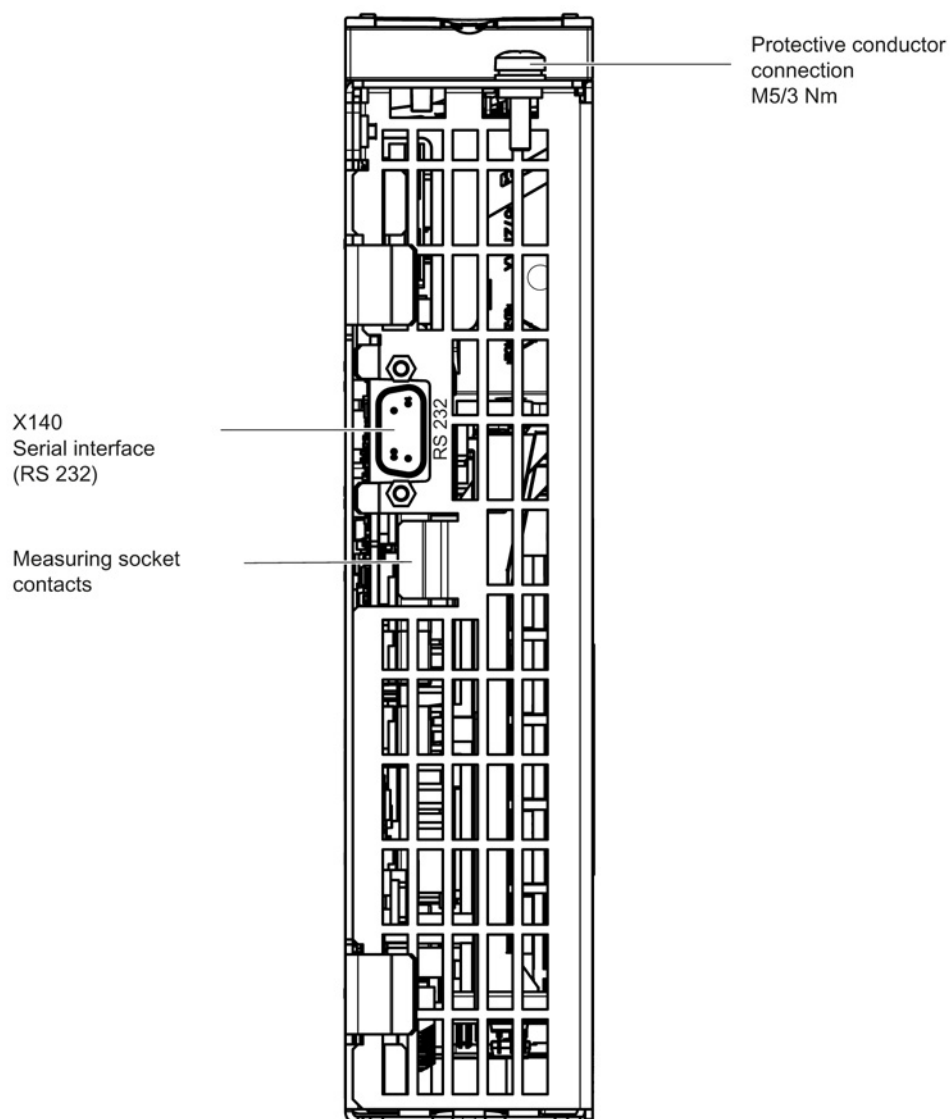


Figure 3-11 Interface X140 and measuring sockets T0 to T2 - CU320-2 DP (view from below)

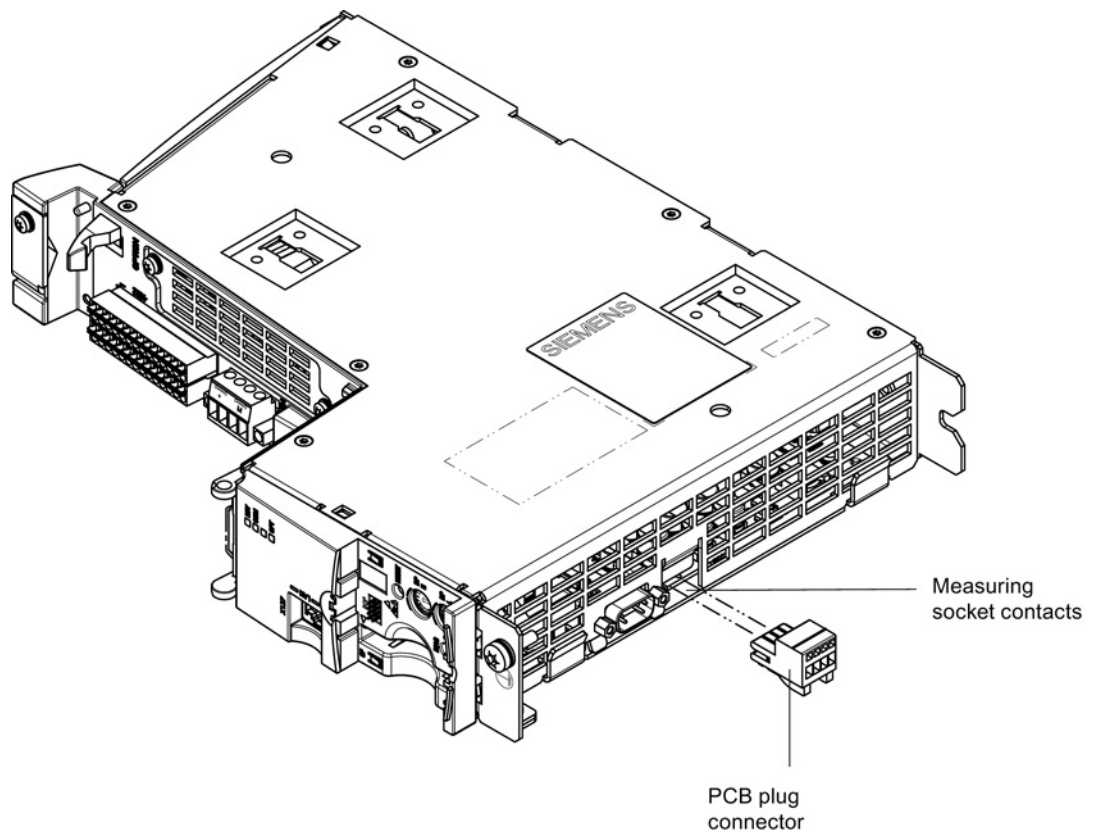
 


Figure 3-12 Installing a PCB plug connector (from Phoenix Contact) into the measuring socket contacts

3.4.2.2 X100-X103 DRIVE-CLiQ interfaces

Table 3- 17 X100-X103 DRIVE-CLiQ interfaces


	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

3.4.2.3 X122 digital inputs/outputs

Table 3- 18 X122 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage (max.): -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M1 Signal level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 µs For "1" → "0": 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	DI 16	
	6	DI 17	
	7	M1	Reference potential for terminals 1 ... 6
	8	M	Electronics ground
	9	DI/DO 8	As input: Voltage: -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Signal level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 8, 9, 10, and 11 are "rapid inputs" ²⁾ Input delay (typ.) For "0" → "1": 5 µs For "1" → "0": 50 µs As output: Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max): ³⁾ For "0" → "1": 150 µs / 400 µs For "1" → "0": 75 µs / 100 µs Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 9	
	11	M	
	12	DI/DO 10	
	13	DI/DO 11	
	14	M	

Type: Spring-loaded terminal 3 (Page 359)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M1: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark.

³⁾ Data for: V_{cc} = 24 V; load 48 Ω; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:


1. Providing the ground reference of the digital inputs
 2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)
-

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.4.2.4 X132 digital inputs/outputs

Table 3- 19 X132 digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage (max.): -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M2 Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 µs For "1" → "0": 150 µs
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	DI 20	
	6	DI 21	
	7	M2	Reference potential for terminals 1 ... 6
	8	M	Electronics ground
	9	DI/DO 12	As input: Voltage: -3 ... +30 V DC Current consumption, typical: 9 mA at 24 V Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 12, 13, 14, and 15 are "rapid inputs" ²⁾ Input delay (typ.): For "0" → "1": 5 µs For "1" → "0": 50 µs As output: Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max): ³⁾ For "0" → "1": 150 µs / 400 µs For "1" → "0": 75 µs / 100 µs Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 13	
	11	M	
	12	DI/DO 14	
	13	DI/DO 15	
	14	M	

Type: Spring-loaded terminal 3 (Page 359)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI: digital input; DI/DO: bidirectional digital input/output; M: electronics ground; M2: reference potential

²⁾ The rapid inputs can be used as probe inputs or as inputs for the external zero mark

³⁾ Data for: V_{cc} = 24 V; load 48 Ω; high ("1") = 90% V_{out}; low ("0") = 10% V_{out}

The maximum cable length that can be connected is 30 m.

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:


1. Providing the ground reference of the digital inputs
2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

3.4.2.5 X124 electronics power supply

Table 3- 20 X124 electronics power supply

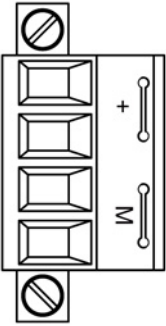	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 1.0 A (without DRIVE-CLiQ or digital outputs)
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

 
Note

The terminal block must be screwed on tightly using a flat-bladed screwdriver.

3.4.2.6 X126 PROFIBUS

The PROFIBUS interface can be operated isochronously.

Table 3- 21 X126 PROFIBUS interface

	Pin	Signal name	Meaning	Range
	1	-	Not assigned	
	2	M24_SERV	Teleservice supply, ground	0 V
	3	RxD / TxD-P	Receive/transmit data P (B)	RS485
	4	CNTR-P	Control signal	TTL
	5	DGND	PROFIBUS data reference potential	
	6	VP	Supply voltage plus	5 V ± 10%
	7	P24_SERV	Teleservice supply, + (24 V)	24 V (20.4 ... 28.8 V)
	8	RxD / TxD-N	Receive/transmit data N (A)	RS485
	9	-	Not assigned	
Connector type: 9-pin Sub-D socket				

A teleservice adapter can be connected to the PROFIBUS interface for remote diagnostics. The power supply for the teleservice (terminals 2 and 7) can have a load of up to 150 mA.

NOTICE

Damage to the Control Unit or other PROFIBUS nodes as a result of high leakage currents

If a suitable equipotential bonding conductor is not used, high leakage currents that could destroy the Control Unit or other PROFIBUS nodes can flow through the PROFIBUS cable.

- An equipotential bonding conductor with a cross-section of at least 25 mm² must be used between components in a system that are located at a distance from each other.

NOTICE

Damage to the Control Unit or other CAN nodes by connecting a CAN cable

If a CAN cable is connected to the X126 interface, the Control Unit or other CAN bus nodes can be damaged.

- Do not connect a CAN cable to the X126 interface.

PROFIBUS connectors

The first and last nodes in a bus must contain terminating resistors. Otherwise, data transmission will not function correctly.


 
The bus terminating resistors are activated in the connector.

The cable shield must be connected at both ends and over a large surface area.

3.4.2.7 PROFIBUS address switch

On the CU320-2 DP, the PROFIBUS address is set as a hexadecimal value via two rotary coding switches. Values between 0_{dec} (00_{hex}) and 127_{dec} ($7F_{\text{hex}}$) can be set as the address. The upper rotary coding switch (H) is used to set the hexadecimal value for 16^1 and the lower rotary coding switch (L) is used to set the hexadecimal value for 16^0 .

Table 3- 22 PROFIBUS address switch

Rotary coding switches	Significance	Examples		
		21_{dec}	35_{dec}	126_{dec}
		15_{hex}	23_{hex}	$7E_{\text{hex}}$
 DP H	$16^1 = 16$	1	2	7
 DP L	$16^0 = 1$	5	3	E

Setting the PROFIBUS address

The factory setting for the rotary coding switches is 0_{dec} (00_{hex}).

There are two ways to set the PROFIBUS address:

- Via a parameter (see SINAMICS S120/S150 List Manual)
 - To set the bus address for a PROFIBUS node using STARTER, first set the rotary code switches to 0_{dec} (00_{hex}) and/or 127_{dec} ($7F_{\text{hex}}$).
 - Use the parameter to set the address to a value between 1 and 126.
- Using the PROFIBUS address switches on the Control Unit
 - The address is set manually to values between 1 and 126 using the rotary coding switches. In this case, the parameter is only used to read the address.

Note

The rotary coding switches used to set the PROFIBUS address are located beneath the cover.


More information

Additional information about setting the PROFIBUS address is provided in the following document:

SINAMICS S120 Function Manual (FH1)

3.4.2.8 X127 LAN (Ethernet)

Table 3- 23 X127 LAN (Ethernet)

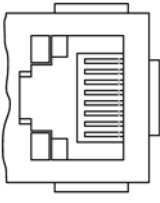	Pin	Signal name	Technical data
	1	TXP	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket			

Note

The LAN (Ethernet) interface does not support Auto MDI(X). For this reason, only crossed cables may be used to connect devices.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:


Table 3- 24 LED statuses for the X127 LAN interface

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving

3.4.2.9 X140 serial interface (RS232)


An external display and operator device for operator control/parameterization can be connected via the serial interface. The interface is located on the lower side of the Control Unit.

Table 3- 25 X140 serial interface (RS232)

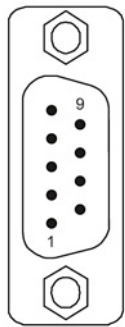	Pin	Signal name	Technical data
	1	Reserved, do not use	
	2	RxD	Receive data
	3	TxD	Transmit data
	4	Reserved, do not use	
	5	Ground	Ground reference
	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Reserved, do not use	
	9	Reserved, do not use	
Connector type: 9-pin SUB D connector			

3.4.2.10 Measuring socket contacts

Table 3- 26 Measuring socket contacts

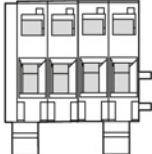	Socket	Function	Technical data
<div>M T0 T1 T2</div> 	M	Ground	Voltage: 0... 5 V
	T0	Measuring socket contact 0	Resolution: 8 bits
	T1	Measuring socket contact 1	Load current: max. 3 mA
	T2	Measuring socket contact 2	Continuous short-circuit proof
The reference potential is terminal M			
PCB plug connector from Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, order number: 1893708			

Note

Cable cross section

The measuring socket contacts are only suitable for cable cross-sections of 0.2 mm² to 1 mm².

Note

Using the measuring socket contacts

The measuring socket contacts support commissioning and diagnostic functions. It must not be connected for normal operation.

3.4.2.11 DIAG button

The DIAG pushbutton is reserved for service functions.

3.4.2.12 Slot for memory card



Figure 3-13 Slot for memory card

WARNING

Danger to life through software manipulation when using removable storage media

The storage of files on removable storage media involves a high risk of infection, e.g. via viruses or malware. As a result of incorrect parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the files on removable storage media against malware through appropriate protective measures, e.g. virus scanners.

Note

Possible plant standstill by withdrawing or inserting the memory card in operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

- Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

Note

Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



NOTICE
Memory card damage caused by electric fields or electrostatic discharge Electrical fields or electrostatic discharge may result in the memory card being damaged. <ul style="list-style-type: none">• When removing and inserting the memory card, always observe the ESD regulations (Page 23).

Note

Possible data loss when returning the Control Unit with memory card

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

- Do not return the memory card as well, but keep it in a safe place so that it can be inserted in the replacement unit.
-

Note

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

3.4.3 Connection example

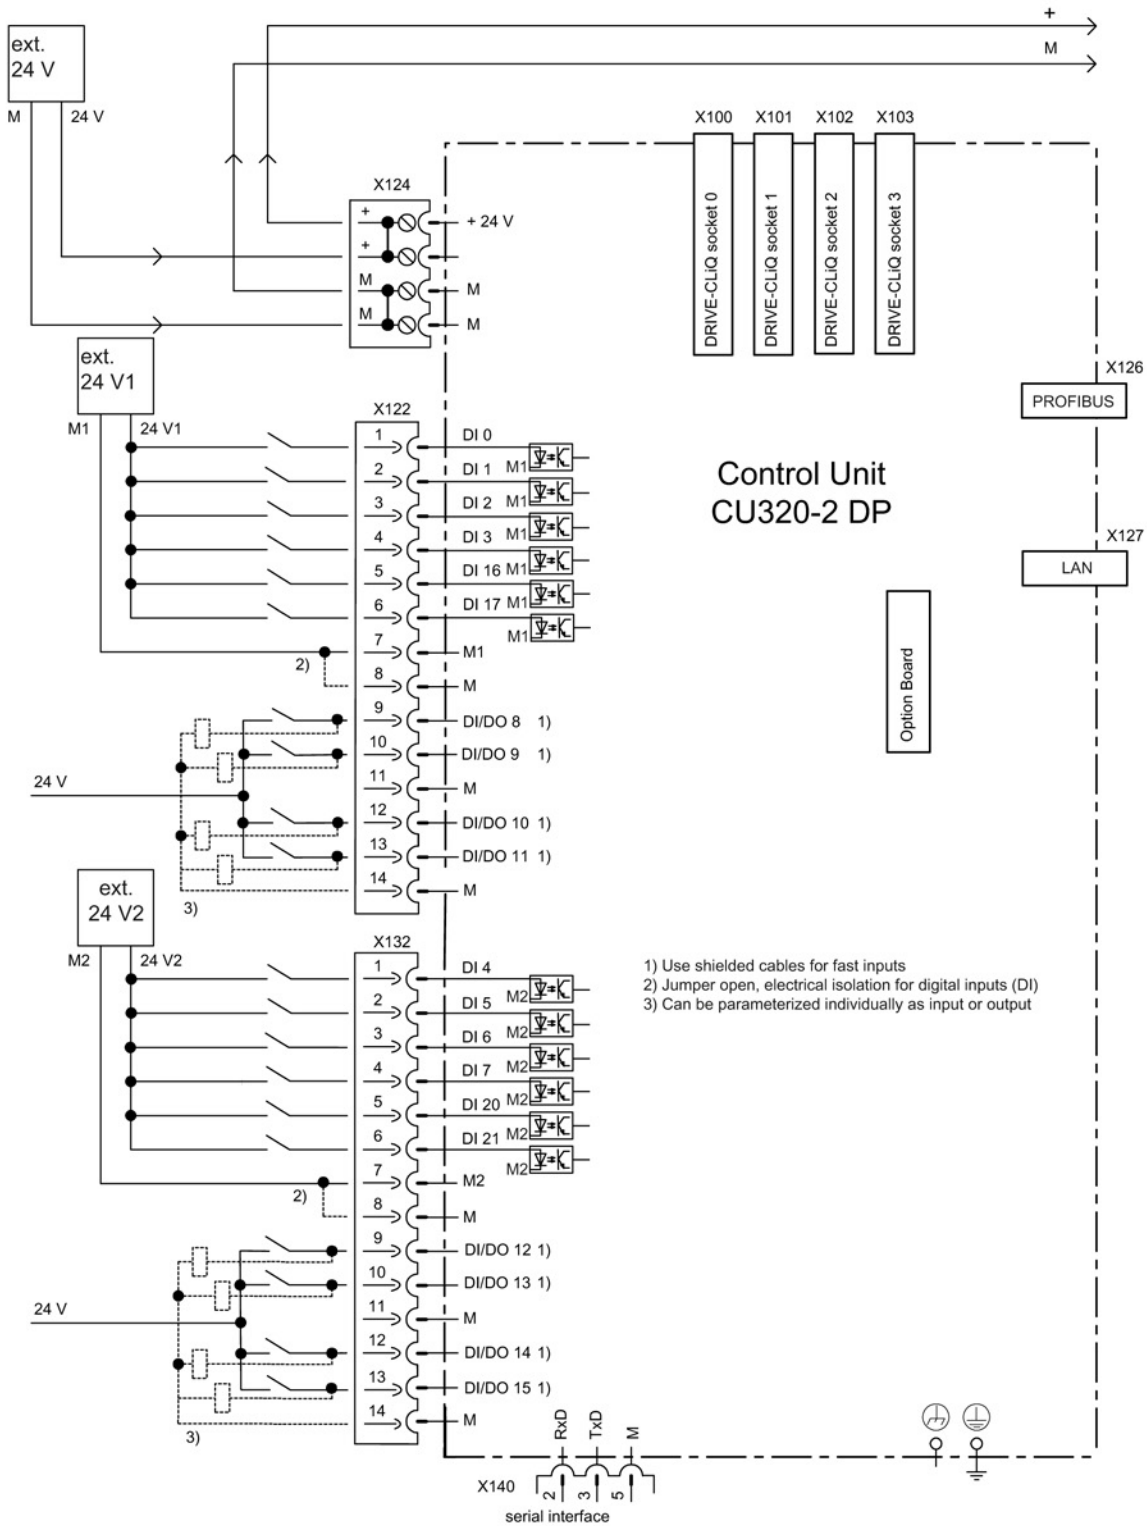


Figure 3-14 Connection example of CU320-2 DP

3.4.4 Meaning of the LEDs

3.4.4.1 Description of the LED statuses

The different statuses that arise during the booting procedure are indicated by means of the LEDs on the Control Unit.

- The duration of the individual statuses varies.
- If an error occurs, the booting procedure is terminated and the cause is indicated accordingly via the LEDs.
- Once the unit has successfully booted up, all the LEDs are switched off briefly.
- Once the unit has booted up, the LEDs are controlled via the loaded software.

3.4.4.2 Behavior of the LEDs during booting

Table 3- 27 Load software

LED			Status	Comment
RDY	COM	OPT		
Red	Orange	Orange	Reset	Hardware reset RDY LED lights up red, all other LEDs light up orange
Red	Red	Off	BIOS loaded	–
Red 2 Hz	Red	Off	BIOS error	• Error occurred while loading the BIOS
Red 2 Hz	Red 2 Hz	Off	File error	• Memory card not inserted or defective • Software on memory card not present or corrupted
Red	Orange Flashing light	Off	FW loading	RDY LED lights up red, COM LED flashes orange without fixed frequency
Red	Off	Off	FW loaded	–
Off	Red	Off	FW checked (no CRC error)	
Red 0.5 Hz	Red 0.5 Hz	Off	FW checked (CRC error)	• CRC invalid

Table 3- 28 Firmware

LED			Status	Comment
RDY	COM	OPT		
Orange	Off	Off	Initializing	–
Alternating			Running	See the table below

3.4.4.3 Behavior of the LEDs in the operating state

Table 3- 29 Control Unit CU320-2 DP – Description of the LEDs after booting

LED	Color	Status	Description, cause	Remedy
RDY (READY)	-	OFF	Electronics power supply is missing or outside the permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	–
		Flashing light 0.5 Hz	Commissioning/reset	–
		Flashing light 2 Hz	Writing to the memory card	–
	Red	Flashing light 2 Hz	General error	Check parameterization/configuration data
	Red/ green	Flashing light 0.5 Hz	Control Unit is ready for operation. However, there are no software licenses.	Obtain licenses
	Orange	Flashing light 0.5 Hz	Updating the firmware of the DRIVE-CLiQ components	–
		Flashing light 2 Hz	DRIVE-CLiQ component firmware update complete. Wait for POWER ON for the components in question.	Turn POWER ON for the components in question
	Green/ orange or red/ orange	Flashing light 2 Hz	Component detection via LED is activated (p0124[0]). Note: Both options depend on the LED status when component recognition is activated via p0124[0] = 1.	–

LED	Color	Status	Description, cause	Remedy
COM PROFIdrive cyclic operation	–	Off	Cyclic communication has not (yet) taken place. Note: The PROFIdrive is ready to communicate when the Control Unit is ready to operate (see LED RDY).	–
	Green	Continuous light	Cyclic communication is taking place.	–
		Flashing light 0.5 Hz	Full cyclic communication has not yet taken place. Possible causes: <ul style="list-style-type: none"> • The controller is not transferring any setpoints. • During isochronous operation, no global control (GC) or a faulty global control (GC) is transferred by the controller. 	–
	Red	Flashing light 0.5 Hz	PROFIBUS master is sending wrong parameterization/configuration data	Adapt configuration between master/controller and CU
		Flashing light 2 Hz	Cyclic bus communication has been interrupted or could not be established	Remove fault
OPT (OPTION)	–	Off	Electronics power supply is missing or outside the permissible tolerance range. Component is not ready. Option board not installed or no associated drive object has been created.	Check power supply and/or component
	Green	Continuous light	Option board is ready.	–
		Flashing light 0.5 Hz	Depends on the Option Board used.	–
	Red	Flashing light 2 Hz	This component has at least one fault. The Option Board is not ready (e.g. after switching on).	Remove the fault and acknowledge
RDY and COM	Red	Flashing light 2 Hz	Bus error - communication has been interrupted	Remove fault
RDY and OPT	Orange	Flashing light 0.5 Hz	Firmware update in progress for connected Option Board CBE20	–

3.4.5 Dimension drawing

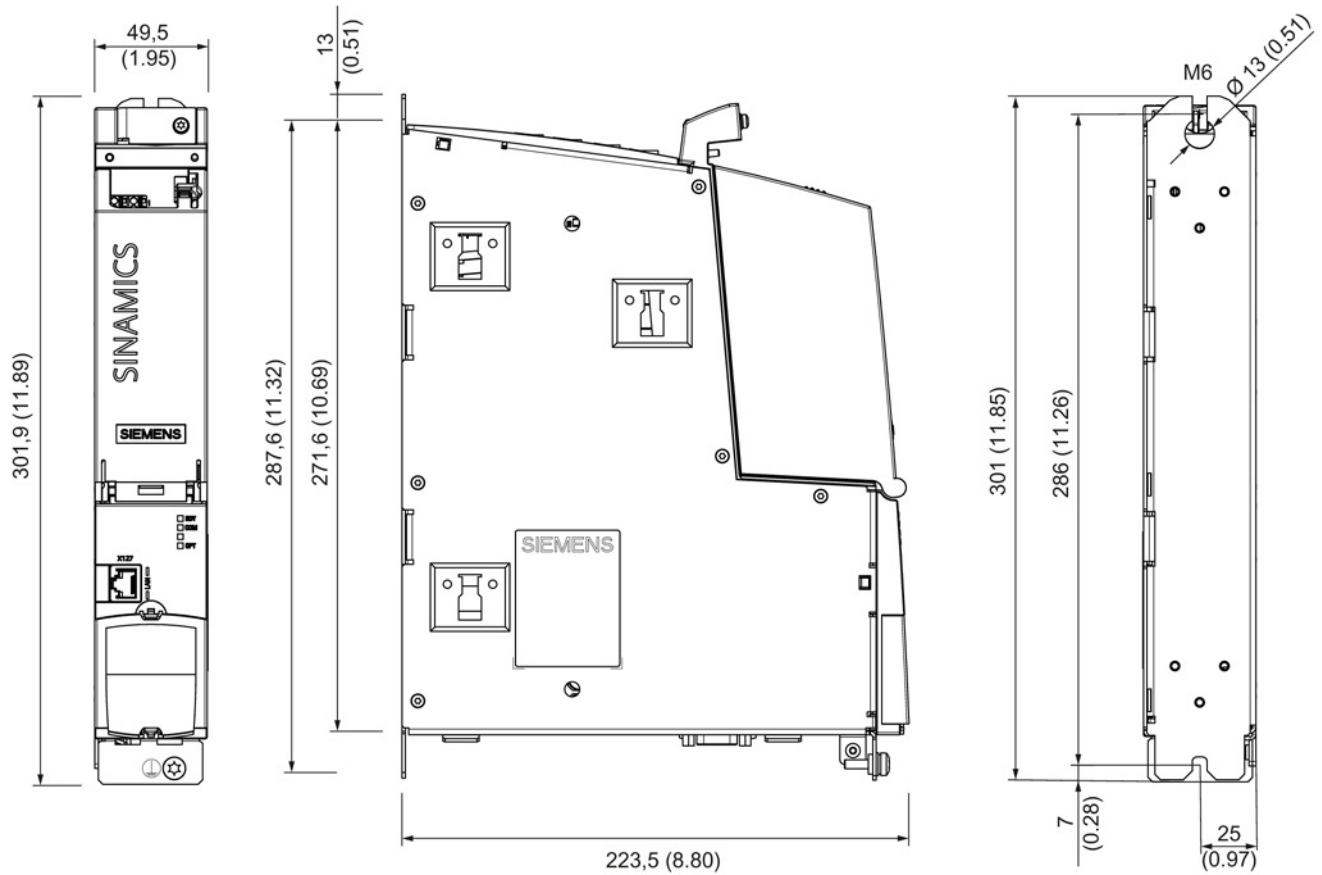


Figure 3-15 Dimension drawing of CU320-2 DP, all data in mm and (inches)

3.4.6 Technical data

Table 3- 30 Technical data

6SL3040-1MA00-0AA0	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ and digital outputs)	A _{DC}	1,0
Power loss	W	24
Maximum DRIVE-CLiQ cable length	m	100
PE/ground connection	On the housing with M5/3 Nm screw	
Response time	The response time of digital inputs/outputs depends on the evaluation (refer to the function diagram). Additional information: SINAMICS S120/S150 List Manual (LH1), Chapter "Function block diagrams"	
Weight	kg	2,3




3.5 Mounting Control Units

3.5.1 Mounting to a Line Module

Mounting a CU320-2 Control Unit directly on a Line Module, booksize or chassis format




You must attach three support brackets to a Line Module in order to mount a Control Unit directly on it. The support brackets are supplied in the Line Module accessories kit.

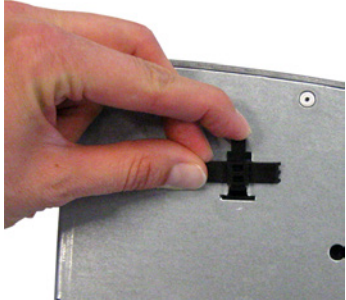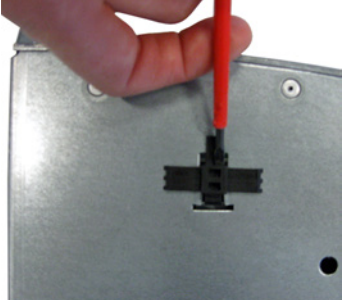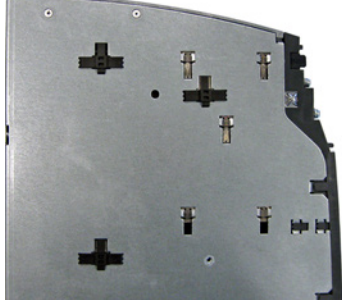
Table 3- 31 Mounting support brackets for a Control Unit onto a Line Module

		
1. Insert the first support bracket into the mounting opening provided at the Line Module.	2. Insert the support bracket up to the end stop using a suitable tool (screwdriver).	3. Mount the additional support brackets as described under Points 1 and 2.

Then mount the Control Unit onto the Line Module as shown below.

Table 3- 32 Installing the Control Unit on a Line Module using the CU320-2 DP as an example

		
1. Mount the Control Unit onto the Line Module using the 3 support brackets.	2. Push down the Control Unit onto the support brackets until it latches into place.	3. The front of the mounted Control Unit must be flush with the Line Module.

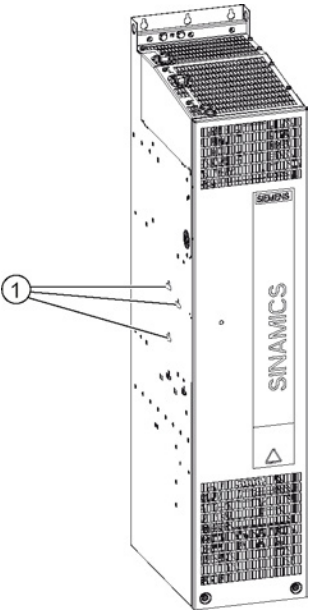

① Opening on the Line Module Chassis for fastening the Control Unit

Figure 3-16 Mounting a Control Unit on a Line Module, chassis format

3.5.2 Mounting on the mounting surface

Mounting a CU320-2 Control Unit directly onto a mounting surface

Mount the fixing lug of the Control Unit on the mounting surface using M6 screws.


Tightening torque: 6 Nm

Mounting a CU320-2 Control Unit to a mounting surface using spacers

To increase the mounting depth of the Control Unit to the 270 mm mounting depth of a Line Module in the booksize format, mount spacers (2 pieces: 6SL3064-1BB00-0AA0) as shown below to the Control Unit.

Tools required:

- Torx screwdriver T10 for the screws (M3) of the spacer

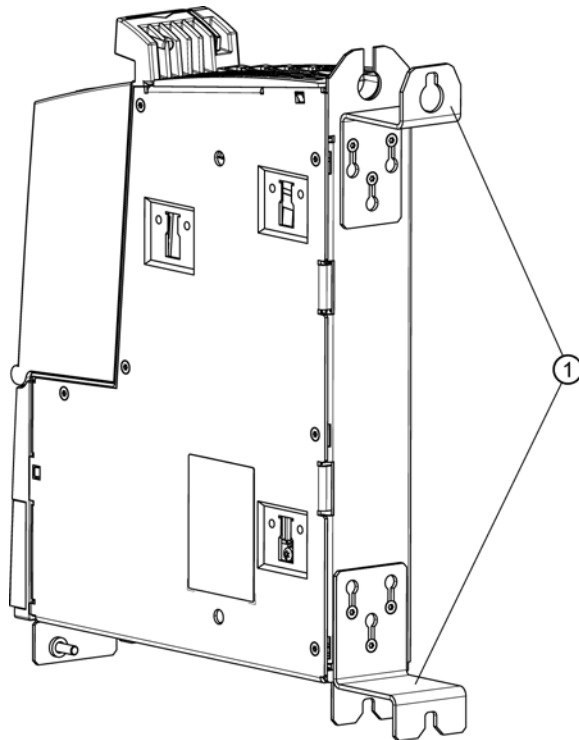

① Spacer

Figure 3-17 CU320-2 with spacers for mounting on a mounting surface

3.5.3 Opening and removing the cover

Table 3- 33 Opening and lifting the cover using the CU320-2 DP as an example






		
Release the cover by gently pressing the release lug.	Swivel the cover to the front to open it.	Control Unit with cover open

Table 3- 34 Removing the cover using a CU320-2 DP as an example

	
Release the cover by gently applying lateral pressure at the joint.	Swivel the cover to the side to remove it.

3.6 Basic Operator Panel BOP20

3.6.1 Description

The Basic Operator Panel BOP20 contains 6 keys and a backlit display unit. The BOP20 can be plugged onto a SINAMICS Control Unit and operated.

The following functions are possible with the BOP:

- Input of parameters and activation of functions
- Display of operating modes, parameters, alarms and faults

3.6.2 Interface description



Figure 3-18 Basic Operator Panel BOP20

Overview of displays and keys

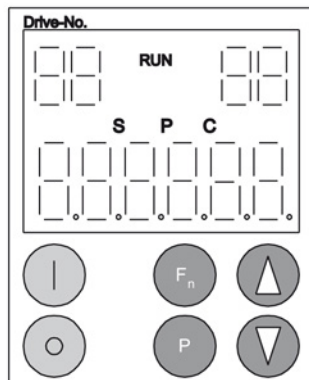








Figure 3-19 Overview of displays and keys

Table 3- 35 Displays

Display	Meaning
Top left 2 positions	The active drive object of the BOP is displayed here. The displays and key operations always refer to this drive object.
RUN	Is lit (bright) if the displayed drive is in the RUN state (in operation).
Top right 2 positions	The following is displayed in this field: <ul style="list-style-type: none"> • More than 6 digits: Characters that are present but cannot be seen (e.g. "r2" → 2 characters to the right are invisible, "L1" → 1 character to the left is invisible) • Faults: Selects/displays other drives with faults • Designation of BICO inputs (bi, ci) • Designation of BICO outputs (bo, co) Source object of a BICO interconnection to a drive object other than the active one.
S	Is (bright) if at least one parameter was changed and the value was not transferred into the non-volatile memory.
P	Is lit (bright) if, for a parameter, the value only becomes effective after pressing the P key.
C	Is light (bright) if at least one parameter was changed and the calculation for consistent data management has still not been initiated.
Below, 6 position	Displays, e.g. parameters, indices, faults and alarms.

BOP20 keyboard

Table 3- 36 Assignment of the BOP20 keyboard

Key	Name	Meaning
	ON	Powering-up the drives for which the command "ON/OFF1", "OFF2" or "OFF3" should come from the BOP.
	OFF	Power-down the drives for which the "ON/OFF1," "OFF2," or "OFF3" commands should come from the BOP.
		Note: The effectiveness of these keys can be defined using the appropriate BICO parameterization (e.g. using these keys, it is possible to simultaneously control all of the axes that have been configured.) The structure of the BOP control word corresponds to the structure of the PROFIBUS control word.
	Functions	The meaning of these keys depends on the actual display. Note: The effectiveness of this key to acknowledge faults can be defined using the appropriate BICO parameterization.
	Parameter	The meaning of these keys depends on the actual display.
	Raise	The keys are dependent on the actual display and are used to raise or lower values.
	Lower	

Display and operator controls of the BOP20

For information about display and operator controls of the BOP20, refer the SINAMICS S120 Commissioning Manual.

3.6.3 Mounting at the Control Unit





NOTICE

Damage to the interface for the BOP20 at the Control Unit through tilting

If the BOP20 is skewed when inserting or withdrawing it, this can damage the interface for the BOP20.

- Make sure that you insert and withdraw the BOP20 straight into/out of the Control Unit and that it is not tilted up or down.

Table 3- 37 Mounting a Basic Operator Panel BOP20 using the CU320-2 DP as an example

	
1. Press the latching cams together and remove the blanking cover.	2. Insert the memory card in the slot provided.
	
3. Press the latching cams on the BOP20 together, and push the BOP20 straight in until you hear it latch into position.	CU320-2 DP with BOP20 installed

3.6.4 Removal

Please note the following information when removing the BOP20 from the Control Unit:

1. Simultaneously press the latching cams on the BOP20.
2. Always withdraw the BOP20 straight out (without skewing it). Never withdraw the BOP20 by pulling it at its lower edge, as this could damage the interface at the rear.

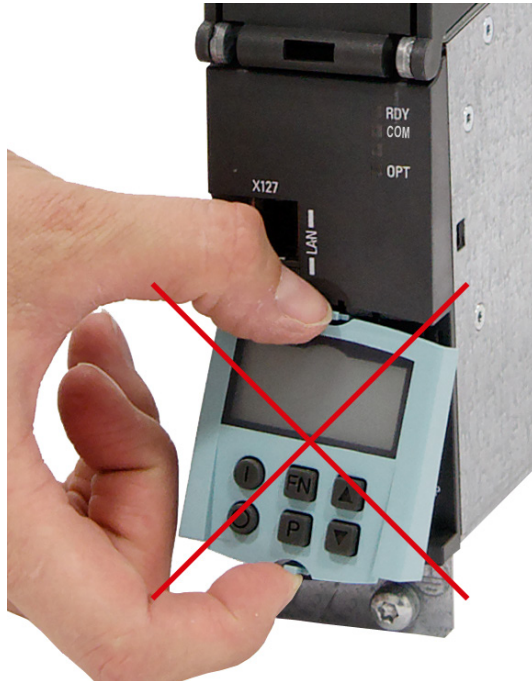



Figure 3-20 **Incorrect removal** of the BOP20 from a CU320-2 DP (example)

Option boards

4.1 Safety instructions for option boards

 WARNING
<p>Danger to life if the fundamental safety instructions and remaining risks are not carefully observed</p> <p>If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.</p> <ul style="list-style-type: none">• Adhere to the fundamental safety instructions.• When assessing the risk, take into account remaining risks.
NOTICE
<p>Damage or malfunctions to the Option Board by inserting and withdrawing in operation</p> <p>Withdrawing and inserting Option Boards during operation can damage them or cause the Option Boards to malfunction.</p> <ul style="list-style-type: none">• Only withdraw or insert Option Boards when the Control Unit is in a current-free state.

4.2 CAN Communication Board CBC10

4.2.1 Description

The Communication Board CAN CBC10 is a communication module for linking to the CAN bus. The Communication Board is inserted into the option slot on a Control Unit.

4.2.2 Interface description

4.2.2.1 Overview

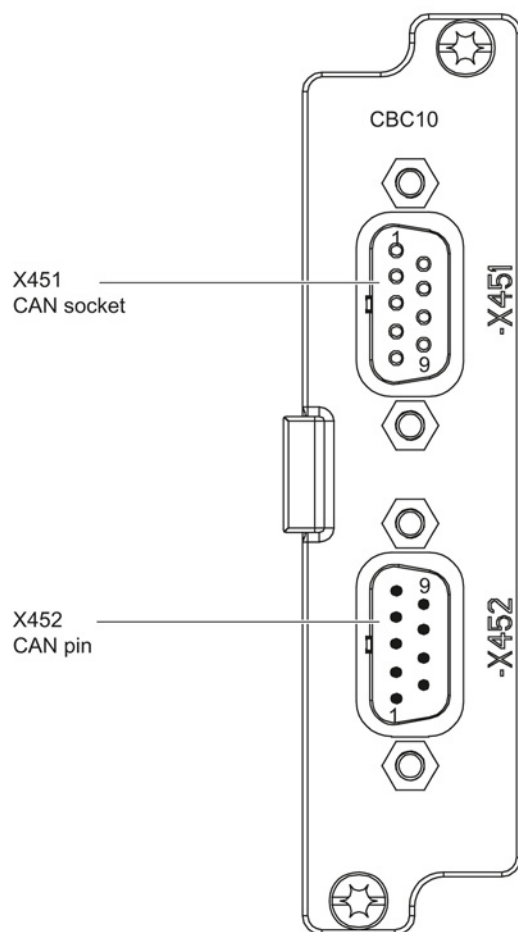
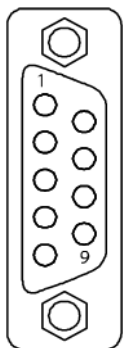


Figure 4-1 Interface overview of the CBC10

4.2.2.2 X451 CAN bus interface

Table 4- 1 X451: CAN bus interface

	Pin	Designation	Technical data
	1	Reserved, do not use	
	2	CAN_L	CAN signal (dominant low)
	3	CAN_GND	CAN ground
	4	Reserved, do not use	
	5	CAN_SHLD	Optional shield
	6	GND	CAN ground
	7	CAN_H	CAN signal
	8	Reserved, do not use	
	9	Reserved, do not use	
Type: SUB-D female, 9-pin			

NOTICE


Destruction of the CAN interface due to the wrong connector

If PROFIBUS connectors are connected to CAN bus interfaces during operation, this may lead to the CAN interfaces being destroyed.


- Do not connect PROFIBUS connectors to CAN bus interfaces.

4.2.2.3 X452 CAN bus interface X452

Table 4- 2 X452: CAN bus interface

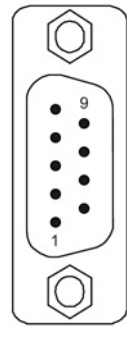	Pin	Designation	Technical data
	1	Reserved, do not use	
	2	CAN_L	CAN signal (dominant low)
	3	CAN_GND	CAN ground
	4	Reserved, do not use	
	5	CAN_SHLD	Optional shield
	6	GND	CAN ground
	7	CAN_H	CAN signal
	8	Reserved, do not use	
	9	Reserved, do not use	
Type: 9-pin SUB-D male			

4.2.2.4 2-pin SMD DIL switch

 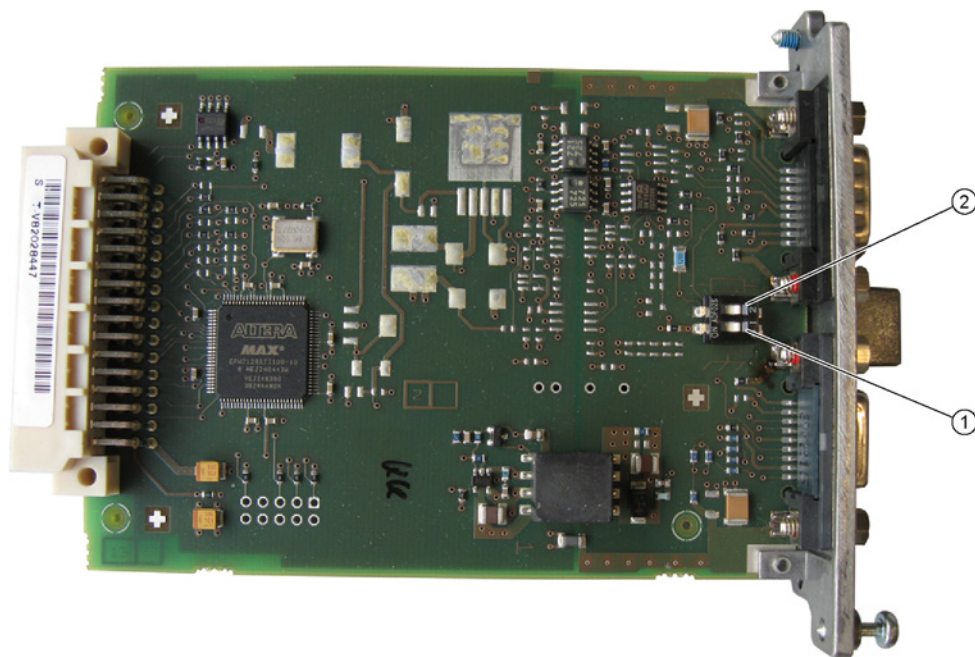



① Switch 1

② Switch 2

Figure 4-2 2-pin SMD DIL switch 1 and 2 on the CBC10

Table 4- 3 2-pin SMD DIL switch

ID on the component	Switch	Function	Switch position		Default
	2	Bus terminating resistor 120 Ω	OFF	Inactive	OFF
			ON	Active	
	1	Operation with/without ground	OFF	Ungrounded operation	OFF
			ON	Operation with ground	

4.2.3 Meaning of the LED

Table 4- 4 Meaning of the LED on the Communication Board CAN CBC10

LED	Color	Status	Description, cause	Remedy
OPT on the Control Unit	–	OFF	The electronics power supply is missing or outside the permissible tolerance range. Communication Board either defective or not inserted.	–
	Green	Continuous light	OPERATIONAL	–
		Flashing light	PREOPERATIONAL No PDO communication possible	–
		Single flash	STOPPED Only NMT communication possible	
	Red	Continuous light	BUS OFF	Check baud rate Check cabling
		Single flash	ERROR PASSIVE MODE The error counter for "error passive" has reached the value 127. After the SINAMICS drive system was booted no further active CAN component was on the bus.	Check baud rate Check cabling
		Double flash	Error Control Event, a Guard Event has occurred	Check connection to CANopen master

4.2.4 Installation

1. Release the appropriate screws to remove the cover plate from the option slot.
2. Insert the module into the option slot of the Control Unit and fix it in place using the screws.

Screws: M3

Tool: Torx T10 screwdriver

Tightening torque: 0.8 Nm

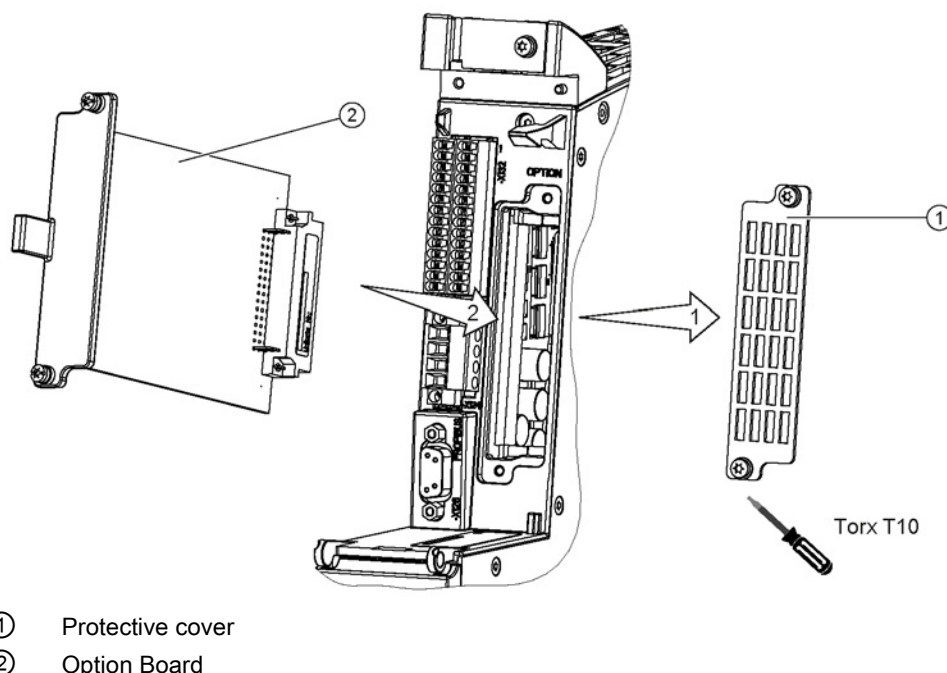


Figure 4-3 Installing an Option Board using a CU320-2 DP as an example

4.2.5 Technical data

Table 4- 5 Technical data

6SL3055-0AA00-2CAx	Unit	Value
Max. current requirements (at 24 V DC)	A _{DC}	0,1
Power loss	W	<10
Weight, approx.	kg	0,1

4.3 Communication Board Ethernet CBE20

4.3.1 Description

The SINAMICS S120 system can be connected to PROFINET using the Communication Board Ethernet CBE20 interface board. The module supports PROFINET IO with Isochronous Realtime Ethernet (IRT) and PROFINET IO with RT.

The Communication Board has an Ethernet interface with 4 ports for communication. It is inserted into the option slot on a Control Unit.

Note

Only one communication interface can be used in isochronous operation when operating the Communication Board CBE20 in a Control Unit CU320-2. For the CU320-2 DP, this is either the DP interface of the Control Unit or the PN interfaces of the CBE20.

For the CU320-2 PN, either the internal PN interfaces or the external PN interfaces of the CBE20 are used in isochronous operation.

4.3.2 Interface description

4.3.2.1 Overview

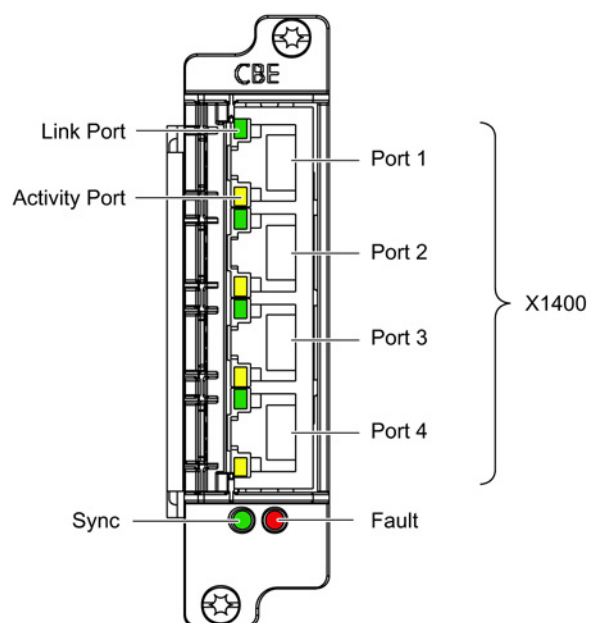
 


Figure 4-4 Interface overview CBE20

4.3.2.2 X1400 Ethernet interface

Table 4- 6 X1400: Ethernet, ports 1-4

	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	TXP	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened backshell	M_EXT	Screen, permanently connected
Connector type	RJ45 socket		

For diagnostic purposes, the ports have one green and one yellow LED (refer to Meaning of the LEDs (Page 105) for descriptions)

Cable type: Industrial Ethernet

Max. cable length: 100 m

4.3.3 Meaning of the LEDs

Meaning of the LEDs on the CBE20 Communication Board Ethernet

Table 4- 7 Meaning of the LEDs at ports 1 to 4 of the X1400 interface

LED	Color	Status	Description
Link port	–	Off	The electronics power supply is missing or outside the permissible tolerance range (link missing or defective).
	Green	Continuous light	A different device is connected to port x and a physical connection exists.
Activity port	–	Off	The electronics power supply is missing or outside the permissible tolerance range (no activity).
	Yellow	Flashing light	Data is being received or sent at port x.

Table 4- 8 Meaning of the Sync and Fault LEDs on the CBE20

LED	Color	Status	Description
Fault	–	Off	If the link port LED is green: The CBE20 is operating normally, data is being exchanged with the configured IO Controller.
	Red	Flashing light	<ul style="list-style-type: none"> The response monitoring interval has elapsed. Communications is interrupted. The IP address is incorrect. Incorrect or no configuration. Incorrect parameter settings. Incorrect or missing device name. IO Controller not connected/switched off, although an Ethernet connection has been established. Other CBE20 faults
		Continuous light	CBE20 fault error <ul style="list-style-type: none"> No physical connection to a subnet/switch. Incorrect transmission rate Full duplex transmission is not activated.
Sync	–	Off	If the link port LED is green: The Control Unit task system is not synchronized with the IRT clock. An internal substitute clock is generated.
	Green	Flashing light	The Control Unit task system has synchronized with the IRT clock and data is being exchanged.
		Continuous light	The Task system and the MC-PLL have synchronized with the IRT clock.

Table 4- 9 Meaning of the OPT LED on the Control Unit

LED	Color	Status	Description, cause	Remedy
OPT	–	OFF	The electronics power supply is missing or outside the permissible tolerance range. Communication Board either defective or not inserted.	–
	Green	Continuous light	Communication Board is ready and cyclic communication is taking place.	–
		Flashing light 0.5 Hz	The Communication Board is ready, but cyclic communications is not running. Possible causes: <ul style="list-style-type: none"> At least one fault is present. Communication is being established. 	–
	Red	Continuous light	Cyclic communication via PROFINET has not yet been established. However, non-cyclic communications are possible. SINAMICS waits for a parameterizing/configuring telegram	–
		Flashing light 0.5 Hz	The firmware update into the CBE20 has been completed with an error. Possible causes: <ul style="list-style-type: none"> The CBE20 is defective. The memory card for the Control Unit is defective. In this state CBE20 cannot be used.	–
		Flashing light 2 Hz	There is a communications error between the Control Unit and the CBE20. Possible causes: <ul style="list-style-type: none"> Board was withdrawn after booting. The board is defective 	Correctly insert the board, if required, replace.
	Orange	Flashing light 0.5 Hz	Firmware is being updated.	–

4.3.4 Installation

1. Release the appropriate screws to remove the cover plate from the option slot.
2. Insert the module into the option slot of the Control Unit and fix it in place using the screws.

Screws: M3

Tool: Torx T10 screwdriver

Tightening torque: 0.8 Nm

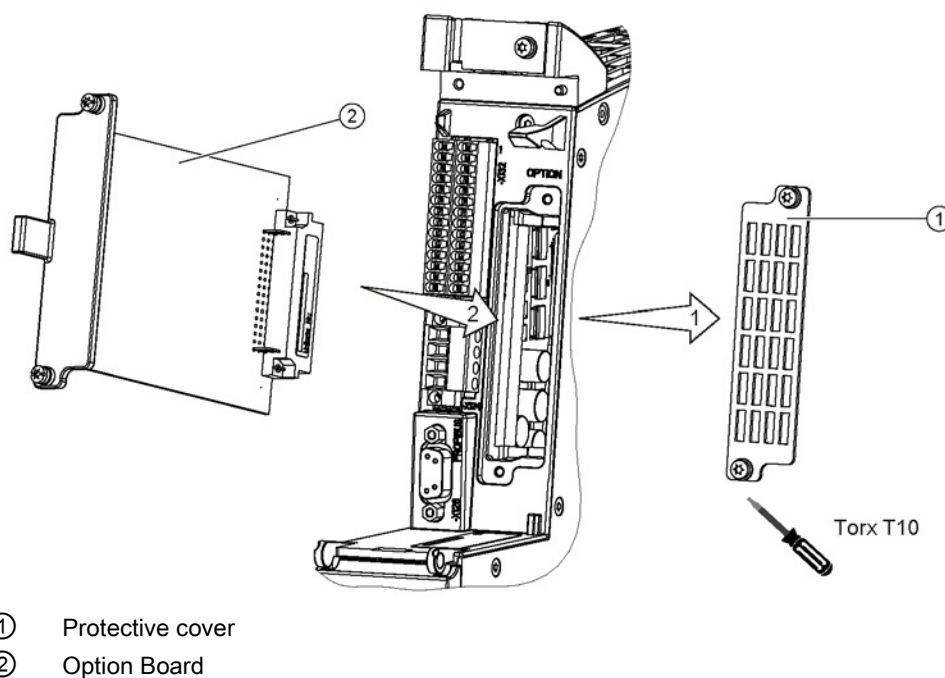


Figure 4-5 Installing the Option Board using a CU320-2 DP as an example

4.3.5 Technical data

Table 4- 10 Technical data

Communication Board CBE20 6SL3055-0AA00-2EBx	Unit	Value
Max. current requirements (at 24 V DC)	A _{DC}	0.1
Power loss	W	2,4
Weight	kg	<0,1

4.4 Communication Board Ethernet CBE25

4.4.1 Description

The Communication Board Ethernet CBE25 interface board connects the SINAMICS S120 system with PROFINET. All PROFINET conformance classes along with the "high-performance" application class are supported with this. This allows cycle times of up to 125 µs and a higher packing density for the frames.

The CBE25 is inserted into the option slot on a Control Unit. It has an Ethernet interface with 2 ports.

Note

Only one communication interface can be used in isochronous operation when operating the Communication Board CBE25 in a Control Unit CU320-2. For the CU320-2 DP, this is either the DP interface of the Control Unit or the PN interfaces of the CBE25.

For the CU320-2 PN, either the internal PN interfaces or the external PN interfaces of the CBE25 are used in isochronous operation.

Table 4- 11 CBE20 and CBE25 compared

	CBE20	CBE25
Number of Ethernet ports (RJ45)	4	2
Ethernet Controller	ERTEC 400	ERTEC 200P
Minimum cycle time	250 µs	125 µs
Power loss Typical Maximum	2.4 W 4.1 W	2.3 W 3.5 W
Special functions	PN gate, SINAMICS Link, Ethernet/IP (adapter)	---

4.4.2 Interface description

4.4.2.1 Overview

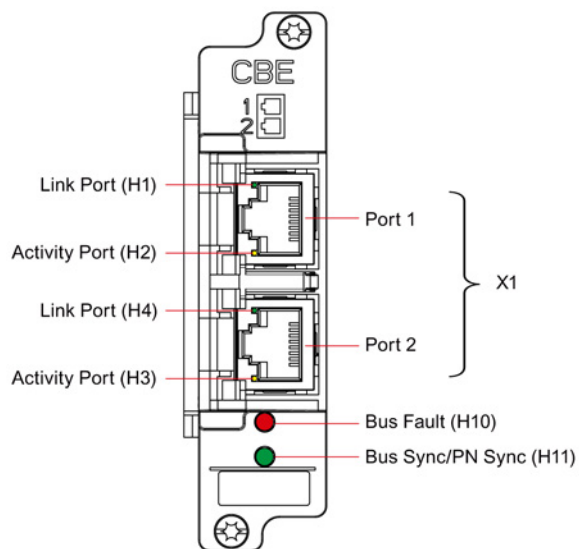


Figure 4-6 Interface overview CBE25

4.4.2.2 Ethernet interface

Table 4- 12 Ethernet, Port 1 (the signals are cross-connected)

 
 
	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	TXP	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened backshell	M_EXT	Screen, permanently connected
Connector type	RJ45 socket		

Table 4- 13 Ethernet, Port 2 (the signals are connected 1:1)

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened backshell	M_EXT	Screen, permanently connected
Connector type	RJ45 socket		

For diagnostic purposes, the ports have one green and one yellow LED (refer to "Meaning of the LEDs on the Communication Board Ethernet CBE25 (Page 111)" for descriptions)

Cable type: Industrial Ethernet

Max. cable length: 100 m

4.4.3 Meaning of the LEDs

Meaning of the LEDs on the Communication Board Ethernet CBE25

Table 4- 14 Meaning of the LEDs on Ethernet ports 1-2

LED	Color	State	Description
Link port	–	Off	Electronics power supply is missing or outside the permissible tolerance range (link missing or defective).
	Green	Continuous light	A different device is connected to port x and a physical connection exists.
Activity port	–	Off	Electronics power supply is missing or outside the permissible tolerance range (no activity).
	Yellow	Flashing light	Data is being received or sent at port x.

Table 4- 15 Meaning of the Bus Sync/PN Sync and Bus Fault on the CBE25

LED	Color	State	Description
Bus Fault	–	Off	If the link port LED is green: The CBE25 is operating normally, data is being exchanged with the configured IO Controller.
	Red	Flashing light	<ul style="list-style-type: none"> The response monitoring interval has elapsed. Communications is interrupted. The IP address is incorrect. Incorrect or no configuration. Incorrect parameter settings. Incorrect or missing device name. IO Controller not connected/switched off, although an Ethernet connection has been established. Other CBE25 errors
		Continuous light	CBE25 bus fault <ul style="list-style-type: none"> No physical connection to a subnet/switch. Incorrect transmission rate Full duplex transmission is not activated.
Bus Sync/PN Sync	–	Off	If the link port LED is green: The Control Unit task system is not synchronized with the IRT clock. An internal substitute clock is generated.
	Green	Flashing light	The Control Unit task system has synchronized with the IRT clock and data is being exchanged.
		Continuous light	The Task system and the MC-PLL have synchronized with the IRT clock.

Table 4- 16 Meaning of the OPT LED on the Control Unit

LED	Color	State	Description, cause	Remedy
OPT	–	OFF	The electronics power supply is missing or outside the permissible tolerance range. Communication Board either defective or not inserted.	–
	Green	Continuous light	Communication Board is ready and cyclic communication is taking place.	–
		Flashing light 0.5 Hz	The Communication Board is ready, but cyclic communications is not running. Possible causes: <ul style="list-style-type: none"> • Communication is being established. • At least one fault is present. 	–
	Red	Continuous light	Cyclic communication via PROFINET has not yet been established. However, non-cyclic communications are possible. SINAMICS waits for a parameterizing/configuring telegram	–
		Flashing light 0.5 Hz	The firmware update into the CBE25 has been completed with an error. Possible causes: <ul style="list-style-type: none"> • The CBE25 is defective. • The memory card for the Control Unit is defective. In this state the CBE25 cannot be used.	–
		Flashing light 2 Hz	There is a communications error between the Control Unit and the CBE25. Possible causes: <ul style="list-style-type: none"> • The CBE25 is defective. • The CBE25 was withdrawn after booting. 	Correctly insert the board, if required, replace.
	Orange	Flashing light 0.5 Hz	Firmware is being updated.	–


4.4.4 Installation

1. Release the appropriate screws to remove the cover plate from the option slot.
2. Insert the module into the option slot of the Control Unit and fix it in place using the screws.

Screws: M3

Tool: Torx T10 screwdriver

Tightening torque: 0.8 Nm

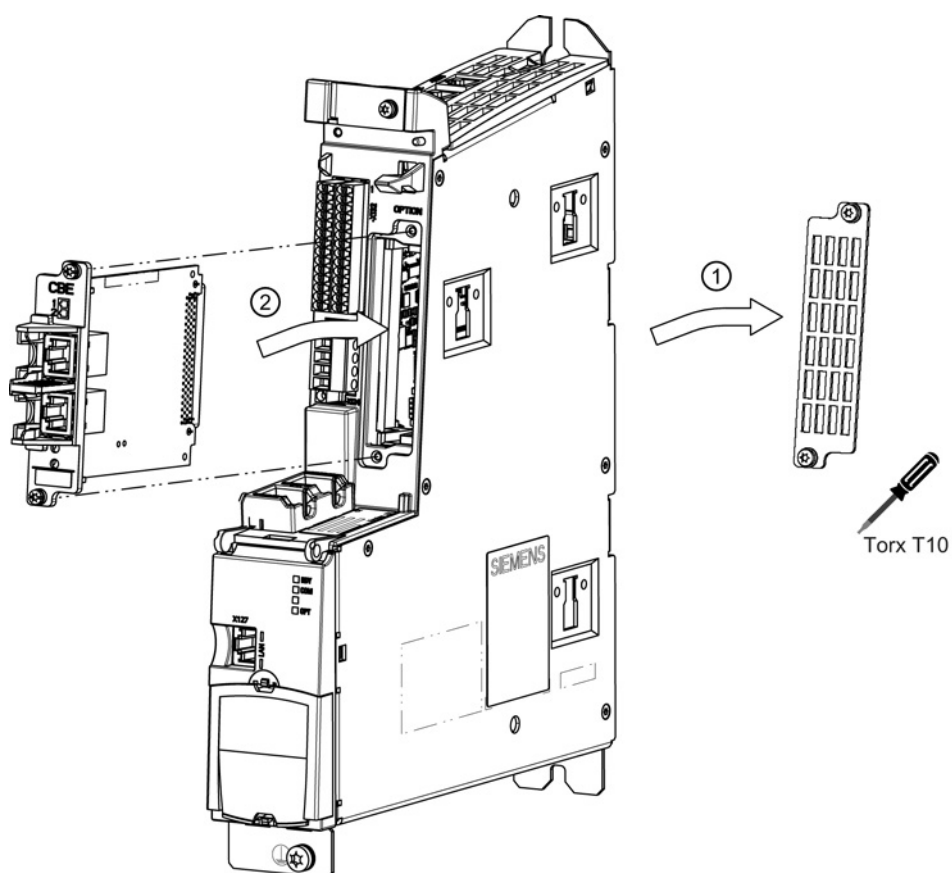

- ① Remove the protective cover.
- ② Insert the CBE25 and screw it down

Figure 4-7 Installing the CBE25 Option Board in a CU320-2 PN

4.4.5 Technical data

Table 4- 17 Technical data

Communication Board CBE25 6SL3055-0AA00-2FB0	Unit	Value
Max. current requirements (at 24 V DC)	A _{DC}	0,1
Power loss		
Typical	W	2,3
Maximum	W	3,6
Cycle time	µs	125
Memory		
SDRAM	MB	128
Burst Mode Flash	MB	32
Dimensions	mm	95 x 148.1 x 25.1
Weight	kg	0,112

4.5 Terminal Board TB30

4.5.1 Description

The TB30 Terminal Board is a terminal expansion module that is inserted in the option slot of the Control Unit.

The TB30 Terminal Board has the following terminals:

Table 4- 18 Interface overview

Type	Quantity
Digital inputs	4
Digital outputs	4
Analog inputs	2
Analog outputs	2

4.5.2 Interface description

4.5.2.1 Overview

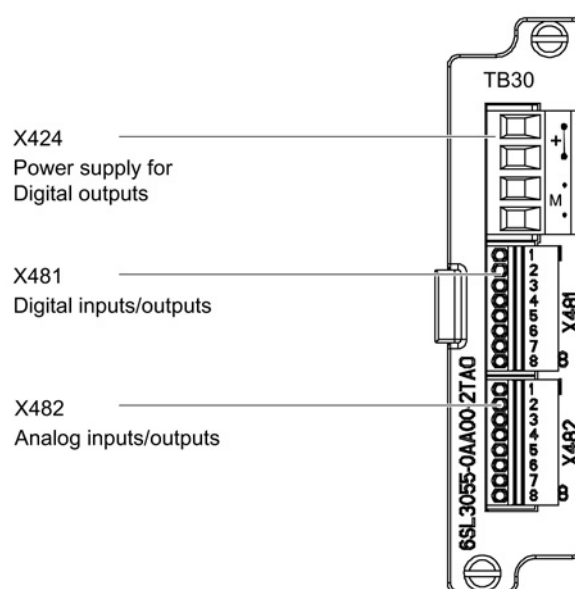
 


Figure 4-8 Interface overview of the TB30

4.5.2.2 X424 power supply, digital outputs

Table 4- 19 X424: Power supply

	Terminal	Designation	Technical data
	+	Power supply	Voltage: 24 V DC (20.4 ... 28.8 V)
	+	Power supply	Current consumption: Max. 4 A (per digital output max. 0.5 A)
	M	Ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

This power supply is required for the digital outputs only.

The electronics power supply and the power supply for the analog inputs/outputs are taken from the option slot of the Control Unit.

Note

The power supply of the digital outputs and the electronics power supply of the Control Unit are isolated.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

4.5.2.3 X481 digital inputs/outputs

Table 4- 20 X481: Digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: - 3 ... 30 V
	2	DI 1	Current consumption, typical: 10 mA at 24 V DC
	3	DI 2	Ground reference: X424.M
	4	DI 3	Input delay: For "0" to "1": 20 µs for "1" to "0": 100 µs
			Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... 5 V
	5	DO 0	Voltage: 24 V DC
	6	DO 1	Max. load current per output: 500 mA
7	DO 2	Ground reference: X424.M	
8	DO 3	Continuous short-circuit proof	
		Output delay: For "0" to "1": typ. 150 µs at 0.5 A resistive load (500 µs maximum) For "1" to "0": Typically 50 µs at 0.5 A resistive load	
			Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W

Type: Spring-loaded terminal 1 (Page 359)
Max. cross-section that can be connected: 0.5 mm²

¹⁾ DI: digital input, DO: digital output

Note

An open input is interpreted as "low".

 
The power supply and the digital inputs/outputs are isolated with respect to the Control Unit.

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

4.5.2.4 X482 analog inputs/outputs

Table 4- 21 X482: Analog inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	AI 0+	Analog inputs (AI)
	2	AI 0-	Voltage: -10 ... +10 V; R _i : 65 kΩ
	3	AI 1+	Common-mode range: ±30 V
	4	AI 1-	Resolution: 13 bits + sign
	5	AO 0+	Analog outputs (AO)
	6	AO 0-	Voltage range: -10 ... +10 V
	7	AO 1+	Load current: max. -3 ... +3 mA
	8	AO 1-	Resolution: 11 bit + signed Continuous short-circuit proof
Type: Spring-loaded terminal 1 (Page 359) Max. cross-section that can be connected: 0.5 mm ²			

¹⁾ AI: analog input, AO: analog output

Note**Permissible voltage values**

In order to avoid incorrect results of the analog-digital conversion, the analog differential voltage signals can have a maximum offset voltage of +/-30 V with respect to ground potential.

Note

An open input is interpreted as approximately "0 V".

The power supply of the analog inputs/outputs is taken from the option slot of the Control Unit and not from X424.

The shield is connected to the Control Unit (see Shield support (Page 121)).

Connecting the analog inputs

The following document contains more information about analog inputs:

SINAMICS S120 Commissioning Manual (IH1)

4.5.3 Connection example

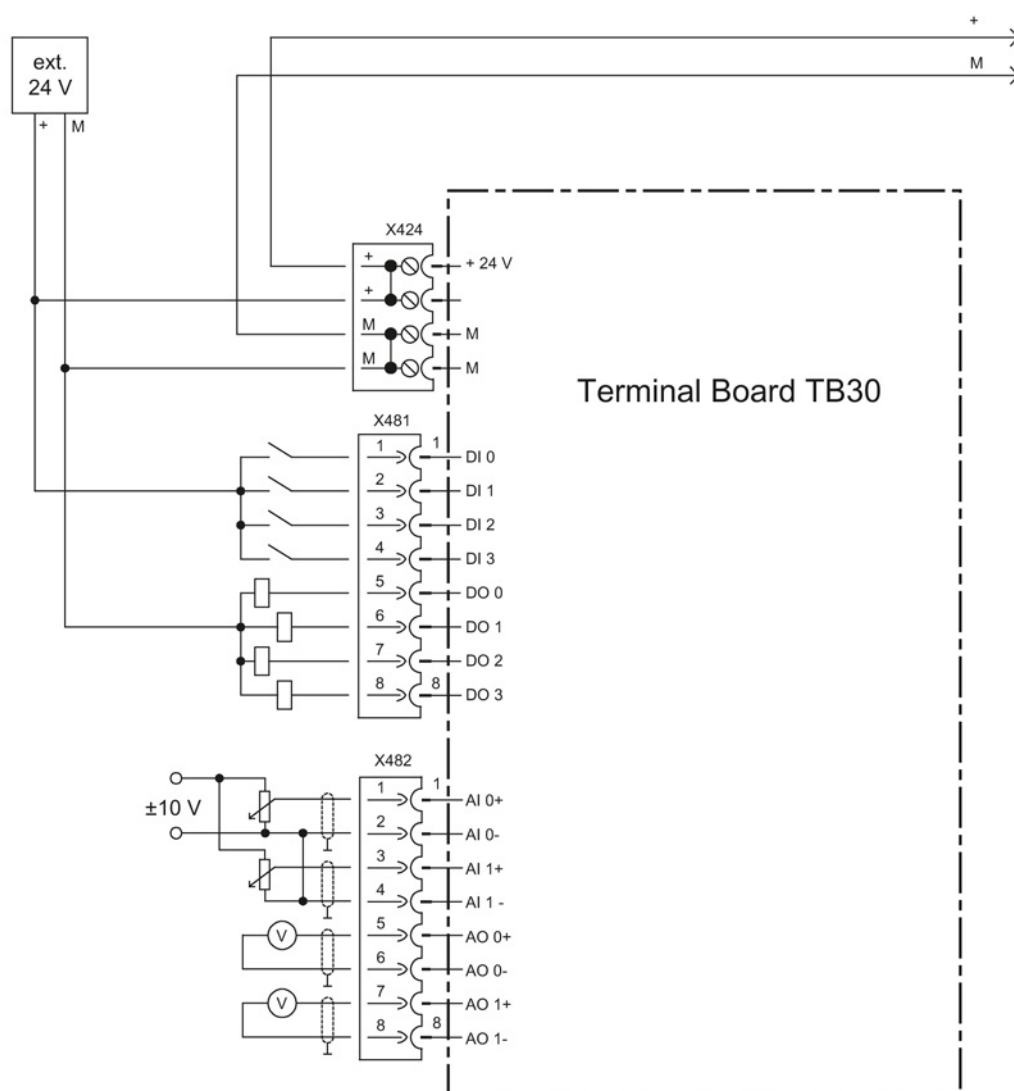


Figure 4-9 Example connection of TB30

4.5.4 Installation

1. Release the screws and remove the protective cover from the Control Unit.
2. Place the Option Board into the slot on the Control Unit and fix it in place using the screws.

Screws: M3

Tool: Torx T10 screwdriver

Tightening torque: 0.8 Nm

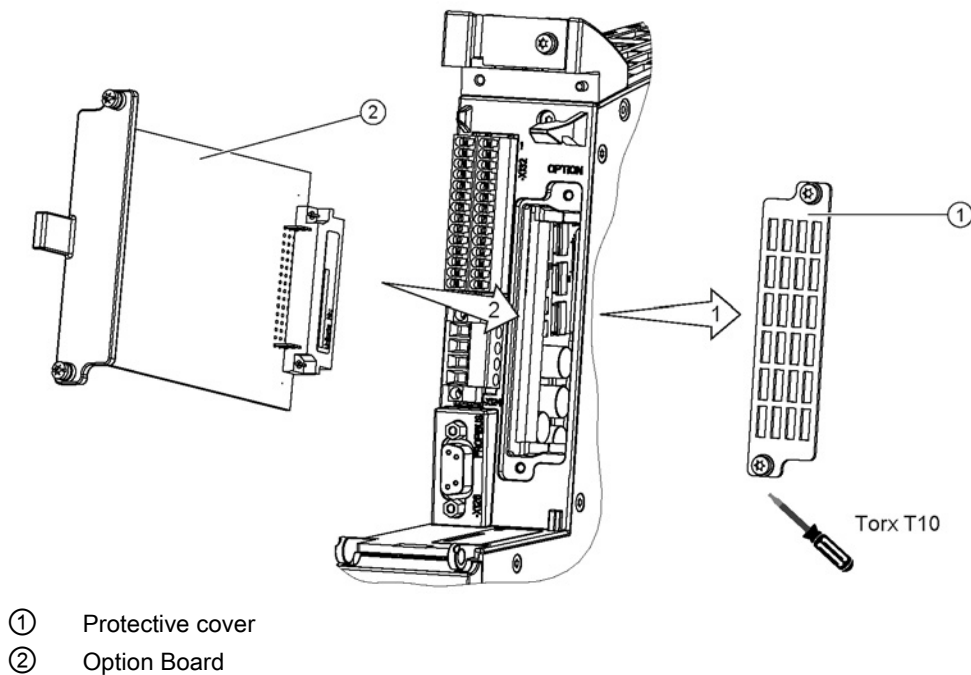


Figure 4-10 Installing an Option Board using a CU320-2 DP as an example

4.5.5 Shield support

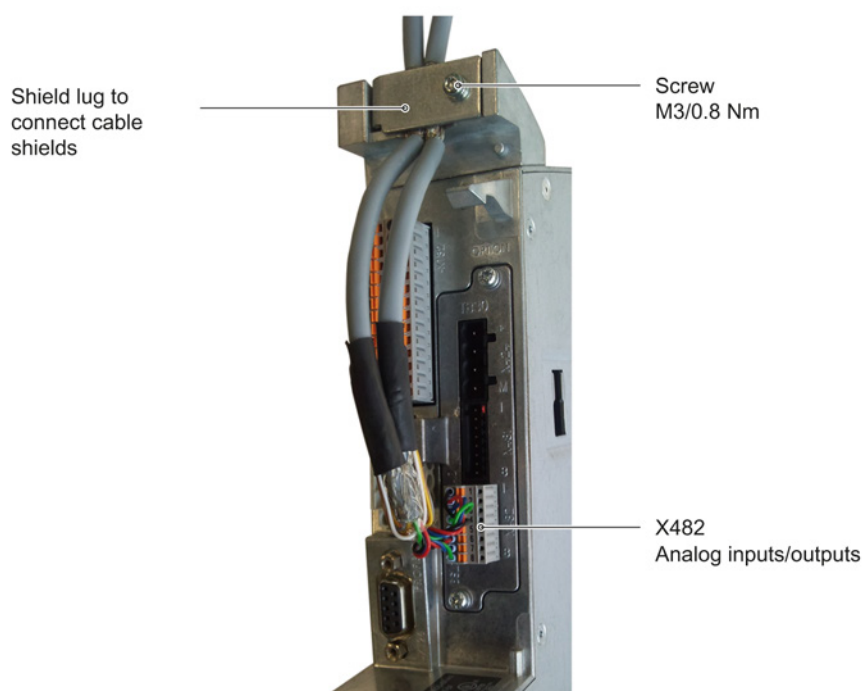


Figure 4-11 Shield support for TB30 on the CU320-2 DP

The permissible bending radii for the cables must not be exceeded when the cables are being installed.

4.5.6 Technical data

Table 4- 22 Technical data

3SL3055-0AA00-2TAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current via the option slot of the CU (without digital outputs)	A _{DC}	0,05
Power loss	W	<3
Response time	The response time of the digital inputs/outputs and the analog inputs/outputs depends on the evaluation on the Control Unit (see function diagram). Further information: SINAMICS S120/S150 List Manual (LH1), Chapter "Function block diagrams"	
Weight	kg	0,1

Terminal Modules

5.1 Safety instructions for Terminal Modules

WARNING

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

WARNING

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and reduced service lives of the Terminal Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Terminal Module.

NOTICE

Device failure as a result of unshielded or incorrectly routed cables to temperature sensors

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential through a large surface area.
- Recommendation: Use suitable Motion Connect cables.

NOTICE**Damage through use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note**Function equipotential bonding for distributed DRIVE-CLiQ nodes**

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. This applies to all distributed DRIVE-CLiQ nodes such as DM20, SME2x, SME12x, etc.

5.2 Terminal Module TM15

5.2.1 Description

The Terminal Module TM15 is a terminal expansion for snapping on to an EN 60715 DIN rail. The TM15 can be used to increase the number of available digital inputs/outputs within a drive system.

Table 5- 1 Interface overview of the TM15

Type	Quantity
DRIVE-CLiQ interfaces	2
Bidirectional digital inputs/outputs	24 (isolation in 3 groups each with 8 DI/DO)

5.2.2 Interface description

5.2.2.1 Overview

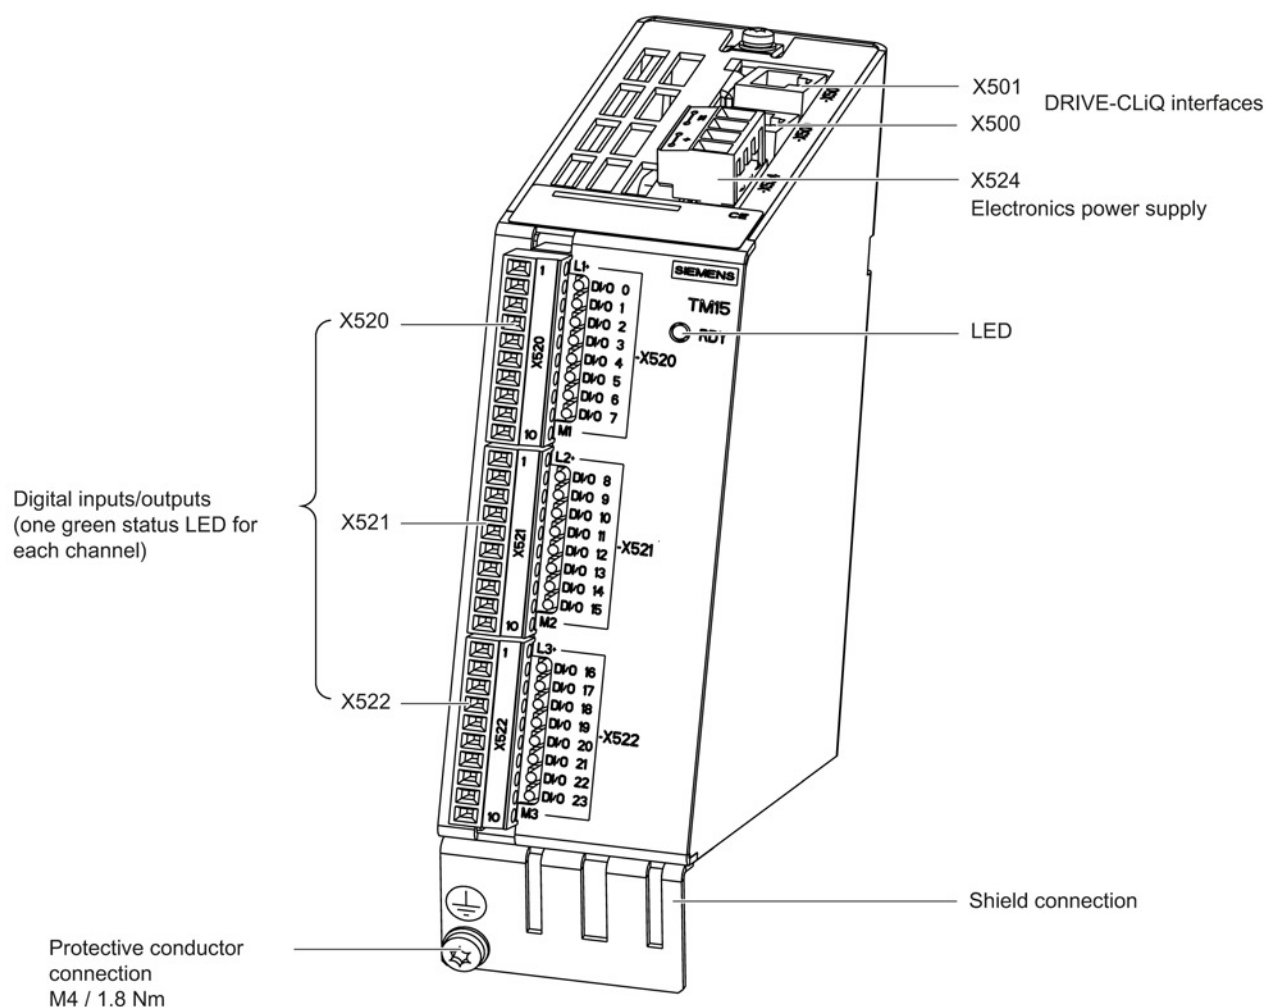
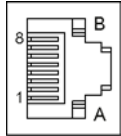


Figure 5-1 TM15 interface overview

5.2.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 2 X500/X501: DRIVE-CLiQ interfaces


	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

5.2.2.3 X520 bidirectional digital inputs/outputs


Table 5- 3 X520: Digital inputs/outputs

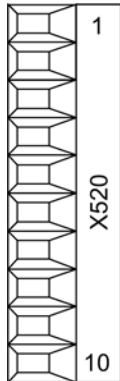	Terminal	Designation ¹⁾	Technical data
	1	L1+	See Chapter, Technical data (Page 136).
	2	DI/DO 0	
	3	DI/DO 1	
	4	DI/DO 2	
	5	DI/DO 3	
	6	DI/DO 4	
	7	DI/DO 5	
	8	DI/DO 6	
	9	DI/DO 7	
	10	M1 (GND)	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²			

- ¹⁾ L1+: A 24 V DC power supply for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as output.
 M1: A ground reference for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.
 DI/DO: bidirectional digital input/output

5.2.2.4 X521 bidirectional digital inputs/outputs

 
Table 5- 4 X521: Digital inputs/outputs

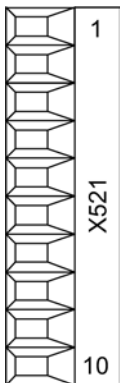	Terminal	Designation ¹⁾	Technical data
	1	L2+	See Chapter, Technical data (Page 136).
	2	DI/DO 8	
	3	DI/DO 9	
	4	DI/DO 10	
	5	DI/DO 11	
	6	DI/DO 12	
	7	DI/DO 13	
	8	DI/DO 14	
	9	DI/DO 15	
	10	M2 (GND)	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

- ¹⁾ L2+: A 24 V DC power supply for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as output.
 M2: A ground reference for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.
 DI/DO: bidirectional digital input/output

5.2.2.5 X522 bidirectional digital inputs/outputs

Table 5- 5 X522: Digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	L3+	See Chapter, Technical data (Page 136).
	2	DI/DO 16	
	3	DI/DO 17	
	4	DI/DO 18	
	5	DI/DO 19	
	6	DI/DO 20	
	7	DI/DO 21	
	8	DI/DO 22	
	9	DI/DO 23	
	10	M3 (GND)	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

 
¹⁾ L3+: A 24 V DC power supply for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as output.

M3: A ground reference for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.

DI/DO: Bidirectional digital input/output

5.2.2.6 X524 Electronics power supply

Table 5- 6 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.15 A Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Electronics power supply	
	M	Electronics ground	
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ participants.
 The digital outputs are supplied via terminals X520, X521 and X522.

5.2.3 Connection example

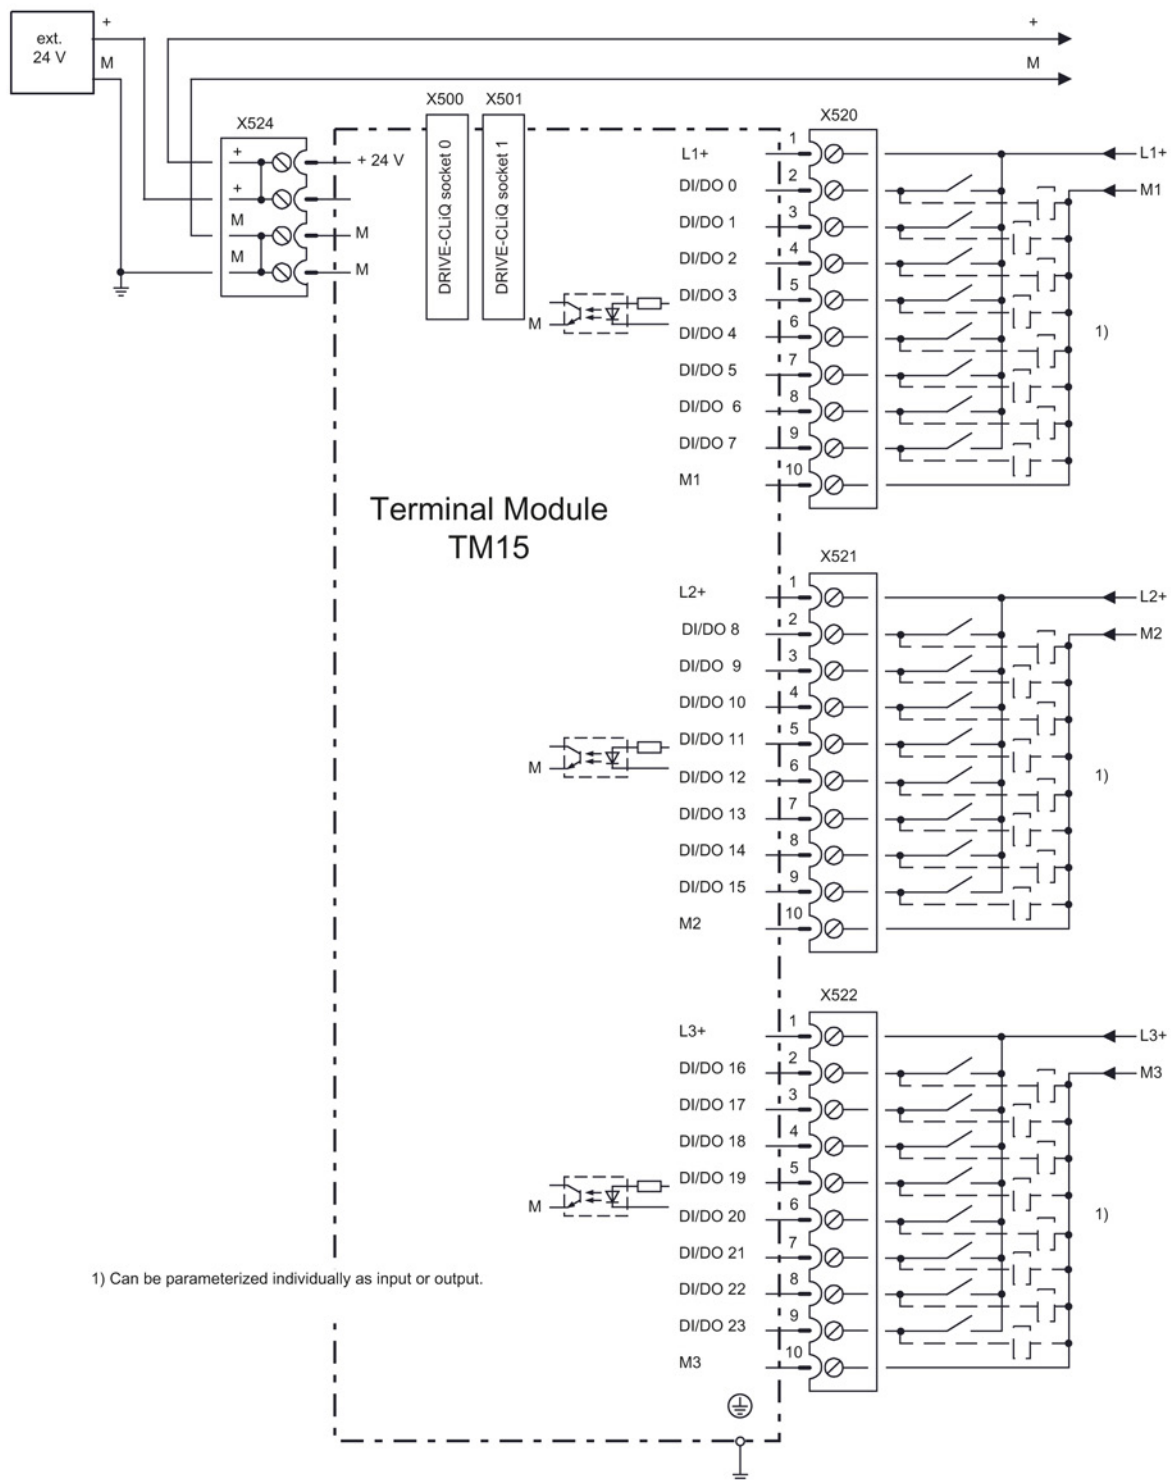


Figure 5-2 Example connection of TM15

5.2.4 Meaning of the LED

Table 5- 7 Meanings of the LEDs on the Terminal Module TM15

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.2.5 Dimension drawing

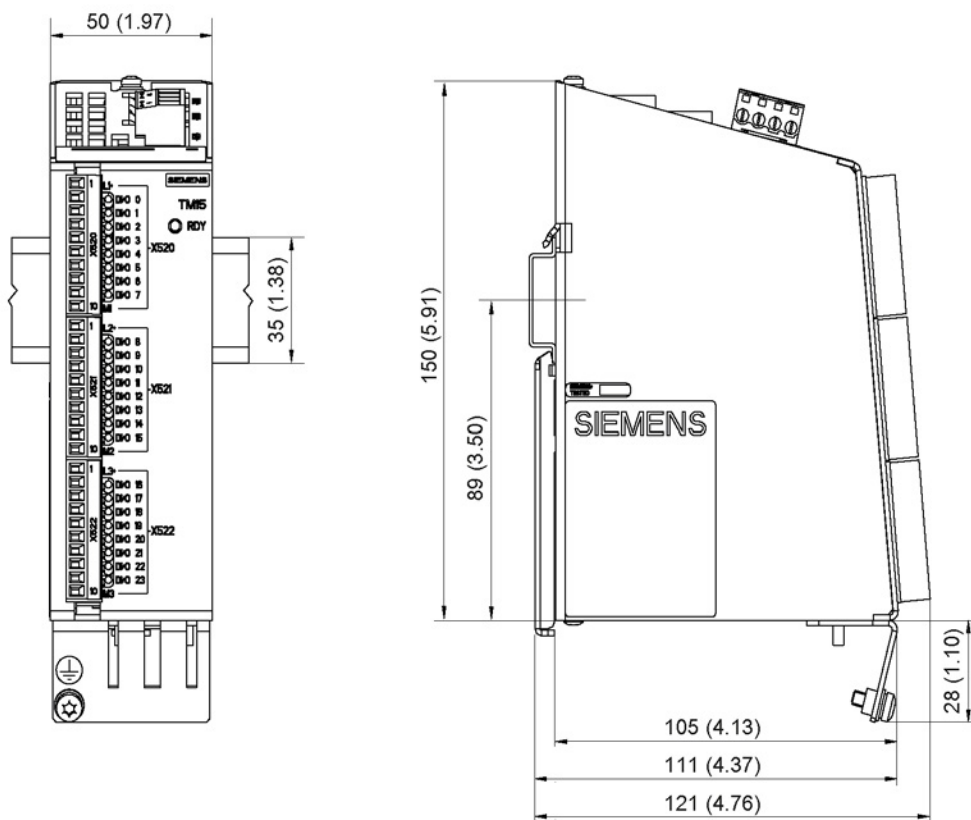


Figure 5-3 Dimension drawing of Terminal Module TM15, all data in mm and (inches)

5.2.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.


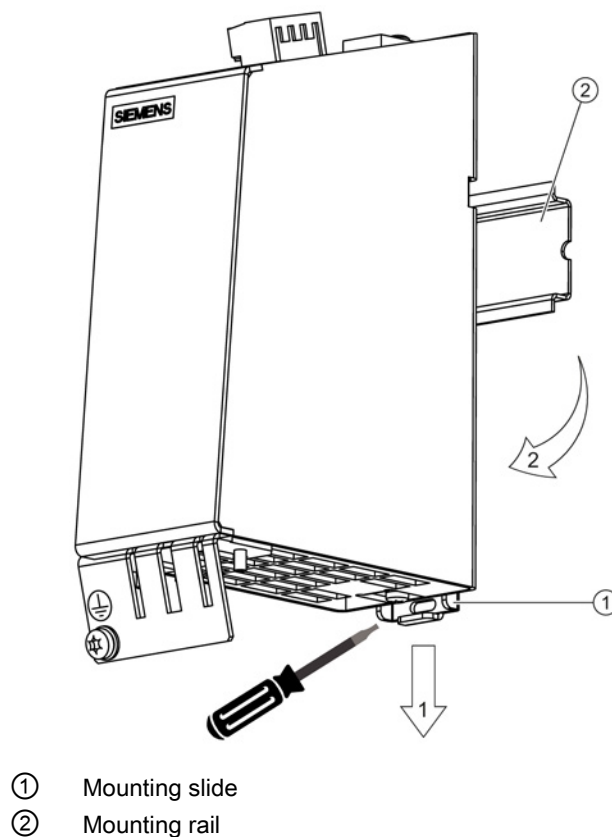


Figure 5-4 Removing from a DIN mounting rail

5.2.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

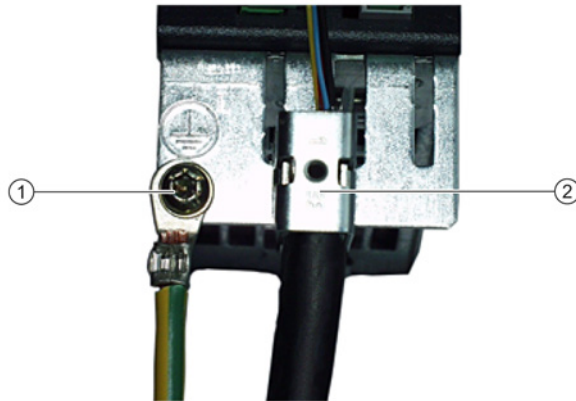

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-5 Shield support and protective conductor connection

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.


The TM15 housing is connected to the ground terminal of the module supply (terminal X524). If the ground terminal is actually grounded, then the housing is also grounded. An additional ground connection using the M4 screw is especially necessary if high potential bonding currents can flow (e.g. through the cable shield).

5.2.8 Connector coding

A series of coding elements ("coding sliders") are supplied with each Terminal Module TM15.

Connector coding

1. Insert at least one coding slider at the required position.
2. Remove the associated coding lug at the connector.

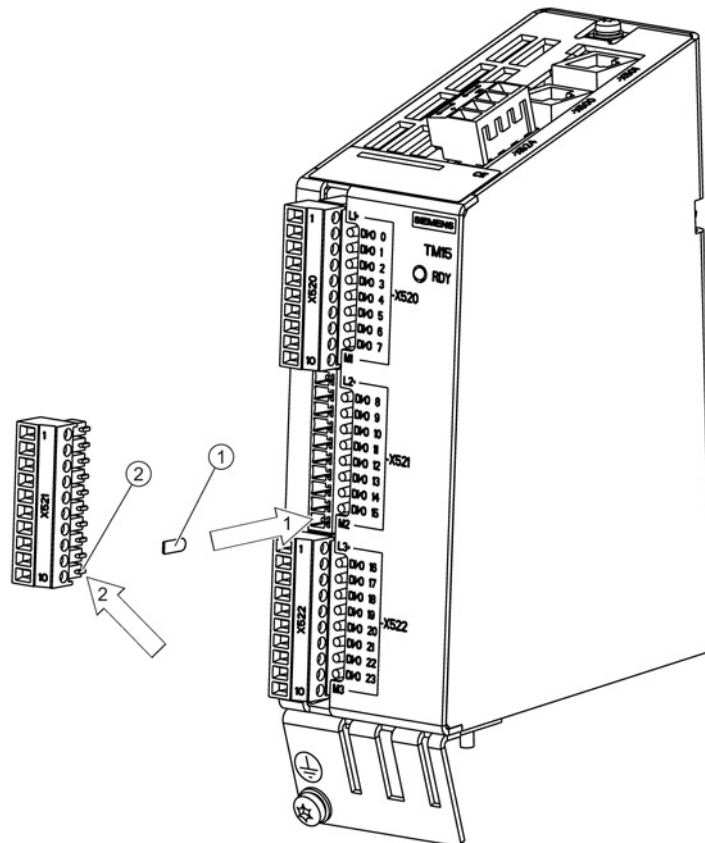

- ① Coding slider
② Coding lug at the connector to be removed

Figure 5-6 Connector coding using the example of interface X521

To avoid wiring errors, unique coding patterns must be defined for the connectors X520, X521 and X522.

Possible patterns:

- 3 connectors on one component are encoded differently (i.e. X520, X521 and X522).
- Different component types are encoded differently.
- Identical components on the same machine are encoded differently, e.g. several TM15-type components.

5.2.9 Technical data

Table 5- 8 Technical data

6SL3055-0AA00-3FAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ or digital outputs)	A _{DC}	0,15
Power loss	W	< 3
Ambient temperature up to an altitude of 2,000 m	°C	0 ... 60
Storage temperature	°C	-40 ... +85
Relative humidity	5 ... 95 %, no condensation	
I/O		
Digital inputs/outputs	Can either be parameterized as DI or DO	
Number of digital inputs/outputs	24	
Electrical isolation	Yes, in groups of 8	
Max. cable length	m	30
Digital inputs		
Voltage	V _{DC}	-30 ... +30
Low-level (an open digital input is interpreted as "low")	V _{DC}	-30 ... +5
High level	V _{DC}	15 ... 30
Input Impedance	kΩ	2,8
Current consumption (at 24 V DC)	mA	11
Max. voltage in OFF state	V _{DC}	5
Current in OFF state	mA	0.0 ... 1.0 (per channel)
Typical input delay of the digital inputs	μs	"0" → "1": 50 "1" → "0": 100
Digital outputs (continued-short-circuit-proof)		
Voltage	V _{DC}	24
Max. load current per digital output	A _{DC}	0,5
Output delay (ohmic load)		
Typical	μs	"0" → "1": 50 "1" → "0": 150
Maximum	μs	"0" → "1": 100 "1" → "0": 225
Min. output pulse (100% amplitude, 0.5 A with resistive load)	μs	125 (typ.) 350 (max.)
Switching frequency		
For resistive load	Hz	Max. 100
For inductive load	Hz	Max. 0.5
For lamp load	Hz	Max. 10
Maximum lamp load	W	5
Max. switching frequency (100% amplitude, 50%/50% duty cycle; with 0.5 A and a resistive load)	kHz	1 (typ.)

6SL3055-0AA00-3FAx	Unit	Value
Voltage drop in ON state	V _{DC}	0.75 (max.) for maximum load in all circuits
Leakage current in OFF state	μA	Max. 10 per channel
Voltage drop, output (I/O power supply to the output)	V _{DC}	0,5
Max. total current of outputs (per group) up to 60°C up to 50°C up to 40°C	A _{DC} A _{DC} A _{DC}	2 3 4
Response time	<p>The response time of the digital inputs/outputs comprises the following:</p> <ul style="list-style-type: none"> • Response time on the component itself (approx. 1/2 DRIVE-CLiQ cycle). • Transfer time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ cycle). • Evaluation on the Control Unit (see function diagram) <p>Further information: SINAMICS S120/S150 List Manual (LH1), Chapter "Function block diagrams"</p>	
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,86
Degree of protection	IP20	
Approbation	UL and cULus (http://www.ul.com) File: E164110, Vol. 2, Sec. 9	

5.3 Terminal Module TM31

5.3.1 Description

The Terminal Module TM31 is a terminal expansion that is snapped onto a EN 60715 standard mounting rail. Terminal Module TM31 can be used to increase the number of available digital inputs/digital outputs and also the number of analog inputs/analog outputs within a drive system.

The TM31 contains the following interfaces:

Table 5- 9 Interface overview of the TM31

Type	Quantity
DRIVE-CLiQ interfaces	2
Digital inputs	8
Bidirectional digital inputs/outputs	4
Analog inputs	2
Analog outputs	2
Relay outputs	2
Temperature sensor input	1

5.3.2 Interface description

5.3.2.1 Overview

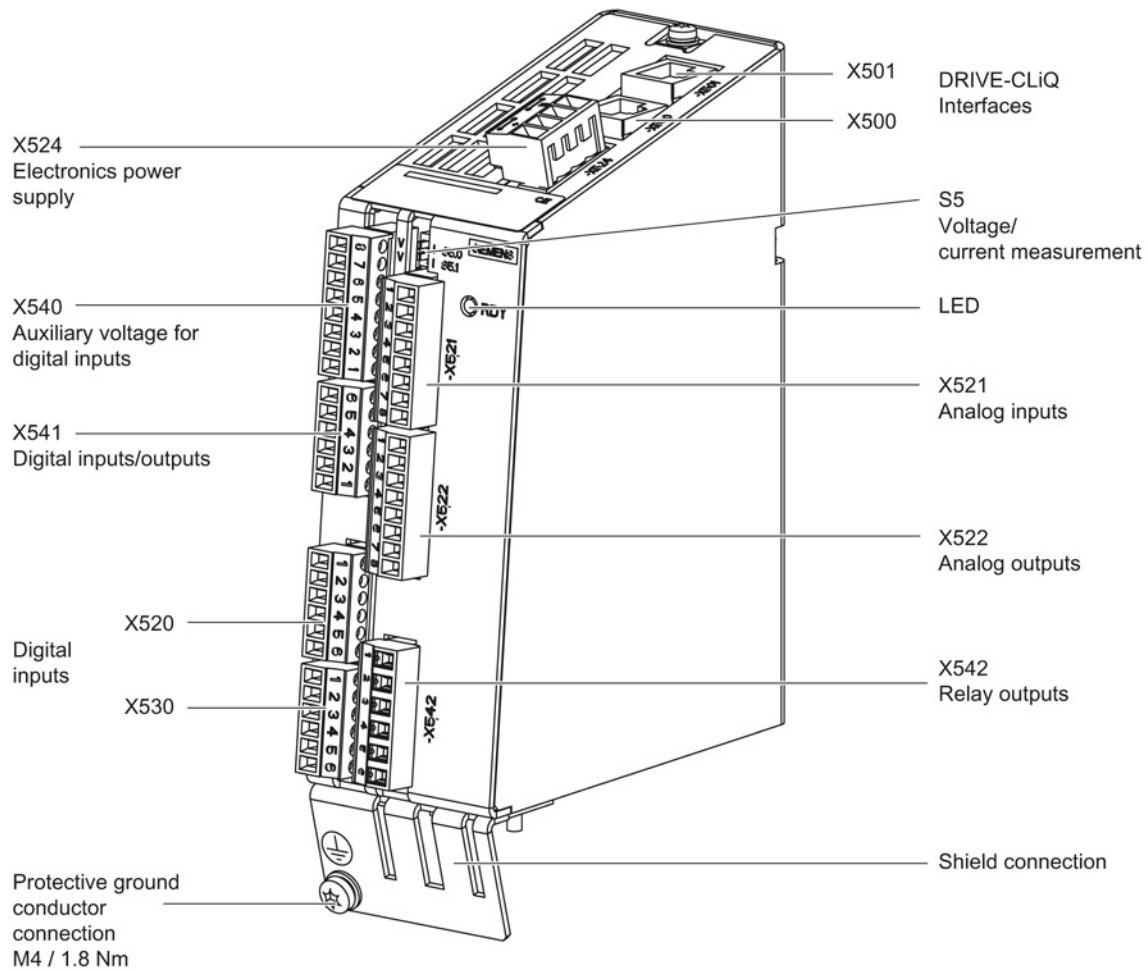
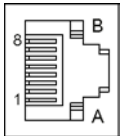


Figure 5-7 Interface overview TM31

5.3.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 10 X500/X501: DRIVE-CLiQ interfaces

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

5.3.2.3 X520 digital inputs

Table 5- 11 X520: Digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: - 3 ... +30 V
	2	DI 1	Current consumption Typical: 10 mA at 24 V DC
	3	DI 2	Input delay:
	4	DI 3	for "0" to "1": Typ. 50 µs max. 100 µs
	5	M1	for "1" to "0": Typ. 130 µs, max. 150 µs
	6	M	Electrical isolation: Reference potential is terminal M1
			Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V

Type: Screw terminal 1 (Page 360)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI: Digital input; M: Electronics ground; M1: Ground reference

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

 
Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
 2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)
-

5.3.2.4 X521 analog inputs

Table 5- 12 X521: Analog inputs

	Terminal	Designation ¹⁾	Technical data
	1	AI 0+	The analog inputs can be toggled between current and voltage input using switches S5.0 and S5.1. As voltage input: -10 ... +10 V; R _i > 100 kΩ Resolution: 11 bits + sign As current input: -20 ... +20 mA; R _i = 250 kΩ Resolution: 10 bits + sign
	2	AI 0-	
	3	AI 1+	
	4	AI 1-	
	5	P10	Auxiliary voltage: P10 = 10 V N10 = -10 V Continuously short-circuit proof
	6	M	
	7	N10	
	8	M	

Type: Screw terminal 1 (Page 360)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ AI: analog inputs; P10/N10: auxiliary voltage; M or GND: ground reference

NOTICE**Damage or malfunctions through impermissible voltage values**

If a current exceeding $\pm 35\text{ mA}$ flows through the analog current input, then the component could be destroyed.

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results.

- The input voltage may only be in the range between -30 V and +30 V (destruction limit).
- The common mode voltage may only be in the range between -10 V and +10 V (error limit).
- The back EMF at the auxiliary voltage connections may only be in the range between -15 V and +15 V.

Note

The power supply for the analog inputs can be taken internally or from an external power supply unit

 
5.3.2.5 S5 current/voltage changeover switch for analog inputs

Table 5- 13 Current/voltage selector S5

	Switch	Function
	S5.0	Selector voltage (V)/current (I) AI0
	S5.1	Selector voltage (V)/current (I) AI1

5.3.2.6 X522 analog outputs/temperature sensor

Table 5- 14 X522: Analog outputs/temperature sensor

	Terminal	Designation ¹⁾	Technical data
	1	AO 0V+	<p>You can set the following output signals using parameters:</p> <p>Voltage: -10 ... +10 V (max. 3 mA)</p> <p>Current 1: 4 ... 20 mA (max. load resistance ≤ 500 Ω)</p> <p>Current 2: -20 ... +20 mA (max. load resistance ≤ 500 Ω)</p> <p>Current 3: 0 ... 20 mA (max. load resistance ≤ 500 Ω)</p> <p>Resolution: 11 bits + sign</p> <p>Continuously short-circuit proof</p>
	2	AO 0-	
	3	AO 0C+	
	4	AO 1V+	
	5	AO 1-	
	6	AO 1C+	
	7	+ Temp	<p>Temperature sensor KTY84-1C130/PTC</p> <p>Measuring current via temperature sensor connection: 2 mA</p>
	8	- Temp	
<p>Type: Screw terminal 1 (Page 360)</p> <p>Max. cross-section that can be connected: 1.5 mm²</p>			

¹⁾ AO xV: analog output voltage; AO xC: analog output current

NOTICE

Damage or malfunctions through impermissible voltage values

If the back EMF is impermissible then damage and malfunctions may occur on the components.

- The back EMF at the outputs may only be in the range between -15 V and +15 V.

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**WARNING**

 
Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

5.3.2.7 X524 Electronics power supply

Table 5- 15 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.5 A
	+	Electronics power supply	
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

The maximum cable length that can be connected is 10 m.

 
Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

5.3.2.8 X530 digital inputs

Table 5- 16 X530: Digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 4	Voltage: -3 ... +30 V Current consumption Typical: 10 mA at 24 V DC Input delay: for "0" to "1": Typ. 50 µs max. 100 µs for "1" to "0": typ. 130 µs, max. 150 µs Electrical isolation: Reference potential is terminal M2 Signal level (including ripple): High signal level: 15 ... 30 V Low level: -3 ... +5 V
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	M2	
	6	M	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²			

¹⁾ DI: digital input; M: electronics ground; M2: ground reference

Note

Ensuring the function of digital inputs

An open input is interpreted as "low".

 
To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)

5.3.2.9 X540 auxiliary voltage for the digital inputs

Table 5- 17 X540: Auxiliary voltage for digital inputs

 
	Terminal	Designation	Technical data
	8	+24 V	Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA
	7	+24 V	
	6	+24 V	
	5	+24 V	
	4	+24 V	
	3	+24 V	
	2	+24 V	
	1	+24 V	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²			

Note

This voltage supply is only for powering the digital inputs.

5.3.2.10 X541 bidirectional digital inputs/outputs

Table 5- 18 X541: Bidirectional digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	6	M	Auxiliary voltage: Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage of terminals X540 and X541 combined: 150 mA As input: Voltage: -3 ... 30 V Current consumption, typical: 10 mA at 24 V Input delay: for "0" to "1": Typ. 50 µs for "1" to "0": Typ. 100 µs As output: Voltage: 24 V DC Max. load current per output: 500 mA Max. total current of outputs (including currents to the inputs): 100 mA / 1 A (can be parameterized) Continuously short-circuit proof Output delay: for "0" to "1": typ. 150 µs at 0.5 A resistive load (500 µs maximum) for "1" to "0": Typically 50 µs at 0.5 A resistive load Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	5	DI/DO 11	
	4	DI/DO 10	
	3	DI/DO 9	
	2	DI/DO 8	
	1	+24 V	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²			

¹⁾ DI/DO: Bidirectional digital input/output; M: Electronics ground

Note

 
An open input is interpreted as "low".

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

5.3.2.11 X542 relay outputs

Table 5- 19 X542: Relay outputs

	Terminal	Designation ¹⁾	Technical data
	1	DO 0.NC	Contact type: Two-way contact max. load current: 8 A Max. switching voltage: 250 V _{AC} , 30 V _{DC} Max. switching power at 250 V _{AC} : 2000 VA (cosϕ = 1) Max. switching power at 250 V _{AC} : 750 VA (cosϕ = 0.4) Max. switching power at 30 V _{DC} : 240 W (resistive load) Required minimum current: 100 mA Output delay: ≤ 20 ms ²⁾ Overvoltage category: Class II acc. to EN 60664-1
	2	DO 0.COM	
	3	DO 0.NO	
	4	DO 1.NC	
	5	DO 1.COM	
	6	DO 1.NO	
Type: Screw terminal 3 (Page 360) Maximum connectable cross-section: 2.5 mm ² Maximum switching frequency at full load: 6 rpm			

¹⁾ DO: digital output, NO: normally-open contact, NC: normally-closed contact, COM: mid-position contact

²⁾ Depending on the parameterization and the supply voltage (P24) of the TM31

5.3.3 Connection example

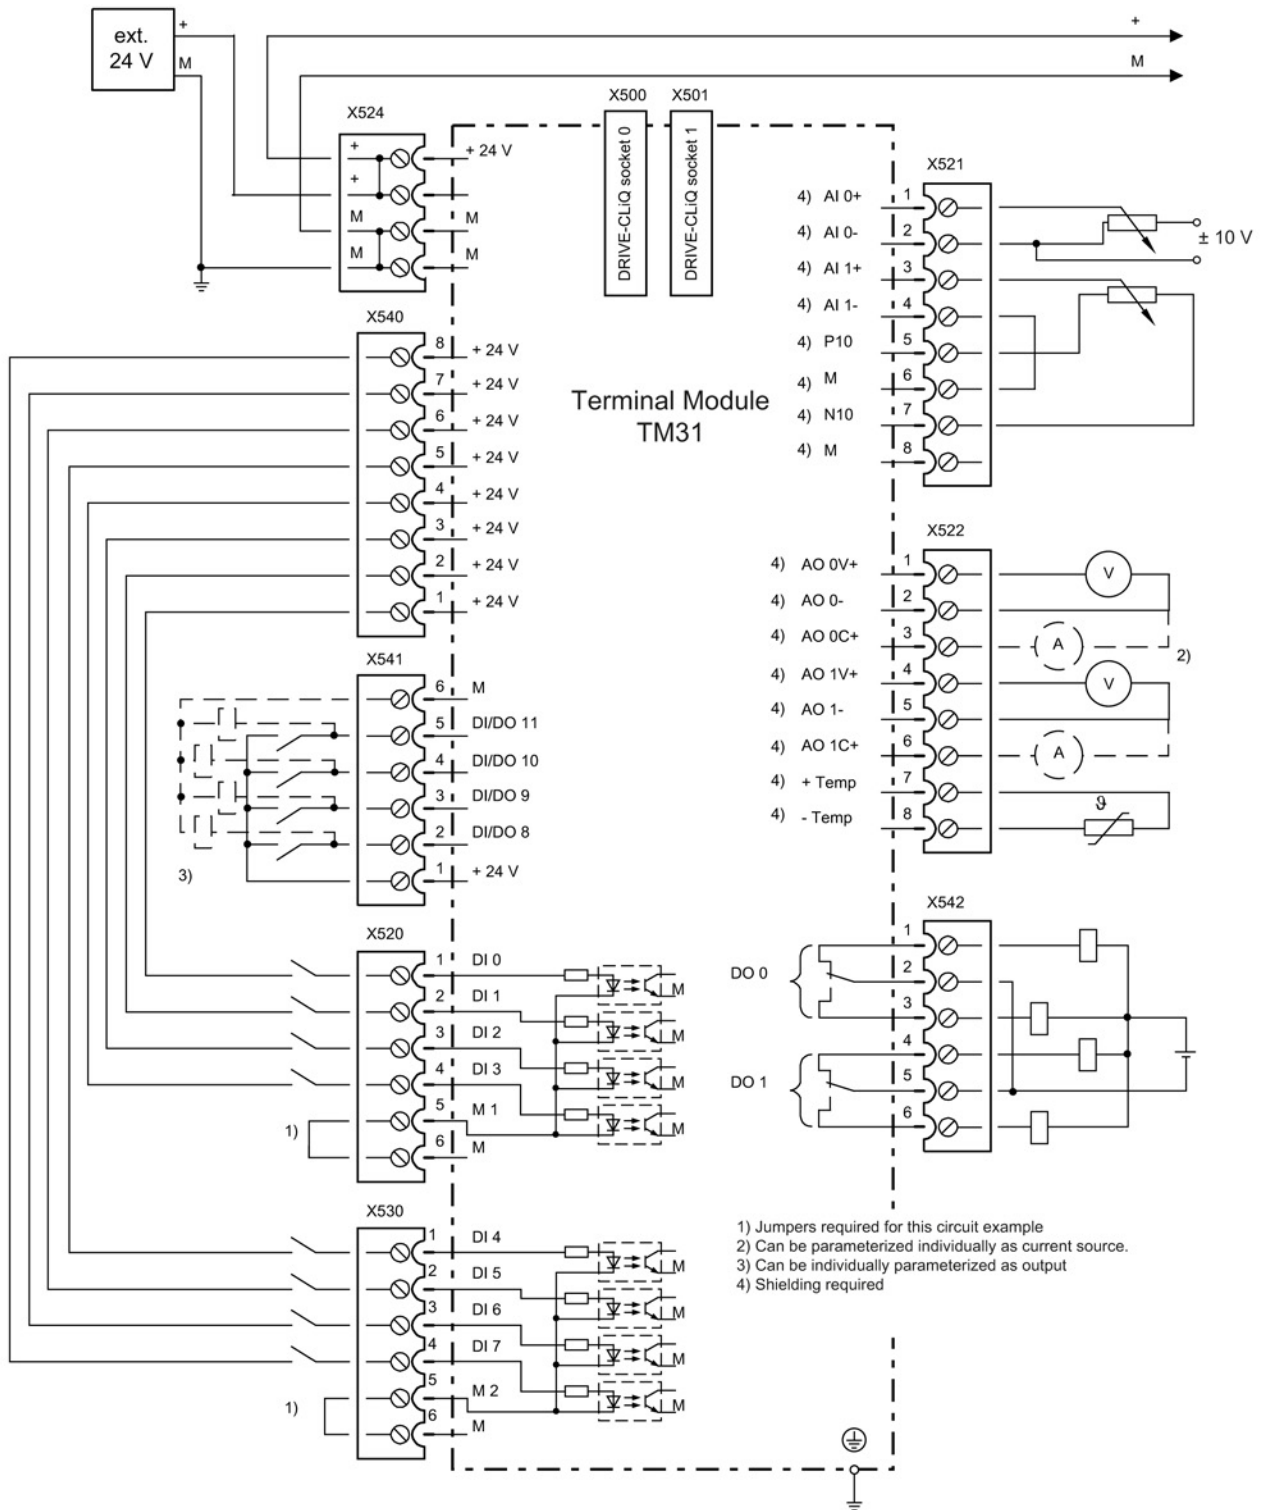


Figure 5-8 Connection example of TM31

5.3.4 Meaning of the LED

Table 5- 20 Meanings of the LEDs on the Terminal Module TM31

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated via p0154 = 1.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.3.5 Dimension drawing

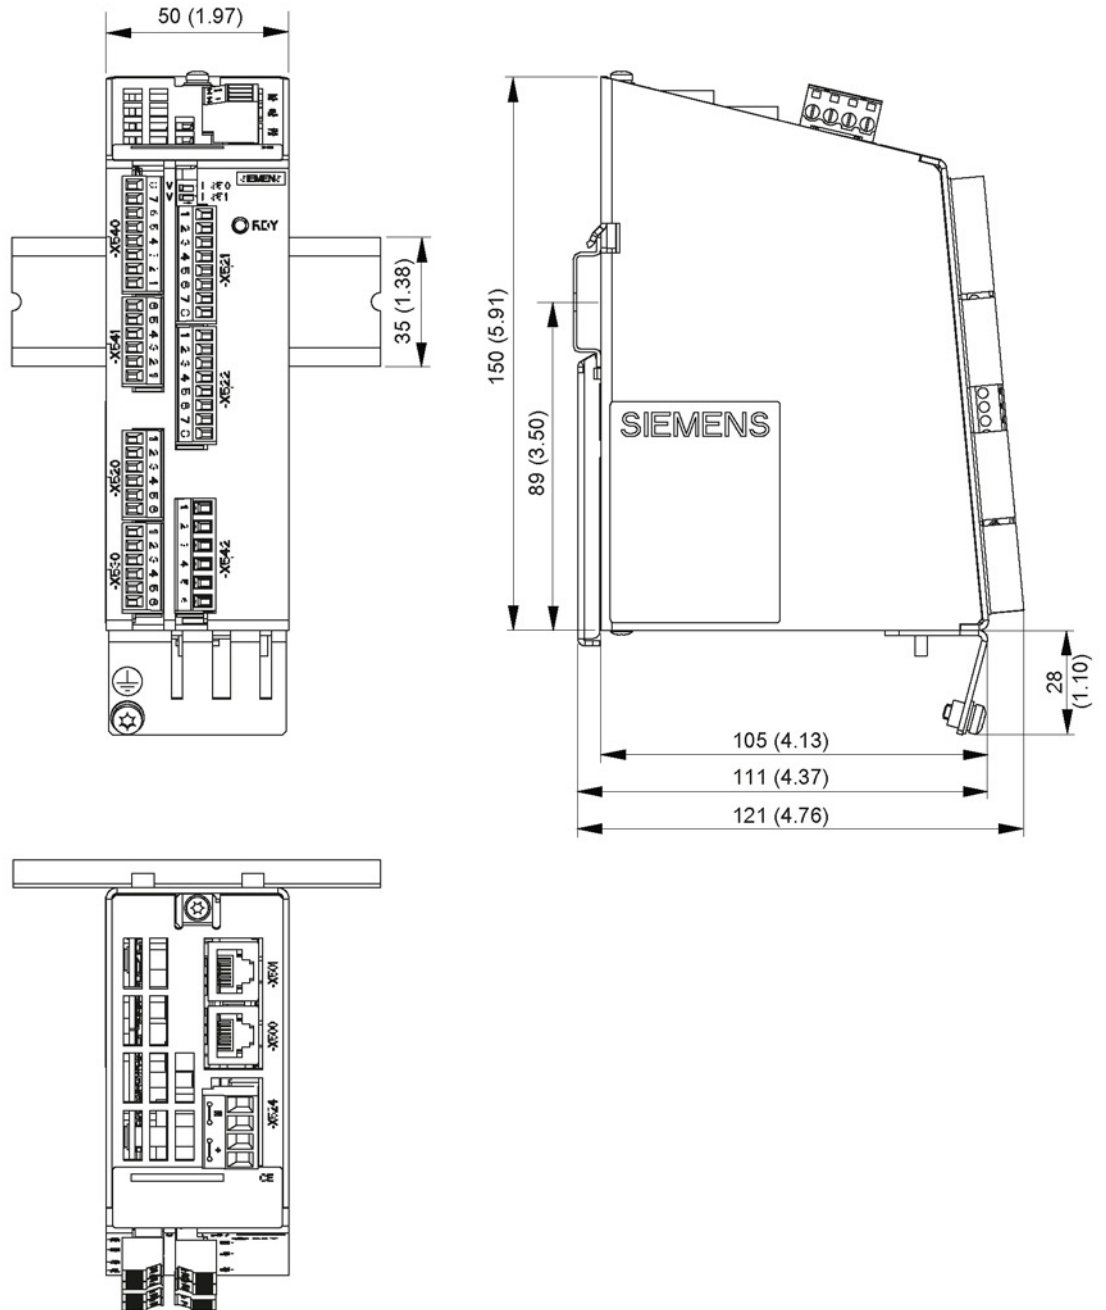


Figure 5-9 Dimension drawing of Terminal Module TM31, all data in mm and (inches)

5.3.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.


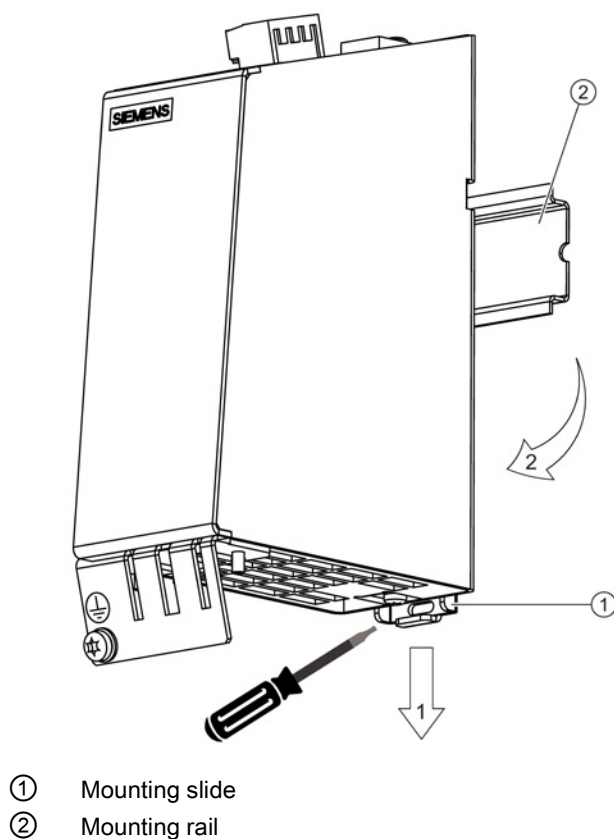


Figure 5-10 Removing from a DIN mounting rail

5.3.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

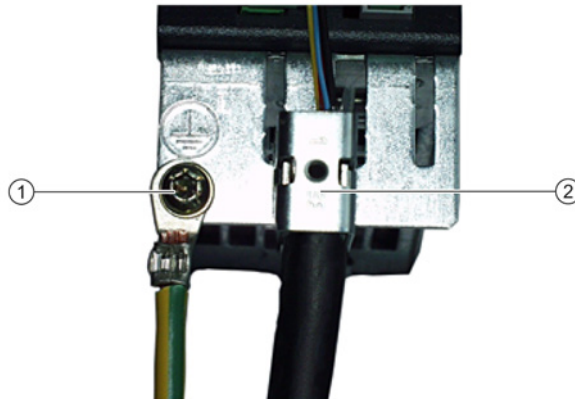

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-11 Shield support and protective conductor connection

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.3.8 Connector coding

To ensure that identical connectors are assigned correctly on the TM31, the connectors are encoded as shown in the following diagram.

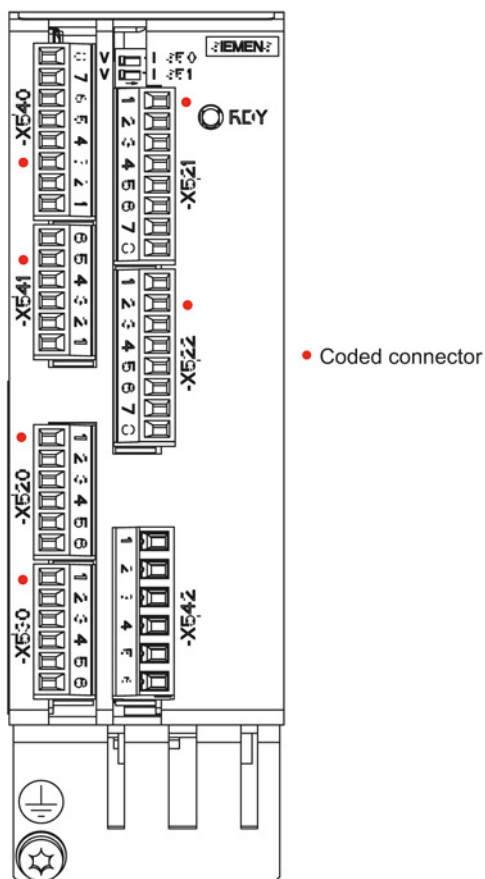


Figure 5-12 Example of connector coding at the TM31

The bending radii of the cables must be taken into account (see description of MOTION-CONNECT).

5.3.9 Technical data

Table 5- 21 Technical data

6SL3055-0AA00-3AAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ and digital outputs)	A _{DC}	0,5
Power loss	W	< 10
Response time	<p>The response time of the digital inputs/outputs and the analog inputs/outputs comprise the following:</p> <ul style="list-style-type: none"> • Response time on the component itself (approx. 1/2 DRIVE-CLiQ cycle). • Transfer time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ cycle). • Evaluation on the Control Unit (see function diagram). <p>Additional information: SINAMICS S120/S150 List Manual (LH1), Chapter "Function block diagrams"</p>	
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	1
Degree of protection	IP20	

5.4 Terminal Module TM41

5.4.1 Description

The Terminal Module TM41 is an expansion module that is snapped onto an EN 60715 standard mounting rail.

The encoder interface of the TM41 can be used to emulate an incremental encoder. The TM41 can also be used to connect analog controls to SINAMICS.

The TM41 contains the following interfaces:

Table 5- 22 Interface overview of the TM41

Type	Quantity
DRIVE-CLiQ interfaces	2
Digital inputs, floating	4
Bidirectional digital inputs/outputs	4
Analog inputs	1
TTL encoder output	1

5.4.2 Interface description

5.4.2.1 Overview

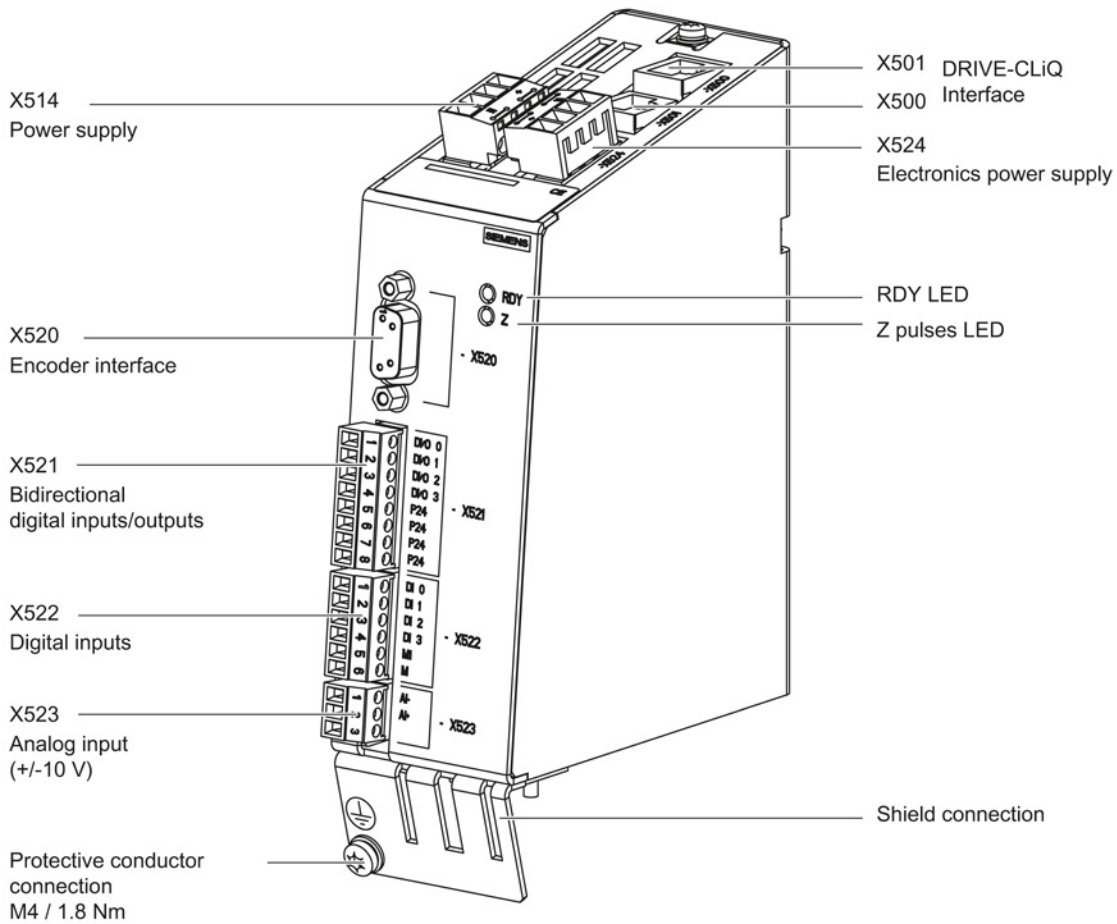
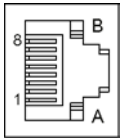


Figure 5-13 TM41 interface overview

5.4.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 23 X500/X501: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

 
Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

5.4.2.3 X514 and X524 Power supply

The X514 interface supplies the X521 interface with current.

The X524 interface provides the electronics power supply.

Table 5- 24 X514/X524: Power supply

	Terminal	Designation	Technical data
	+	Power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.5 A
	+	Power supply	
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note


The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current drain of X524 increases by the value for the DRIVE-CLiQ node.

The current drain of X514 increases by the value for the digital outputs.

5.4.2.4 X520 encoder interface

Table 5- 25 X520: Encoder interface

 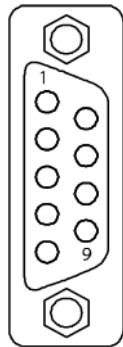
	Pin	Signal name	Technical data
	1	A	Incremental signal A
	2	R	Reference signal R
	3	B	Incremental signal B
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	A*	Inverse incremental signal A
	7	R*	Inverse reference signal R
	8	B*	Inverse incremental signal B
	9	M	Ground
Connector type:	9-pin SUB-D socket; TTL encoder (RS422)		
Max. cable length: 100 m			

Note

The X520 encoder interface produces signals acc. to RS422 standard.

5.4.2.5 X521 bidirectional digital inputs/outputs

Table 5- 26 X521: Digital inputs/outputs

	Terminal	Designation ¹⁾	Technical data
	1	DI/DO 0	As input: Voltage: -3 ... 30 V DC Current consumption, typical: 10 mA at 24 V Signal level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: for "0" → "1": typ. 50 µs max. 100 µs for "1" → "0": typ. 50 µs, max. 100 µs As output: Voltage: 24 V DC Max. load current per output: 0.5 mA Max. total current of outputs: 2 A Continuously short-circuit proof Output delay: for "0" → "1": typ. 150 µs at 0.5 A resistive load (500 µs maximum) for "1" → "0": Typically 150 µs at 0.5 A resistive load Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	2	DI/DO 1	
	3	DI/DO 2	
	4	DI/DO 3	
	5	+24 V	Voltage: 24 V DC Max. total load current of +24 V auxiliary voltage of terminals 5 up to 8 combined: 500 mA
	6	+24 V	
	7	+24 V	
	8	+24 V	

Type: Screw terminal 1 (Page 360)
Max. cross-section that can be connected: 1.5 mm²

¹⁾ DI/DO: bidirectional digital input/output

Note

This power supply is only for supplying the digital inputs.

Note

 
An open input is interpreted as "low".

Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

5.4.2.6 X522 isolated digital inputs

Table 5- 27 X522: Digital inputs

	Terminal	Designation ¹⁾	Technical data
	1	DI 0	Voltage: -3 ... +30 V DC Current consumption , typical: 6.5 mA at 24 V Electrical isolation: Reference potential is terminal M1 Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: for "0" → "1": typ. 50 µs max. 100 µs - for "1" → "0": typ. 110 µs, max. 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	M1	
	6	M	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²			

¹⁾ DI: Digital input; M: Electronics ground; M1: Ground reference

Note

Ensuring the function of digital inputs

 
Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper to terminal M (**Please observe:** This removes the electrical isolation for these digital inputs.)

5.4.2.7 X523 analog input

Table 5- 28 X523: Analog input

	Terminal	Designation ¹⁾	Technical data
	1	AI 0-	Voltage: -10 ... +10 V; $R_i > 100\text{ k}\Omega$ Resolution: 12 bits + sign
	2	AI 0+	
	3	Reserved, do not use	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

¹⁾ AI: analog input

Note**Permissible voltage values**

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results. The following voltages are permissible:

- Input voltage: $\pm 30 \text{ V}$ (destruction limit)
- Common mode voltage: $\pm 10 \text{ V}$ (increased errors when exceeded)

5.4.3 Connection example

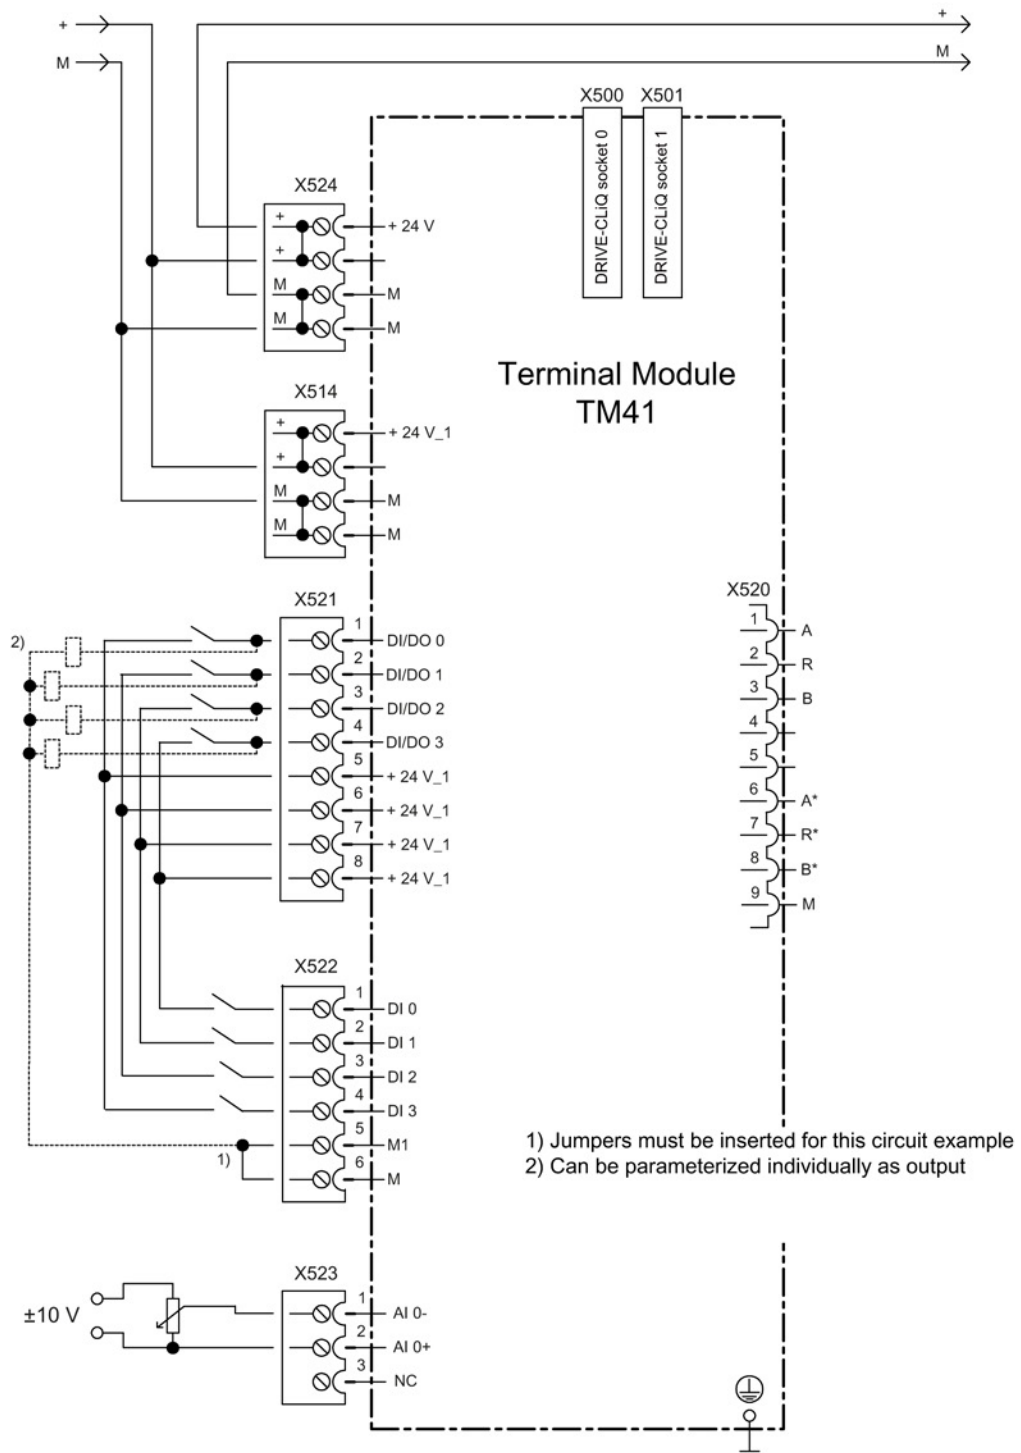


Figure 5-14 Sample connection of TM41

5.4.4 Meaning of the LEDs

Table 5- 29 Meaning of the LEDs on the Terminal Module TM41

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
Z pulses	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–
	–	Off	The zero mark was found and the system waits for the zero mark output. OR The component is switched off.	–
	Red	Continuous light	The zero mark has not been released, or the zero mark search is running.	–
	Green	Continuous light	The system stops at the zero mark.	–
		Flashing light	The zero mark is output at each virtual revolution.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.4.5 Dimension drawing

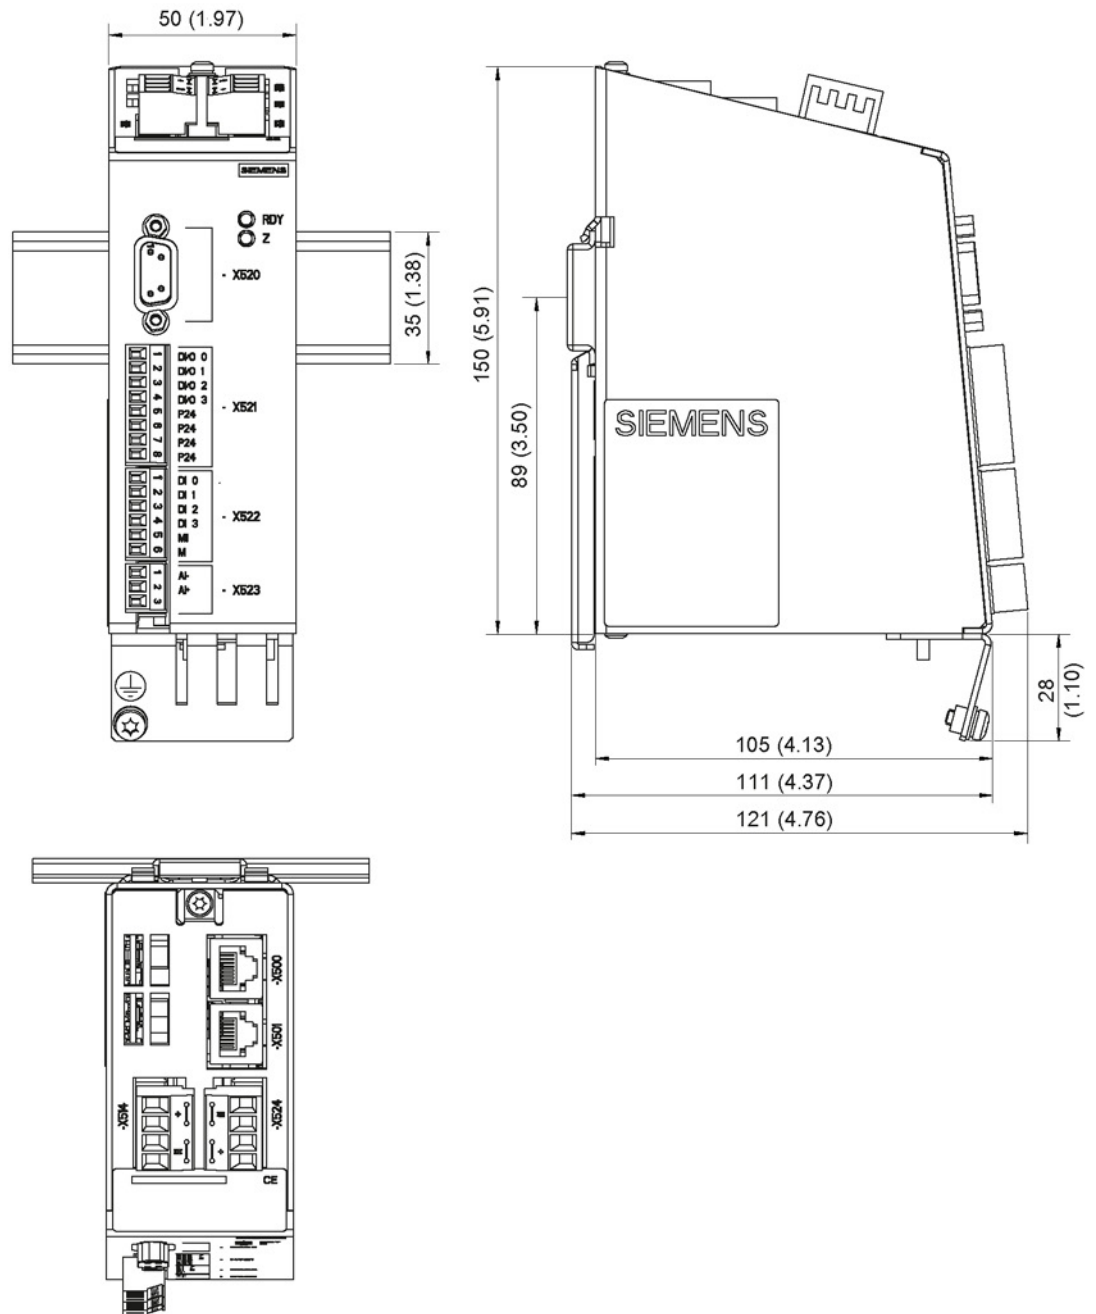


Figure 5-15 Dimension drawing of Terminal Module TM41, all data in mm and (inches)

5.4.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.


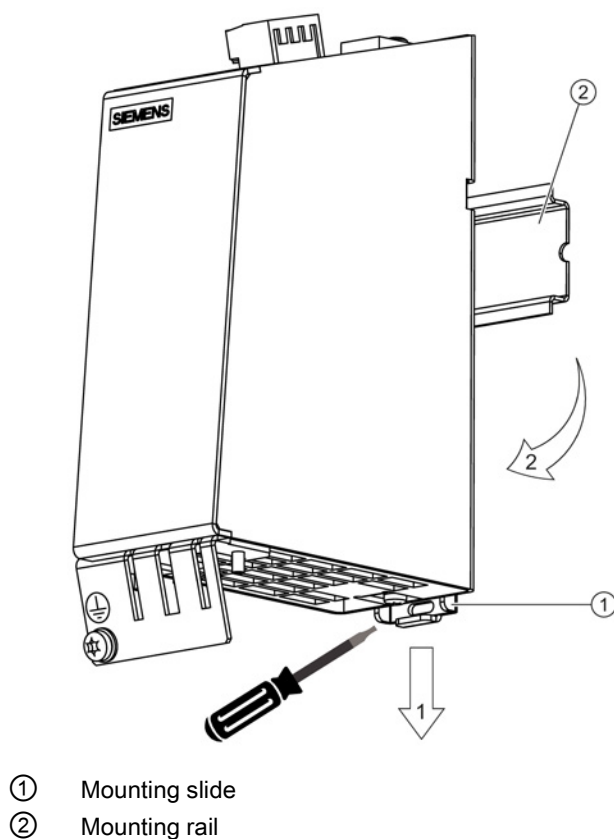


Figure 5-16 Removing from a DIN mounting rail

5.4.7 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

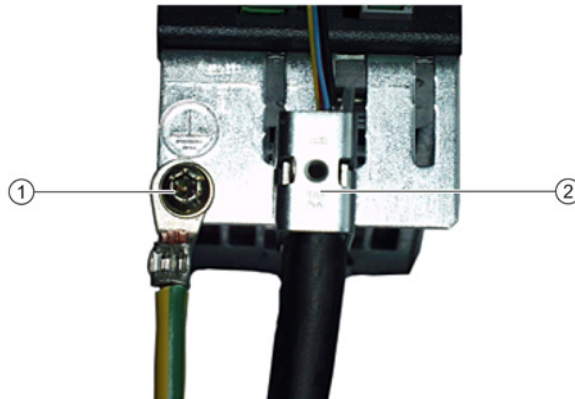

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-17 Shield support and protective conductor connection

The bending radii of the cables must be taken into account (see description of MOTION-CONNECT).

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.4.8 Technical data

Table 5- 30 Technical data

6SL3055-0AA00-3PAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ and digital outputs)	A _{DC}	0,5
Power loss	W	12
Response time	The response time of the digital inputs/outputs and the analog input comprise the following: <ul style="list-style-type: none"> • Response time on the component itself (approx. 1/2 DRIVE-CLiQ cycle). • Transfer time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ cycle). • Evaluation on the Control Unit (see function diagram). Additional information: SINAMICS S120/S150 List Manual (LH1), Chapter "Function block diagrams"	
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,85
Degree of protection	IP20	

5.5 Terminal Module TM54F

5.5.1 Description

The Terminal Module TM54F is a terminal expansion for snapping on to an EN 60715 standard mounting rail. The TM54F has fail-safe digital inputs and digital outputs for controlling SINAMICS Safety Integrated functions.

The TM54F connection should be established via the DRIVE-CLiQ directly at a Control Unit. Only one TM54F can be assigned to each Control Unit. Additional DRIVE-CLiQ nodes can be operated at the TM54F, such as Sensor Modules and Terminal Modules (excluding an additional TM54F). Motor Modules and Line Modules should not be connected to a TM54F.

TM54F features the following interfaces:

Table 5- 31 Interface overview of the TM54F

Type	Quantity
DRIVE-CLiQ interfaces	2
Fail-safe digital outputs (F-DO)	4
Fail-safe digital inputs (F-DI)	10
Sensor ¹⁾ power supplies, dynamization supported ²⁾	2
Sensor ¹⁾ power supply, no dynamization	1
Digital inputs to check F_DO for a test stop	4

¹⁾ Sensors: Fail-safe devices to issue commands and sense, for example, Emergency Stop pushbuttons and safety locks, position switches and light arrays/light curtains.

²⁾ Dynamic response: The sensor power supply is cycled on and off by the TM54F when the forced checking procedure is active for the sensors, cable routing, and the evaluation electronics.

The TM54F has 4 fail-safe digital outputs and 10 fail-safe digital inputs. A fail-safe digital output consists of a 24 V DC switching output, a ground switching output, and a digital input for checking the switching state. A fail-safe digital input is made up of 2 digital inputs.

Note

The rated values of the F-DO meet the requirements of EN 61131-2 for digital DC outputs with 0.5 A rated current.

The operating ranges of the F-DI meet the requirements of EN 61131-2 for Type 1 digital inputs.

Note

For cable lengths > 30 m, shielded cables must be used for the F-DI.

5.5.2 Interface description

5.5.2.1 Overview

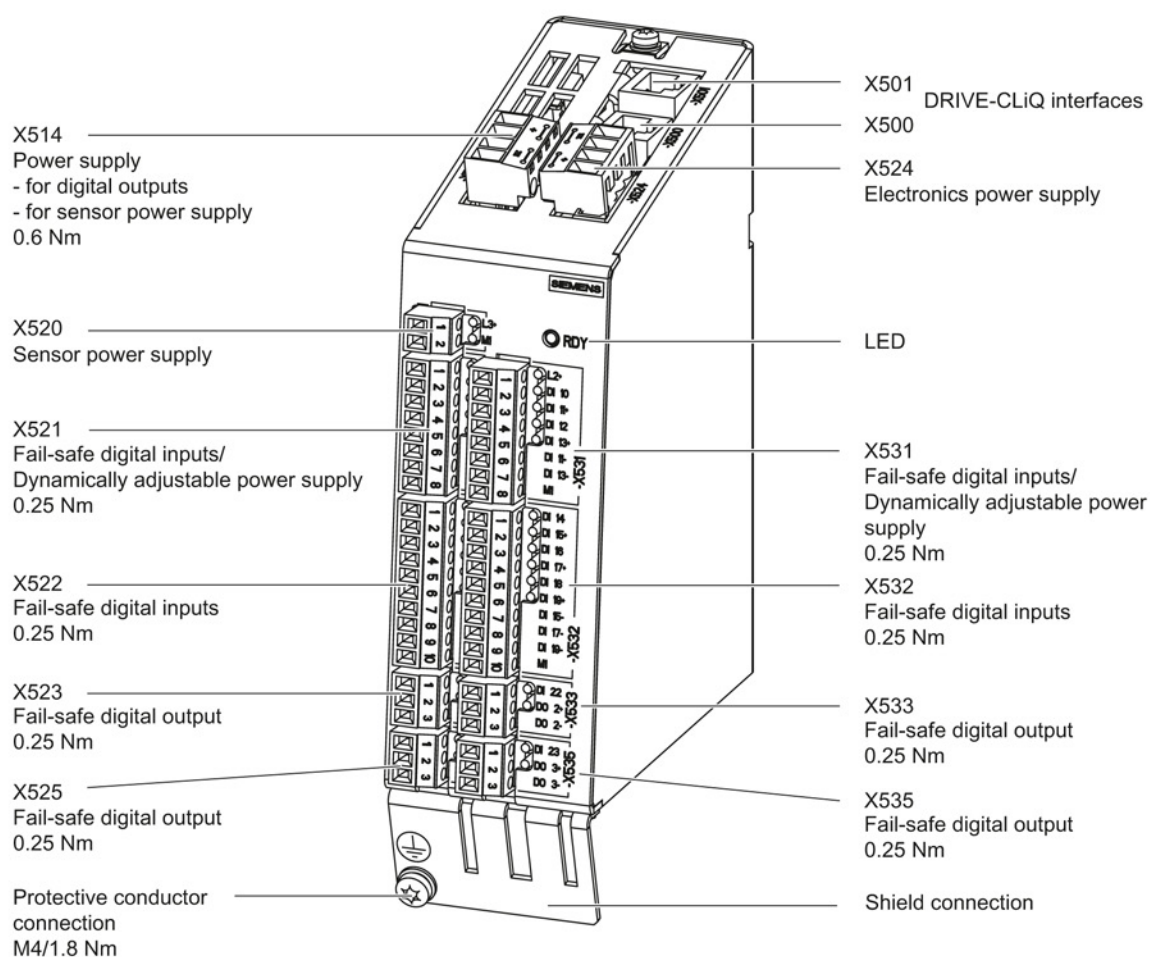
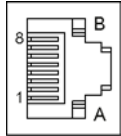


Figure 5-18 TM54 interface overview

5.5.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 32 X500/X501: DRIVE-CLiQ interfaces

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

5.5.2.3 X514 power supply for digital outputs and sensors

Table 5- 33 X514: Power supply

	Terminal	Designation	Technical data
	+	Power supply	Voltage: 24 V DC (20.4 ... 28.8 V)
	+	Power supply	Current consumption: max. 4 A ¹⁾
	M1	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M1	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

¹⁾ Including the current consumption for the digital outputs and to supply the sensor.

 
The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M1" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

5.5.2.4 X520 sensor power supply

 
Table 5- 34 X520: Sensor power supply

	Terminal	Designation	Technical data
	1	L3	Voltage: +24 V DC Max. total load current: 500 mA
	2	M1	

Without forced dormant error detection

5.5.2.5 X521 fail-safe digital inputs + power supply with forced dormant error detection

Table 5- 35 X521: Fail-safe digital inputs

	Terminal	Designation ¹⁾		Technical data
	1	L1+		Switched voltage: +24 V DC Max. total load current: 500 mA (voltage is switched for a test stop)
	2	DI 0	F-DI 0	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential, see terminal 6, 7, 8 All digital inputs are isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 μs (100 Hz) for "1" → "0": 60 μs (100 Hz)
	3	DI 1+		
	4	DI 2	F-DI 1	
	5	DI 3+		
	6	DI 1-	F-DI 0	Reference potential for DI 1+
	7	DI 3-	F-DI 1	Reference potential for DI 3+
	8	M1		Reference potential for DI 0, DI 2, L1+
An F-DI comprises a digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out. F-DI 0 = terminals 2, 3 and 6 F-DI 1 = terminals 4, 5 and 7				
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²				

¹⁾ DI: Digital input, F-DI: Fail-safe digital input²⁾ Pure hardware delay**Note****Execution of a test stop**

The test stop of the F-DI 0 to F-DI 4 can only be performed if the F-DI is supplied from L1+.

Note

Ensuring the function of digital inputs


For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper between DIx- and terminal M1

5.5.2.6 X522 fail-safe digital inputs

Table 5- 36 X522: Fail-safe digital inputs

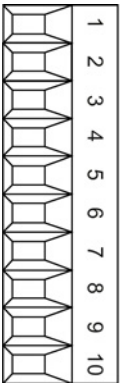	Terminal	Designation ¹⁾	Technical data
	1	DI 4	F-DI 2
	2	DI 5+	
	3	DI 6	F-DI 3
	4	DI 7+	
	5	DI 8	F-DI 4
	6	DI 9+	
	7	DI 5-	F-DI 2
	8	DI 7-	F-DI 3
	9	DI 9-	F-DI 4
	10	M1	Reference potential for DI 4, DI 6 and DI 8
<p>An F-DI comprises a digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out. F-DI 2 = terminals 1, 2 and 7 F-DI 3 = terminals 3, 4 and 8 F-DI 4 = terminals 5, 6 and 9</p>			
<p>Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²</p>			

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

²⁾ Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 0 to F-DI 4 can only be performed if the F-DI is supplied from L1+.

Note**Ensuring the function of digital inputs**

 
For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper between DIx- and terminal M1

5.5.2.7 X523 fail-safe digital output

Table 5- 37 X523: Fail-safe digital output

 
	Terminal	Designation ¹⁾	Technical data
	1	DI 20	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential is terminal M1. The digital input is electrically isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 µs (100 Hz) for "1" → "0": 60 µs (100 Hz)
	2	DO 0+	
	3	DO 0-	
		F-DO 0	0.5 A (reference potential is terminal M1) 0.5 A (reference potential is terminal L1+, L2+ or L3+) Output delay: ²⁾ for "0" → "1": 300 µs for "1" → "0": 350 µs Current consumption In total all DOs: 2 A Max. leakage current: < 0.5 mA Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
An F-DO comprises two digital outputs and one digital input for feedback F-DO 0 = terminals 1, 2, and 3 Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

¹⁾ DI: Digital input; DO: digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.2.8 X524 electronics power supply

Table 5- 38 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.7 A Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Electronics power supply	
	M	Electronics ground	
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

The maximum cable length that can be connected is 10 m.

 
Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.5.2.9 X525 fail-safe digital output

Table 5- 39 X525: Fail-safe digital output

 
	Terminal	Designation ¹⁾	Technical data
	1	DI 21	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential is terminal M1. The digital input is electrically isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 µs (100 Hz) for "1" → "0": 60 µs (100 Hz)
	2	DO 1+	
	3	DO 1-	
		F-DO 1	0.5 A (reference potential is terminal M1) 0.5 A (reference potential is terminal L1+, L2+ or L3+) Output delay: ²⁾ for "0" → "1": 300 µs for "1" → "0": 350 µs Current consumption In total all DOs: 2 A Max. leakage current: < 0.5 mA Switching frequency: for ohmic load: Max. 100 Hz for inductive load: Max. 0.5 Hz for lamp load: Max. 10 Hz Maximum lamp load: 5 W
An F-DO comprises 2 digital outputs and 1 digital input for feedback signal F-DO 1 = terminals 1, 2, and 3 Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.2.10 X531 fail-safe digital inputs + power supply with forced dormant error detection

Table 5- 40 X531: Fail-safe digital inputs

	Terminal	Designation ¹⁾		Technical data
	1	L2+		Switched voltage: +24 V DC Max. total load current: 500 mA (voltage is switched for a test stop)
	2	DI 10	F-DI 5	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential, see terminal 6, 7, 8 All digital inputs are isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 µs (100 Hz) for "1" → "0": 60 µs (100 Hz)
	3	DI 11+		
	4	DI 12	F-DI 6	
	5	DI 13+		
	6	DI 11-	F-DI 5	Reference potential to DI 11+
	7	DI 13-	F-DI 6	Reference potential to DI 13+
	8	M1		Reference potential to DI 10, DI 12, L2+
An F-DI comprises 1 digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out. F-DI 5 = terminals 2, 3 and 6 F-DI 6 = terminals 4, 5 and 7				
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm²				

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

²⁾ Pure hardware delay

Note

Execution of a test stop

The test stop of the F-DI 5 to F-DI 9 can only be performed if the F-DI is supplied from L2+.

Note

Ensuring the function of digital inputs

 
For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper between DIx- and terminal M1

5.5.2.11 X532 fail-safe digital inputs

Table 5- 41 X532: Fail-safe digital inputs

	Terminal	Designation ¹⁾		Technical data
	1	DI 14	F-DI 7	Voltage: -3 ... +30 V DC
	2	DI 15+		Current consumption typical: 3.2 mA at 24 V
	3	DI 16	F-DI 8	Electrical isolation:
	4	DI 17+		Reference potential, see terminals 7, 8, 9, 10 All digital inputs are isolated.
	5	DI 18	F-DI 9	Signal level (including ripple)
	6	DI 19+		High level: 15 ... 30 V Low level: -3 ... +5 V
				Input delay: ²⁾
				for "0" → "1": 30 µs (100 Hz)
				for "1" → "0": 60 µs (100 Hz)
		7	DI 15-	F-DI 7
	8	DI 17-	F-DI 8	Reference potential for DI 17+
	9	DI 19-	F-DI 9	Reference potential for DI 19+
	10	M1		Reference potential for DI 14, DI 16 and DI 18
An F-DI comprises 1 digital input and a 2nd digital input where, in addition, the cathode of the optocoupler is fed-out. F-DI 7 = terminals 1, 2 and 7 F-DI 8 = terminals 3, 4 and 8 F-DI 9 = terminals 5, 6 and 9				
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²				

¹⁾ DI: Digital input, F-DI: Fail-safe digital input

²⁾ Pure hardware delay

Note**Execution of a test stop**

The test stop of the F-DI 5 to F-DI 9 can only be performed if the F-DI is supplied from L2+.

Note**Ensuring the function of digital inputs**

 
For the digital inputs DIx+ to function, the reference potential must be connected to input DIx- in each case.

This is achieved by using one of the following measures:

1. Providing the ground reference of the digital inputs
2. A jumper between DIx- and terminal M1

5.5.2.12 X533 fail-safe digital output

Table 5- 42 X533: Fail-safe digital output

 
	Terminal	Designation ¹⁾	Technical data
	1	DI 22	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential is terminal M1. The digital input is electrically isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 µs (100 Hz) for "1" → "0": 60 µs (100 Hz)
	2	DO 2+	
	3	DO 2-	
		F-DO 2	0.5 A (reference potential is terminal M1) 0.5 A (reference potential is terminal L1+, L2+ or L3+) Output delay: ²⁾ for "0" → "1": 300 µs for "1" → "0": 350 µs Current consumption In total all DOs: 2 A Max. leakage current: < 0.5 mA Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
An F-DO comprises 2 digital outputs and 1 digital input for feedback signal F-DO 2 = terminals 1, 2, and 3 Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.2.13 X535 fail-safe digital output

Table 5- 43 X535: Fail-safe digital output

	Terminal	Designation ¹⁾	Technical data
	1	DI 23	Voltage: -3 ... +30 V DC Current consumption typical: 3.2 mA at 24 V Electrical isolation: Reference potential is terminal M1. The digital input is electrically isolated. Signal level (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay: ²⁾ for "0" → "1": 30 µs (100 Hz) for "1" → "0": 60 µs (100 Hz)
	2	DO 3+	
	3	DO 3-	
		F-DO 3	0.5 A (reference potential is terminal M1) 0.5 A (reference potential is terminal L1+, L2+ or L3+) Output delay: ²⁾ for "0" → "1": 300 µs for "1" → "0": 350 µs Current consumption In total all DOs: 2 A Max. leakage current: < 0.5 mA Switching frequency: for ohmic load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
An F-DO comprises 2 digital outputs and 1 digital input for feedback signal F-DO 3 = terminals 1, 2, and 3 Type: Screw terminal 1 (see Screw terminals (Page 360)) Max. connectable cross-section: 1.5 mm ²			

¹⁾ DI: Digital input; DO: Digital output F-DO: Fail-safe digital output

²⁾ Pure hardware delay

5.5.3 Connection example

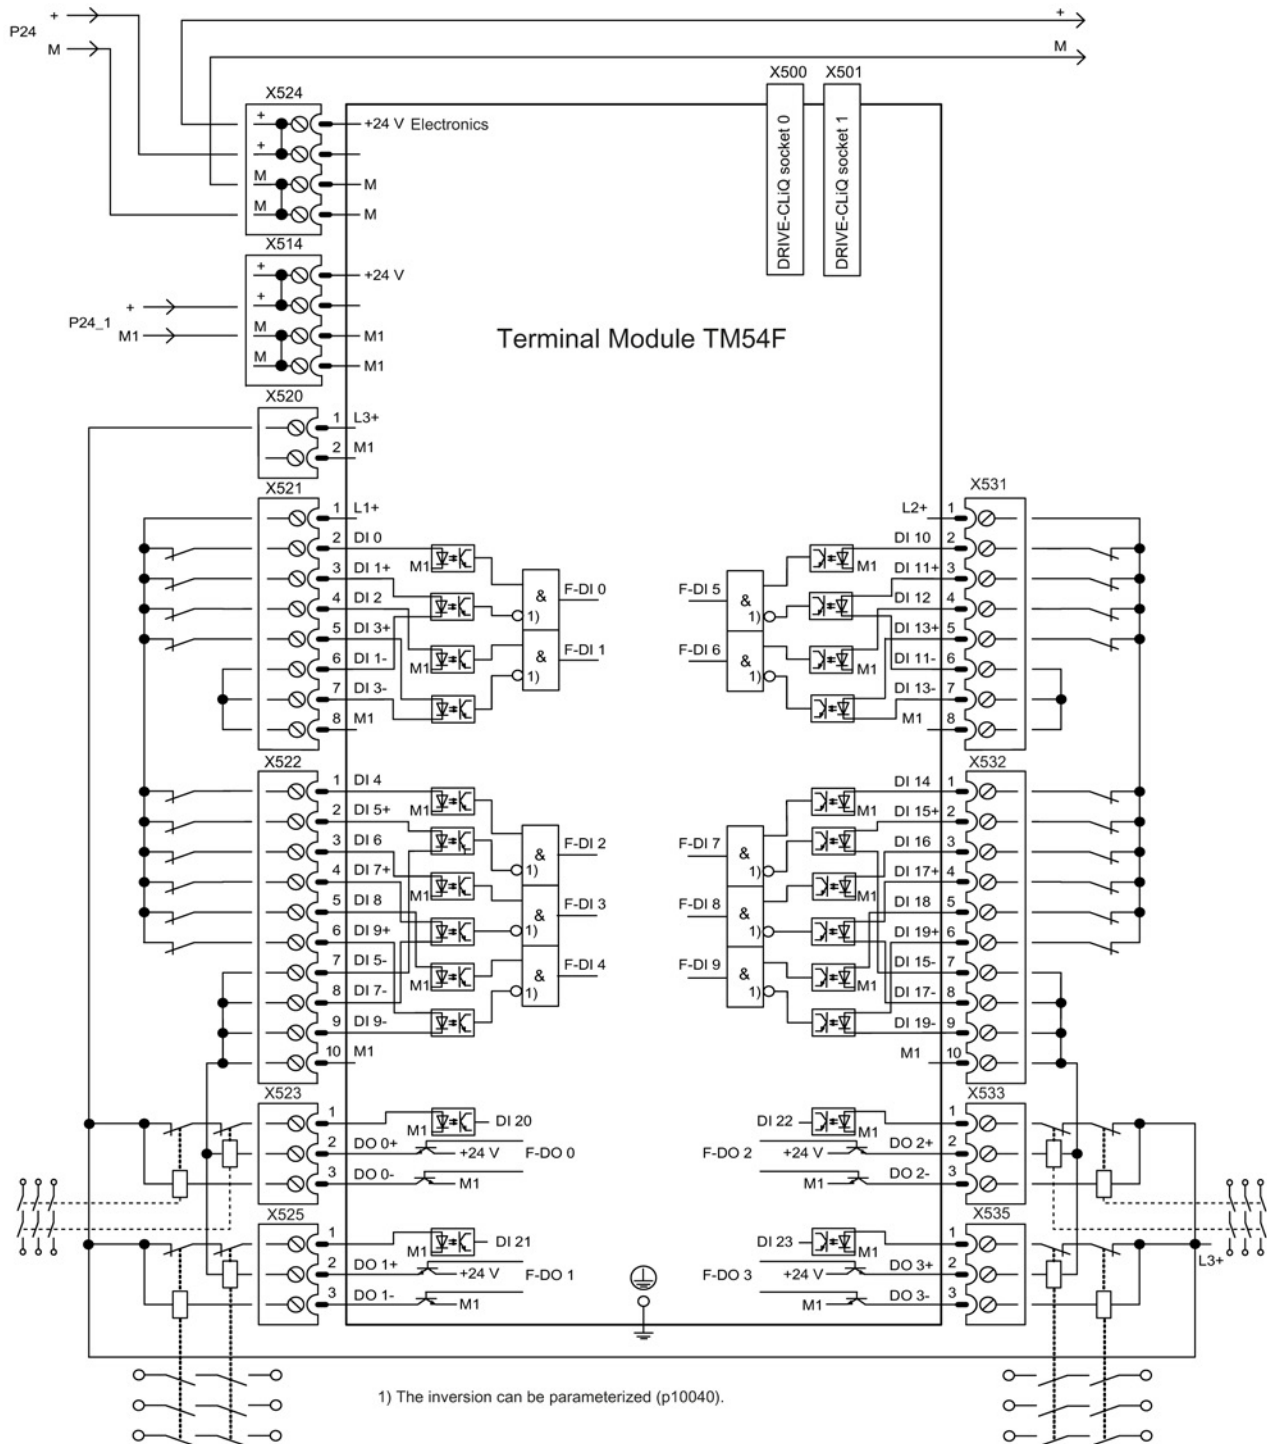


Figure 5-19 Connection example off TM54F

5.5.4 Meaning of the LEDs

Table 5- 44 Meaning of the LEDs on the Terminal Module TM54F

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation, cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault
	Green / Red	0.5 Hz flashing light	Firmware is being downloaded.	–
		2 Hz flashing light	Firmware download is complete. Wait for POWER ON.	Carry out a POWER ON
	Green / Orange or Red / Orange	Flashing light	Component recognition via LED is activated. This function is parameterizable (see SINAMICS S120/S150 List Manual). Note: Both options depend on the LED status when component recognition is activated.	–
L1+, L2+,	–	ON	The controllable sensor power supply is functioning fault-free.	–
	Red	Continuous light	There is a fault in the controllable sensor power supply.	–
L3+	–	ON	The sensor power supply is operating fault-free.	
	Red	Continuous light	The sensor power supply has a fault.	

LED	Color		Status	Description, cause	Remedy
Fail-safe inputs / double inputs					
F_DI z (input x, (x+1)+, (x+1)-)	LED	LED			–
	x	x+1		NC contact / NC contact ¹⁾ : (z = 0 ... 9, x = 0, 2, ... 18)	
	–	Red	Continuous light	Different signal states at input x and x+1	
	–	–	–	No signal at input x and no signal at input x+1	
				NC contact / NO contact ¹⁾ : (z = 0 ... 9, x = 0, 2, ... 18)	
	–	Red	Continuous light	Same signal states at input x and x+1	
	–	–	–	No signal at input x and no signal at input x+1	
	LED	LED			
	x	x+1		NC contact / NC contact ¹⁾ : (z = 0 ... 9, x = 0, 2, ... 18)	
	Green	Green	Continuous light	One signal at input x and one signal at input x+1	
				NC contact / NO contact ¹⁾ : (z = 0 ... 9, x = 0, 2, ... 18)	
	Green	Green	Continuous light	One signal at input x and no signal at input x+1	–
Single digital inputs, not fail-safe					
DI x	–		Off	No signal at digital input x (x = 20 ... 23)	–
	Green		Continuous light	Signal at digital input x	–
Fail-safe digital outputs with associated readback channel					
F_DO y (0+..3+, 0-..3-)	Green		Continuous light	Output y (y = 0 ... 3) has an active signal	–
Readback input DI 2y for output F_DO y (y = 0 ... 3) for test stop. The status of the LEDs also depends on the type of external circuit.					
DI 2y	–		Off	One of the two output lines y+ or y- or both lines of output y carry a signal	–
	Green		Continuous light	Both output lines y+ and y- carry no signal	–

¹⁾ Inputs x+1 (DI 1+, 3+, ... 19+) can be individually adjusted using a parameter (see SINAMICS S120/S150 List Manual)

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.5.5 Dimension drawing

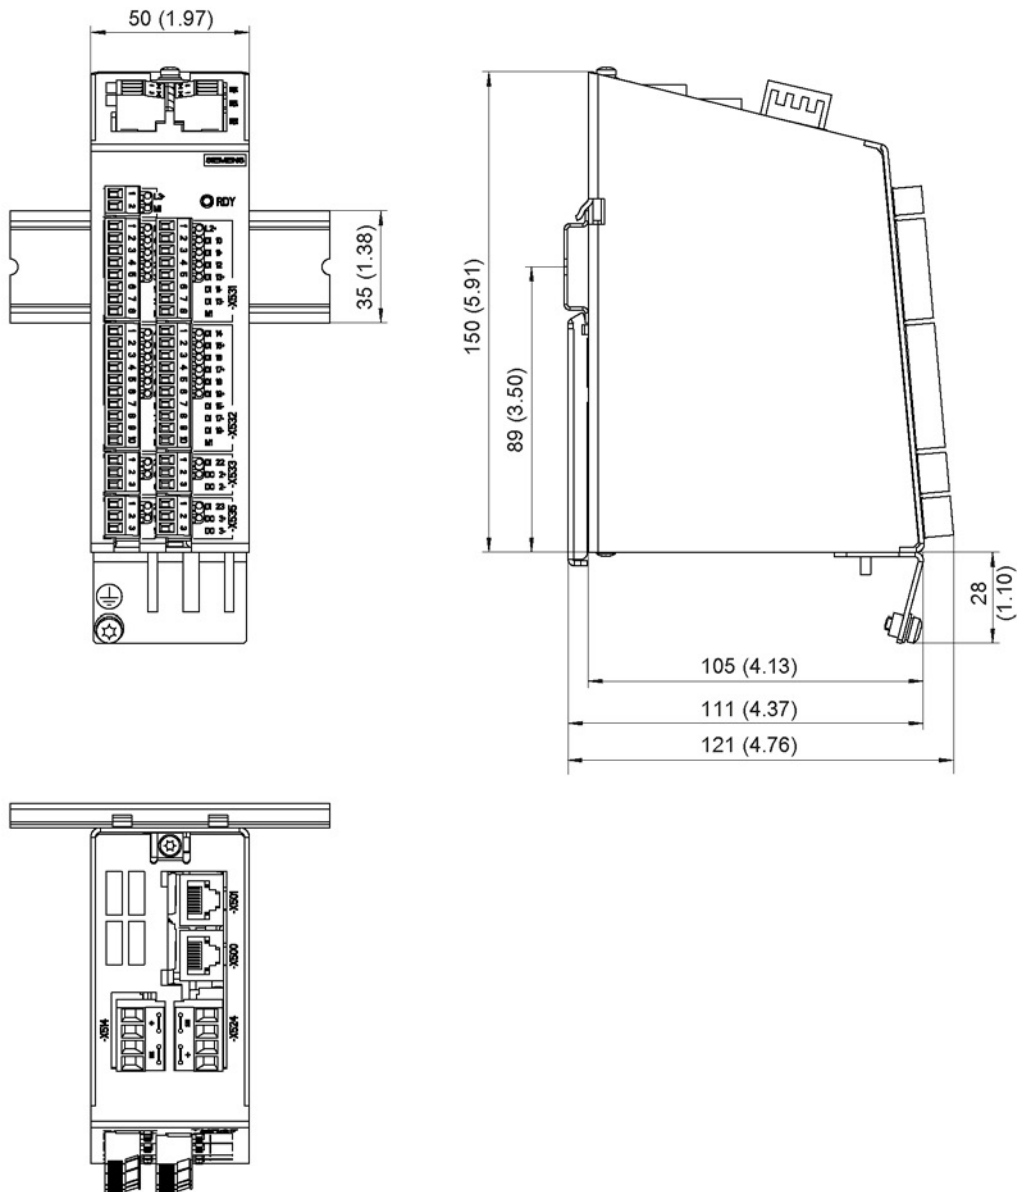


Figure 5-20 Dimension drawing of Terminal Module TM54F, all data in mm and (inches)

5.5.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.


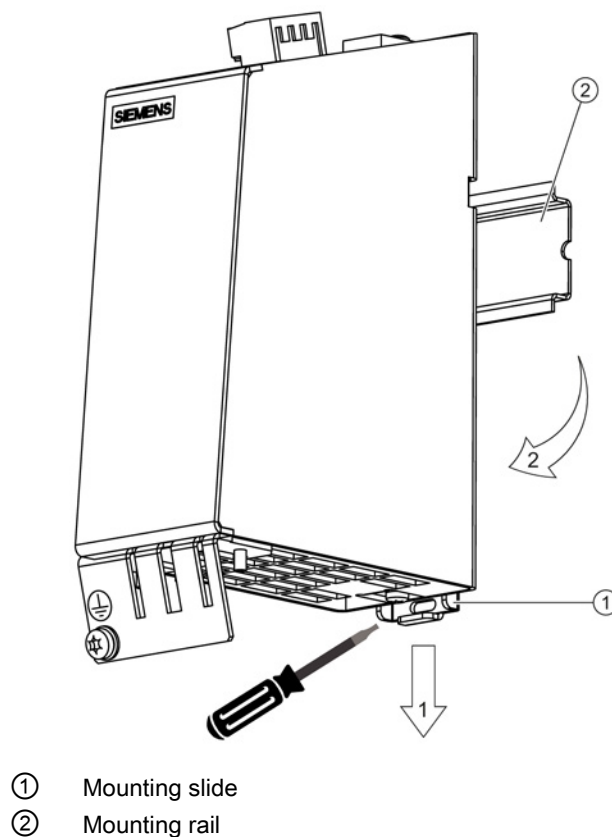


Figure 5-21 Removing from a DIN mounting rail

5.5.7 Protective conductor connection and shield support

It is always advisable to shield the digital input and output wiring.

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

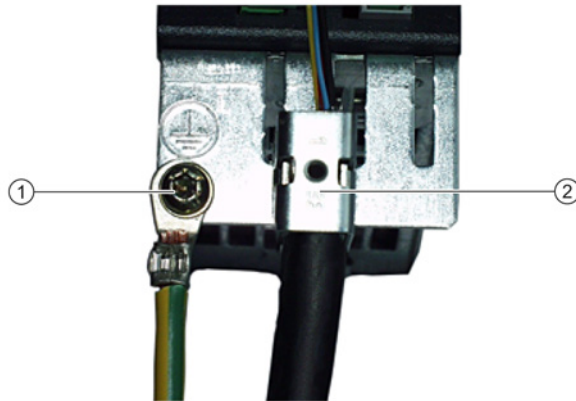

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-22 Shield support and protective conductor connection

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.5.8 Technical data

Table 5- 45 Technical data

6SL3055-0AA00-3BAx	Unit	Value
Current requirement X524 (at 24 V DC) without DRIVE-CLiQ supply	mA	160
Current requirement X514 (at 24 V DC) without digital outputs and sensor power supply	mA	38
Sensor power supply with and without forced dormant error detection (L1+, L2+, L3+)		
Voltage	V	24
Max. load current per output	A	0,5
Cable length for the 24 V supply: The surge protection device "Weidmüller Item No. MCZ OVP TAZ DIODE 24 VDC" must be used for longer cable lengths.	m	< 30
Fail-safe digital inputs (F-DI) and standard digital inputs		
Voltage	V	0 ... 30
Low level (an open digital input is interpreted as "low")	V	-3 ... +5
High level	V	15 ... 30
Current consumption (at 24 V DC)	mA	> 2
Input delay ¹⁾ - For "0" to "1" - For "1" to "0"	μs μs	Approx. 30 (100 Hz) Approx. 60 (100 Hz)
Fail-safe digital outputs (F-DO), continuous short-circuit proof		
Voltage	V	24
Max. load current per digital output	A	0,5
Output delay ¹⁾ - For "0" to "1" - For "1" to "0"	μs μs	300 350
Power loss	W	4.5 at 24 V
PE/ground connection		At the housing with M4 screw
Weight	kg	approx. 0.9

¹⁾ Pure hardware delay

5.6 Terminal Module TM120

5.6.1 Description

The Terminal Module TM120 is a DRIVE-CLiQ component for safe electrically isolated temperature evaluation. It can be used for 1FN, 1FW6, and third-party motors in which the temperature sensors cannot be installed with safe electrical separation. The TM120 is installed in the control cabinet and can be snapped on to a DIN rail (EN 60715).

When a TM120 is being used, temperature evaluation and encoder evaluation functions are separated off from one another. The TM120 can detect the motor temperature via 4 channels with different temperature sensors. Encoder evaluation functions are performed via Sensor Modules (e.g. SMCxx, SMExx). This means that, when connected to a Sensor Module SMCxx, the TM120 represents a control cabinet alternative to the SME120/SME125.

The TM120 contains the following interfaces:

Table 5- 46 Overview of the TM120 interfaces

Type	Quantity
DRIVE-CLiQ interfaces	2
Temperature sensor inputs	4

5.6.2 Interface description

5.6.2.1 Overview

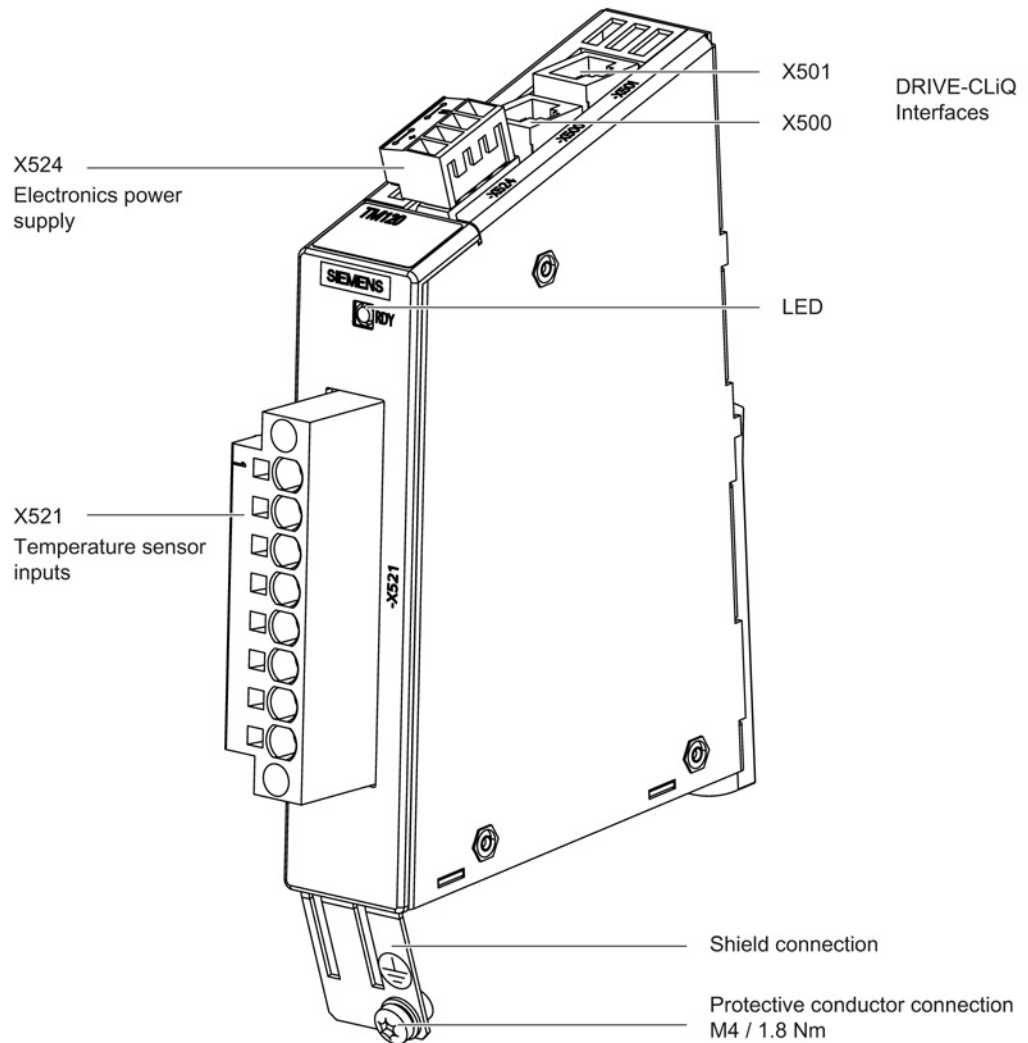
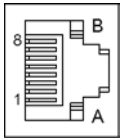


Figure 5-23 Interface overview TM120

5.6.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 47 X500/X501: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	RJ34plus socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.


Blanking covers (50 x) order number: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.6.2.3 X521 temperature sensor input

Table 5- 48 X521: Temperature sensor input

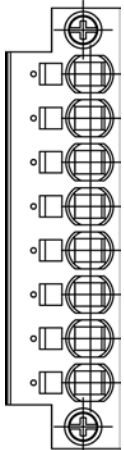	Terminal	Function	Technical data
	1	- Temp	Temperature sensor connection KTY84-1C130/PTC/ bimetallic switch with NC contact In linear motor applications, connect the KTY84-1C130 motor temperature sensor here
	2	+ Temp	
	3	- Temp	Temperature sensor connection KTY84-1C130/PTC/ bimetallic switch with NC contact In linear motor applications, connect the PTC triple element 1 or bimetallic switch here
	4	+ Temp	
	5	- Temp	Temperature sensor connection KTY84-1C130/PTC/ bimetallic switch with NC contact In linear motor applications, connect the PTC triple element 2 here
	6	+ Temp	
	7	- Temp	Temperature sensor connection KTY84-1C130/PTC/ bimetallic switch with NC contact In linear motor applications, connect the PTC triple element 3 here
	8	+ Temp	

Type: Spring-loaded terminal 5 (Page 359)
Max. cross-section that can be connected: 6 mm²
Measuring current via the temperature sensor connection: 2 mA

NOTICE

Damage when using a non-specified temperature sensor

If sensors other than those specified are connected, this may result in incorrect measured values. Damage can result if overheating is not detected.

- Only connect temperature sensors that have been specified for operation with a TM120 Terminal Module.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

The table below shows the preferable assignment of the connecting terminal for the temperature sensor input:

Table 5- 49 Preferable assignment, X521 temperature sensor input

Terminal	Signal name				Meaning
	1FW6	1FN3 (2x1FN3)	1FN1	Segment motor 4 segments	
1	KTY N	KTY N	KTY N	1 PTC 120 °C	KTY, negative pole
2	KTY P	KTY P	KTY P	1 PTC 120 °C	KTY, positive pole
3	PTC 130 °C	PTC 120 °C	Bimetallic switch with NC contact	2_PTC 120 °C	PTC triple element 1 or bimetallic switch with NC contact
4	PTC 130 °C	PTC 120 °C	Bimetallic switch with NC contact	2_PTC 120 °C	
5	PTC 150 °C	(2_KTY_N)		3_PTC 120 °C	PTC triple element 2
6	PTC 150 °C	(2_KTY_P)		3_PTC 120 °C	
7		(2 PTC 120 °C)		4 PTC 120 °C	PTC triple element 3
8		(2 PTC 120 °C)		4 PTC 120 °C	

The interconnection given is a suggestion (software default setting). Which temperature sensor is connected to which input can be freely configured.

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

Note

 
A 6FX7008-1BCx1 power cable is recommended for connecting the KTY temperature sensors.

Note

The maximum length of the temperature sensor cable is 100 m. The cables must be shielded.

5.6.2.4 X524 Electronics power supply

Table 5- 50 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 V – 28.8 V)
	+	Electronics power supply	Current consumption (max./typ.): 0.5 A / 0.1 A
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.6.3 Connection examples

Each TM120 is directly connected to an encoder evaluation unit (SMCxx or SMExx) by looping the corresponding DRIVE-CLiQ channel via the TM120. This ensures that encoders are automatically assigned to the temperature signals and, consequently, to the correct axis. The assignment can also be performed manually.

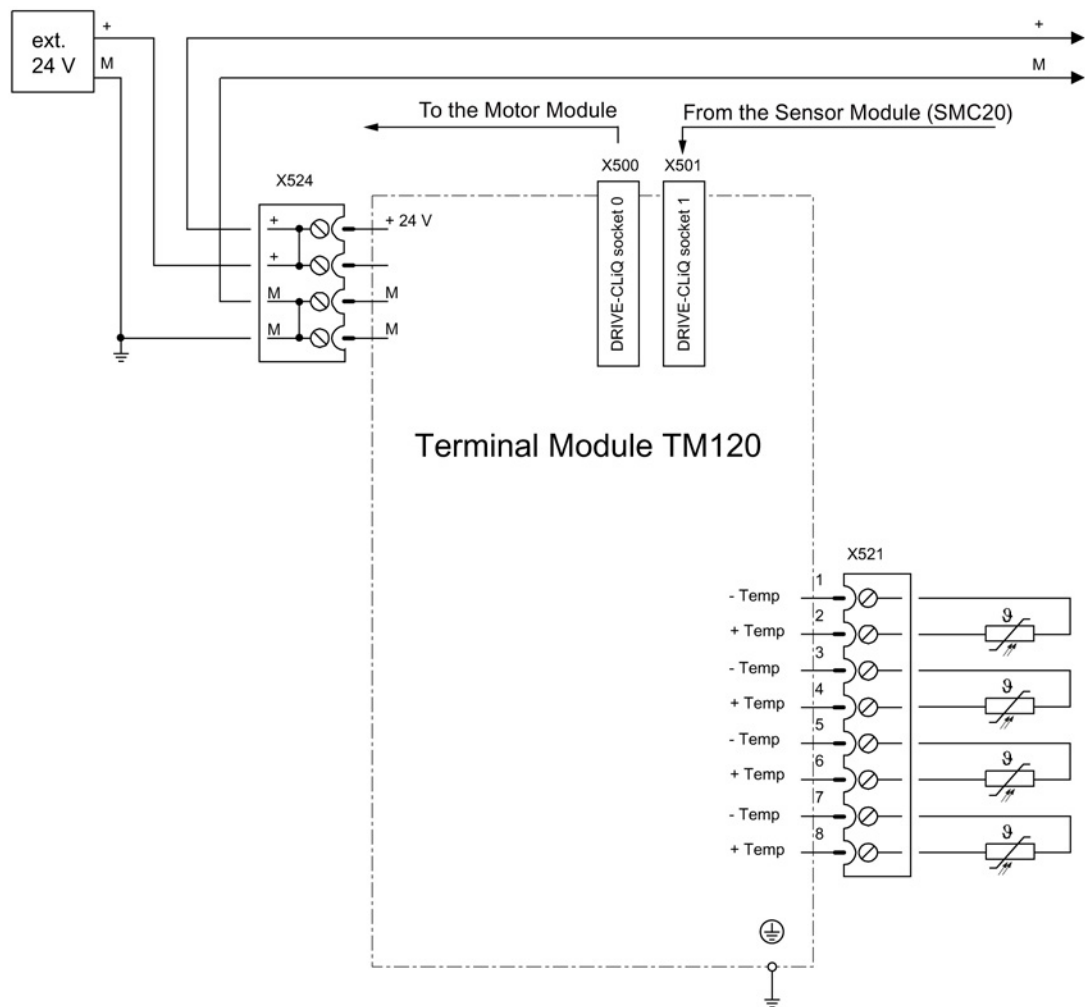


Figure 5-24 Connection example of TM120

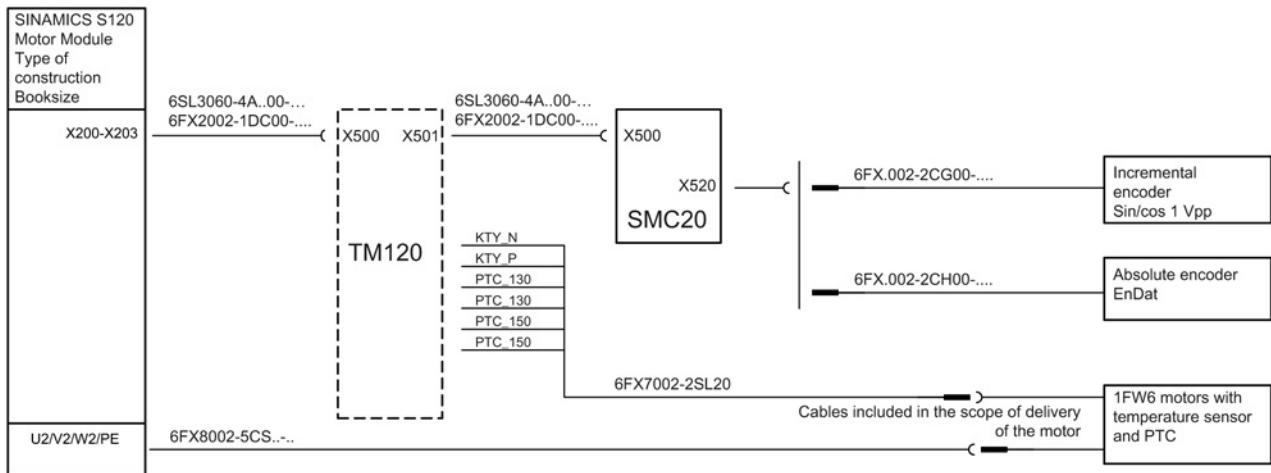


Figure 5-25 Connection example of TM120 with Motor Module and SMC20 (encoder evaluation)

5.6.4 Meaning of the LED

Table 5- 51 Meaning of the LEDs on the Terminal Module TM120

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	Check the power supply.
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ Red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or red/ orange	Flashing light 2 Hz	Detection of the components via LED is activated ¹⁾ . Note: Both options depend on the LED status when activated.	-

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.6.5 Dimension drawing

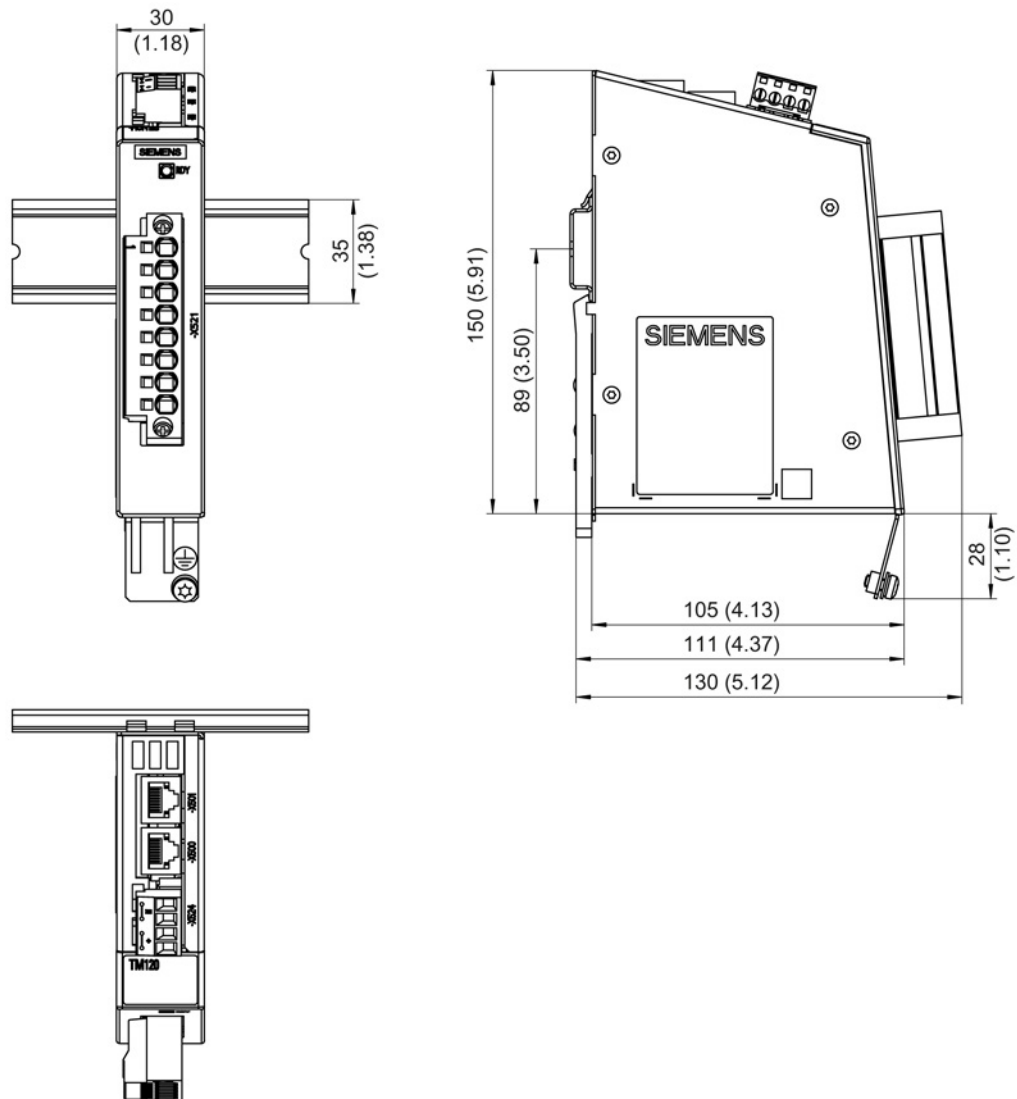


Figure 5-26 Dimension drawing of Terminal Module TM120, all data in mm and (inches)


5.6.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

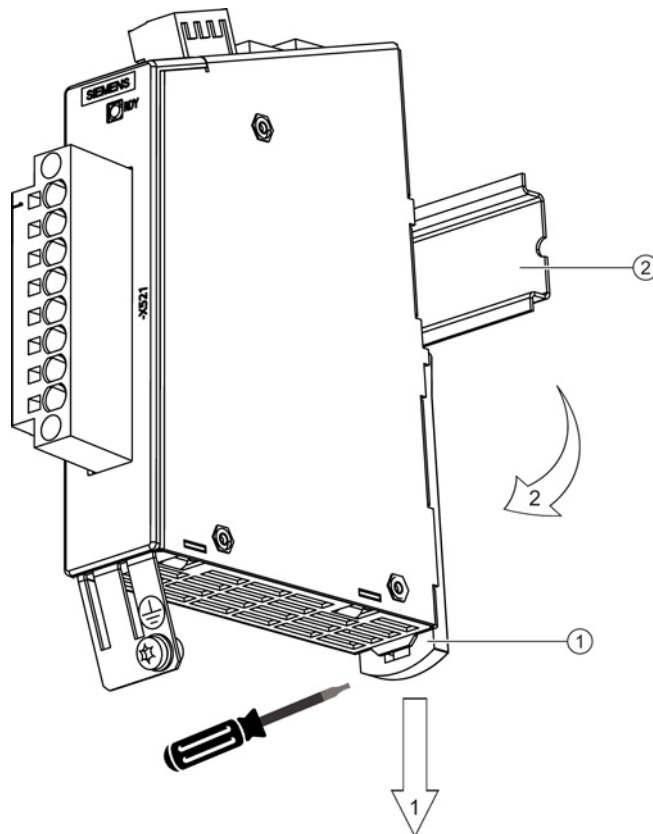


① Mounting slide

② Mounting rail

Figure 5-27 Removal of a TM120 from a DIN rail

5.6.7 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

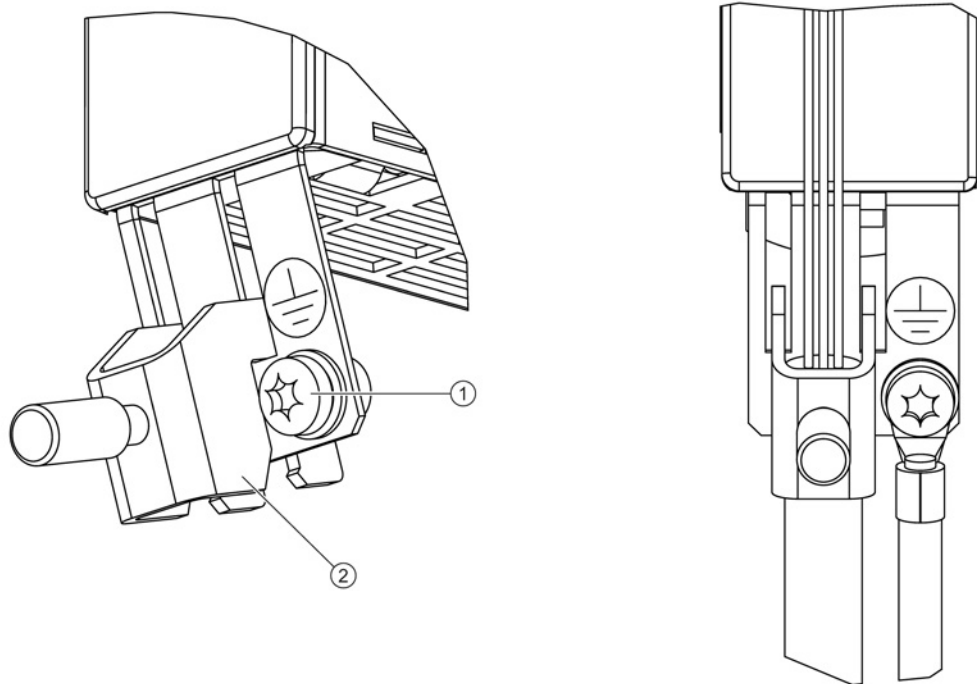

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-28 Shield support and protective conductor connection of the TM120

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.6.8 Technical data

Table 5- 52 Technical data

6SL3055-0AA00-3KAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 V DC (20.4 ... 28.8)
Current (without DRIVE-CLiQ)	A _{DC}	0.20/0.1 (typ.)
Power loss	W	2.4 (typ.)
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,41
Degree of protection	IP20	

5.7 Terminal Module TM150

5.7.1 Description

The terminal module TM150 is a DRIVE-CLiQ component for temperature evaluation. The temperature is measured in a temperature range from -99 °C to +250 °C for the following temperature sensors:

- PT100 (with monitoring for wire breakage and short-circuit)
- PT1000 (with monitoring for wire breakage and short-circuit)
- KTY84 (with monitoring for wire breakage and short-circuit)
- PTC (with short-circuit monitoring)
- Bimetallic NC contact (without monitoring)

For the temperature sensor inputs, for each terminal block the evaluation can be parameterized for 1x2-wire, 2x2-wire, 3-wire or 4-wire. There is no galvanic isolation in the TM150.

The TM150 is mounted in the control cabinet and can be snapped on to a standard mounting rail (EN 60715).

The TM150 contains the following interfaces:

Table 5- 53 Overview of the TM150 interfaces

Type	Quantity
DRIVE-CLiQ interfaces	2
Temperature sensor inputs	6/12
Electronics power supply	1

5.7.2 Interface description

5.7.2.1 Overview

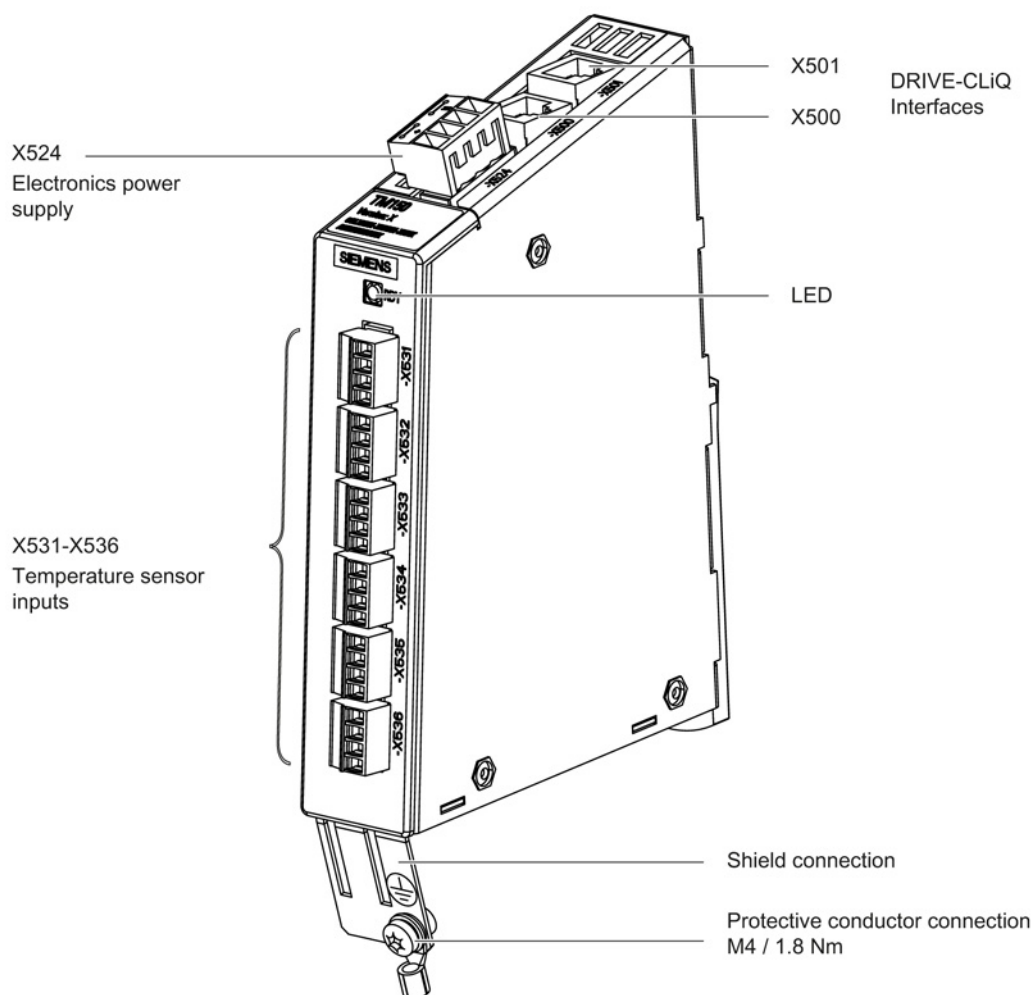
 


Figure 5-29 Interface overview of Terminal Module TM150

5.7.2.2 X500/X501 DRIVE-CLiQ interfaces

Table 5- 54 X500/X501: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply, max. 450 mA
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

 
Blanking covers (50 pcs) order number: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 100 m.

5.7.2.3 X524 Electronics power supply

Table 5- 55 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 V – 28.8 V)
	+	Electronics power supply	Current consumption (max./typ.): 0.5 A / 0.1 A
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm²			

The maximum cable length that can be connected is 10 m.

 
Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

5.7.2.4 X531-X536 temperature sensor inputs

Table 5- 56 X531-X536: Temperature sensor inputs

	Terminal	Function 1x2- / 2x2-wire	Function 3 and 4-wire	Technical data
	1	+ Temp (channel x)	+ (channel x)	Temperature sensor connection for sensors with 1x2 wires Connection of the 2nd measurement cable for sensors with 4-wires
	2	- Temp (channel x)	- (channel x)	Temperature sensor connection for sensors with 1x2 wires Connection of the 1st measurement cable for sensors with 3 and 4-wires.
	3	+ Temp (channel y)	+ I _c (constant current, positive channel x)	Temperature sensor connection for sensors with 2x2, 3 and 4-wires
	4	- Temp (channel y)	- I _c (constant current, negative channel x)	
Type: Spring-loaded terminal 3 (Page 359) Max. cross-section that can be connected: 1.5 mm ² Measuring current via temperature sensor connection: approx. 0.83 mA				

When connecting temperature sensors with 3 wires, a jumper must be inserted between X53x.2 and X53x.4.

Table 5- 57 Channel assignment

Terminal	Channel number [x] for 1x2, 3 and 4-wires	Channel number [y] for 2x2 wires
X531	0	6
X532	1	7
X533	2	8
X534	3	9
X535	4	10
X536	5	11

NOTICE**Damage to motor in the event of incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

NOTICE

Overheating of the motor through jumpering the temperature sensor connections

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

NOTICE

Overheating of the motor through cables with too high a resistance

Cable length and cable cross-section can falsify the temperature measurement (10 Ω cable resistance for a PT100 can falsify the measurement result by 10%). Damage to the motor can result if the overheating is not detected.

- Use only cable lengths ≤ 300 m.
- For cable lengths >100 m, use cables with a cross-section of ≥ 1 mm².

NOTICE

Device failure as a result of unshielded or incorrectly routed cables to temperature sensors

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential through a large surface area.
- Recommendation: Use suitable Motion Connect cables.

5.7.3 Connection examples

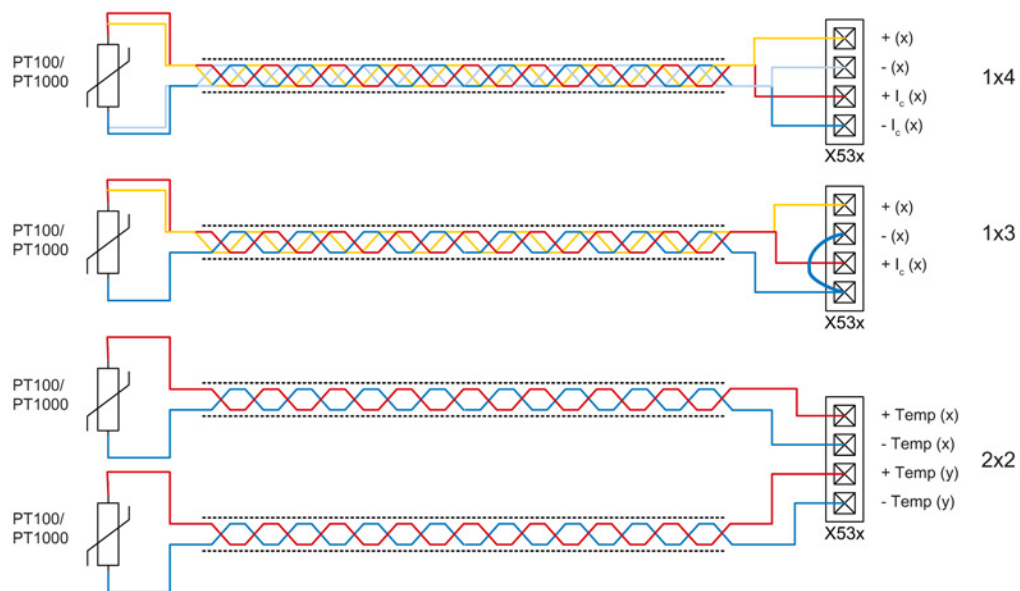


Figure 5-30 Connecting a PT100/PT1000 with 2x2, 3 and 4-wires to the temperature sensor inputs X53x of Terminal Module TM150

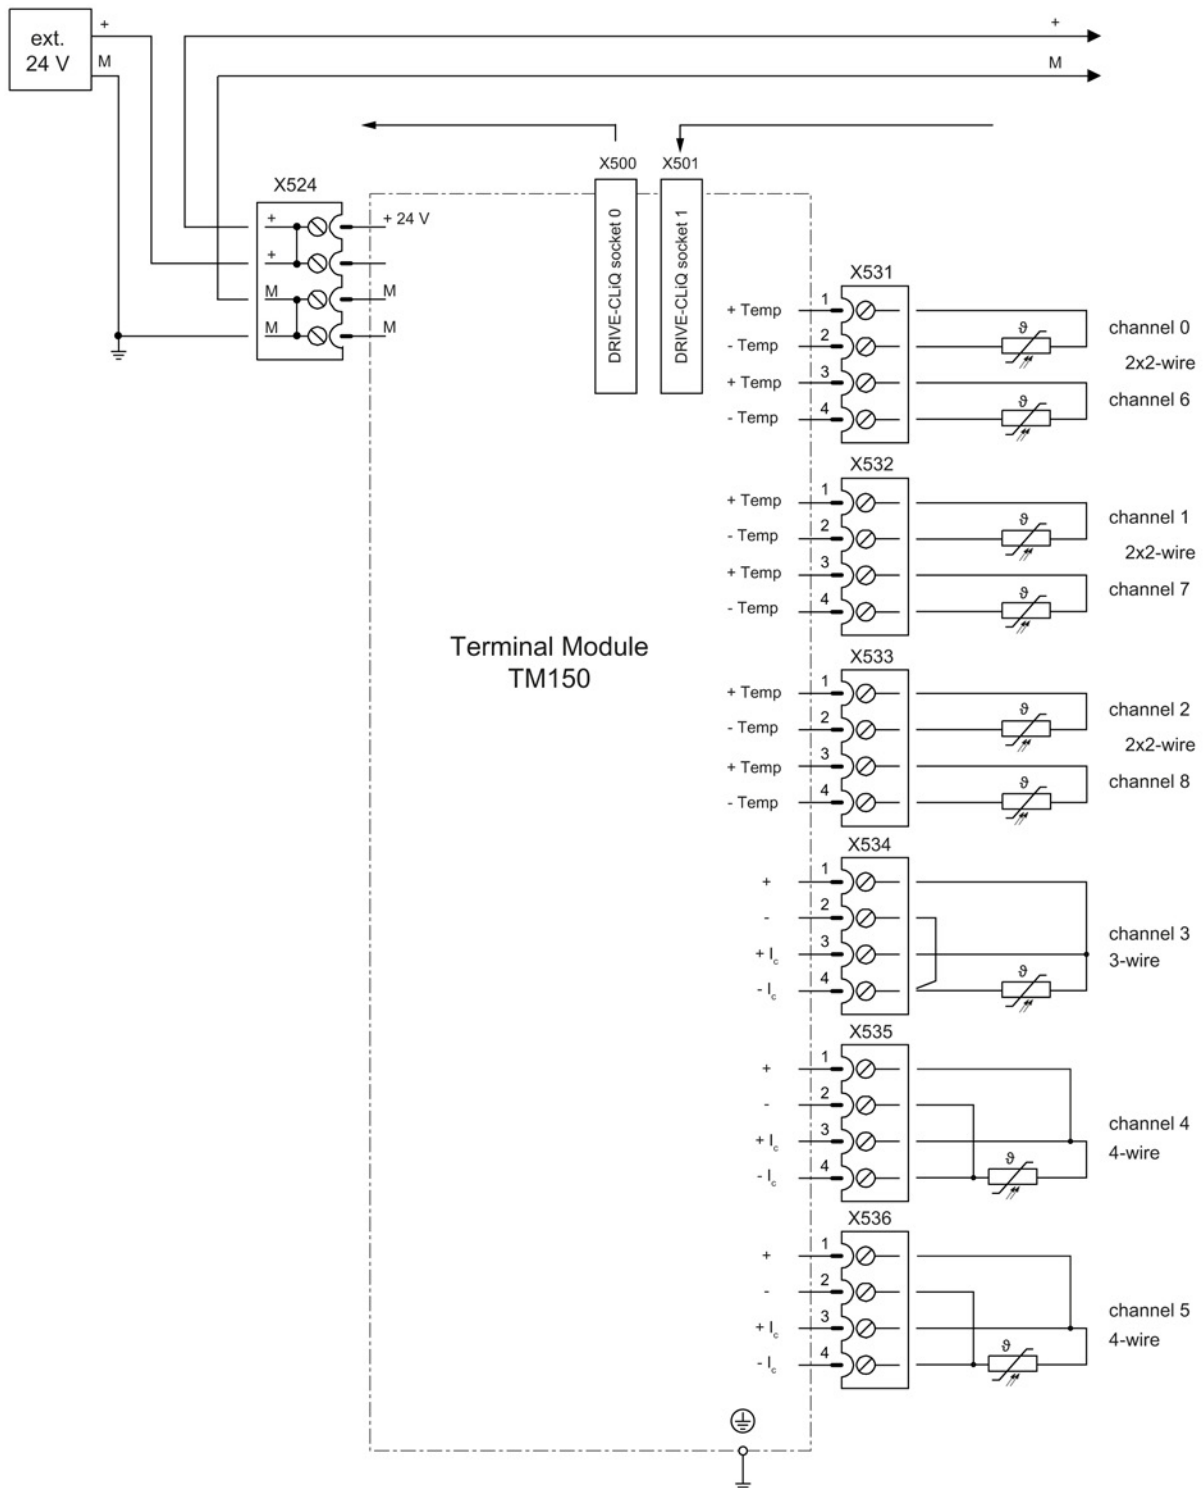


Figure 5-31 Connection example for a Terminal Module TM150

5.7.4 Meaning of the LED

5.7.4.1 Terminal Module TM150

Table 5- 58 Meaning of the LEDs at the Terminal Module TM150

LED	Color	Status	Description, cause	Remedy
READY	–	Off	The electronics power supply is missing or outside the permissible tolerance range.	Check the power supply.
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messages being reconfigured.	Remove and acknowledge the fault.
	Green/ Red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware has been downloaded. The system waits for POWER ON.	Carry out a POWER ON
	Green/ orange or red/ orange	Flashing light 2 Hz	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

5.7.5 Dimension drawing

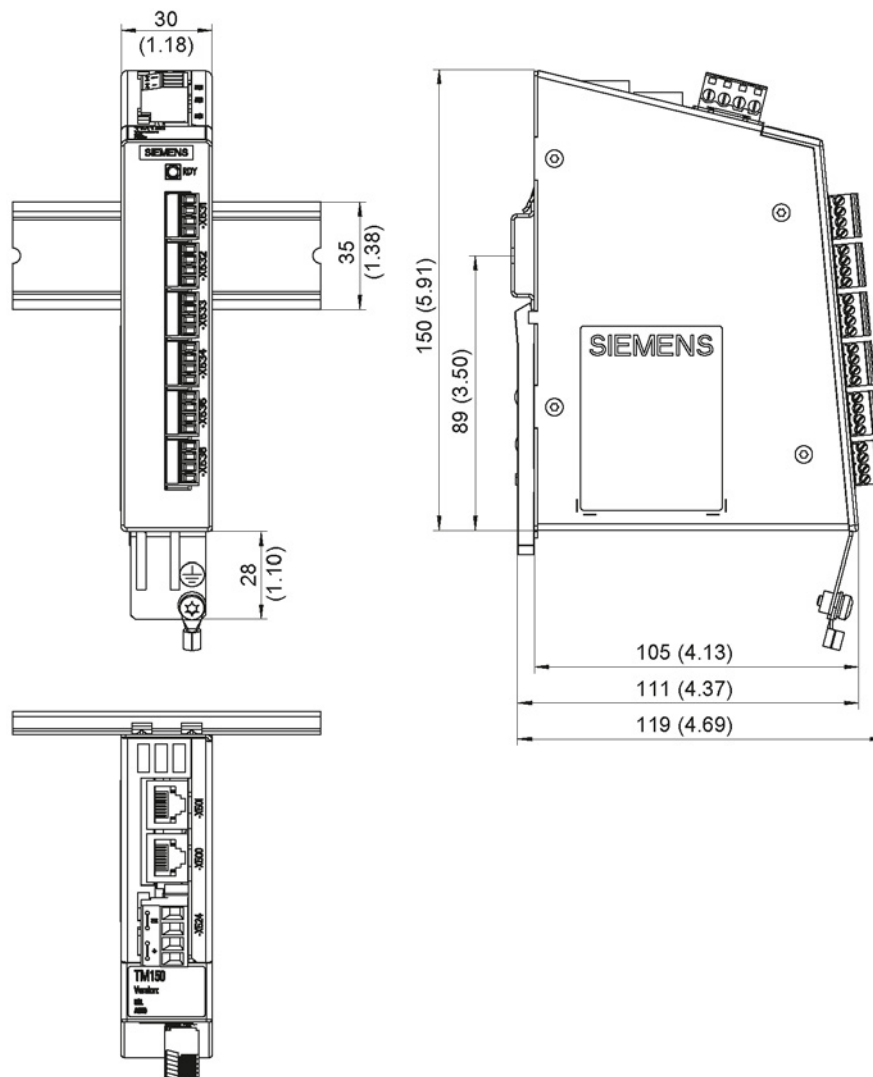


Figure 5-32 Dimension drawing of Terminal Module TM150, all data in mm and (inches)


5.7.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

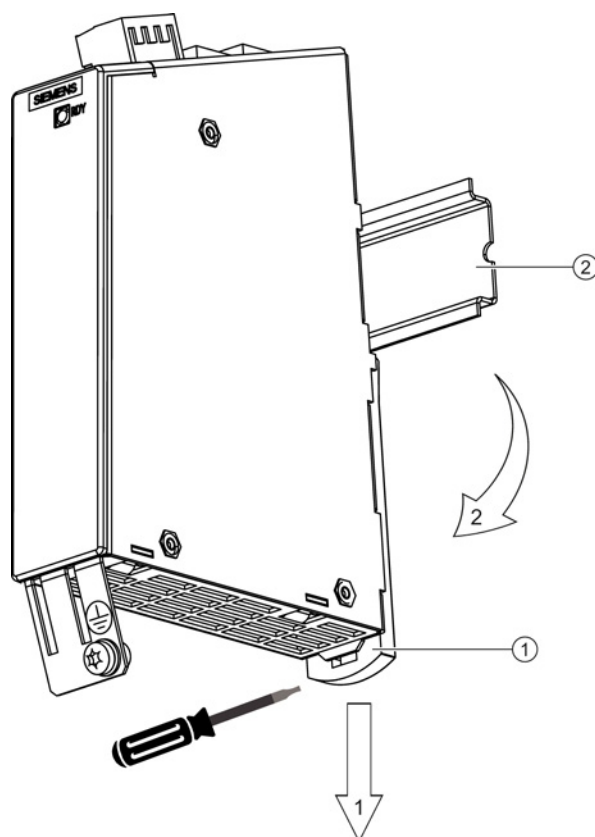


- ① Mounting slide
- ② Mounting rail

Figure 5-33 Removing a TM150 from a mounting rail

5.7.7 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

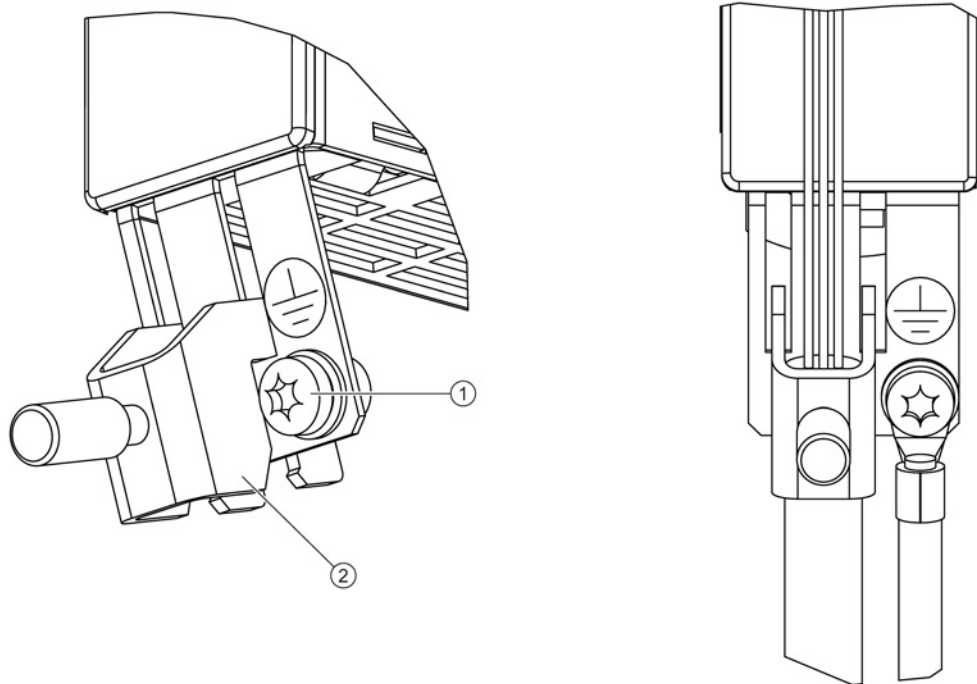

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 5-34 Shield support and protective conductor connection of the TM150

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

5.7.8 Technical data

Table 5- 59 Technical data

6SL3055-0AA00-3LA0	Unit	Value
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ)	A _{DC}	0,07
Power loss	W	1,6
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,4
Degree of protection	IP20	

Hub Modules

6.1 Safety instructions for Hub Modules

WARNING

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

NOTICE

Damage through use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note

Function equipotential bonding for distributed DRIVE-CLiQ nodes

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. This applies to all distributed DRIVE-CLiQ nodes such as DM20, SME2x, SME12x, etc.

Note

Malfunctions due to polluted DRIVE-CLiQ interfaces

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

6.2 DRIVE-CLiQ Hub Module DMC20

6.2.1 Description

The DRIVE-CLiQ DMC20 Hub Module is used to implement star-shaped distribution of a DRIVE-CLiQ line. With the DMC20, an axis grouping can be expanded with 5 DRIVE-CLiQ sockets for additional subgroups.

The component is especially suitable for applications which require DRIVE-CLiQ nodes to be removed in groups, without interrupting the DRIVE-CLiQ line and, therefore, the data exchange process.



WARNING

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and a reduced service life for the Hub Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Hub Module.

6.2.2 Interface description

6.2.2.1 Overview

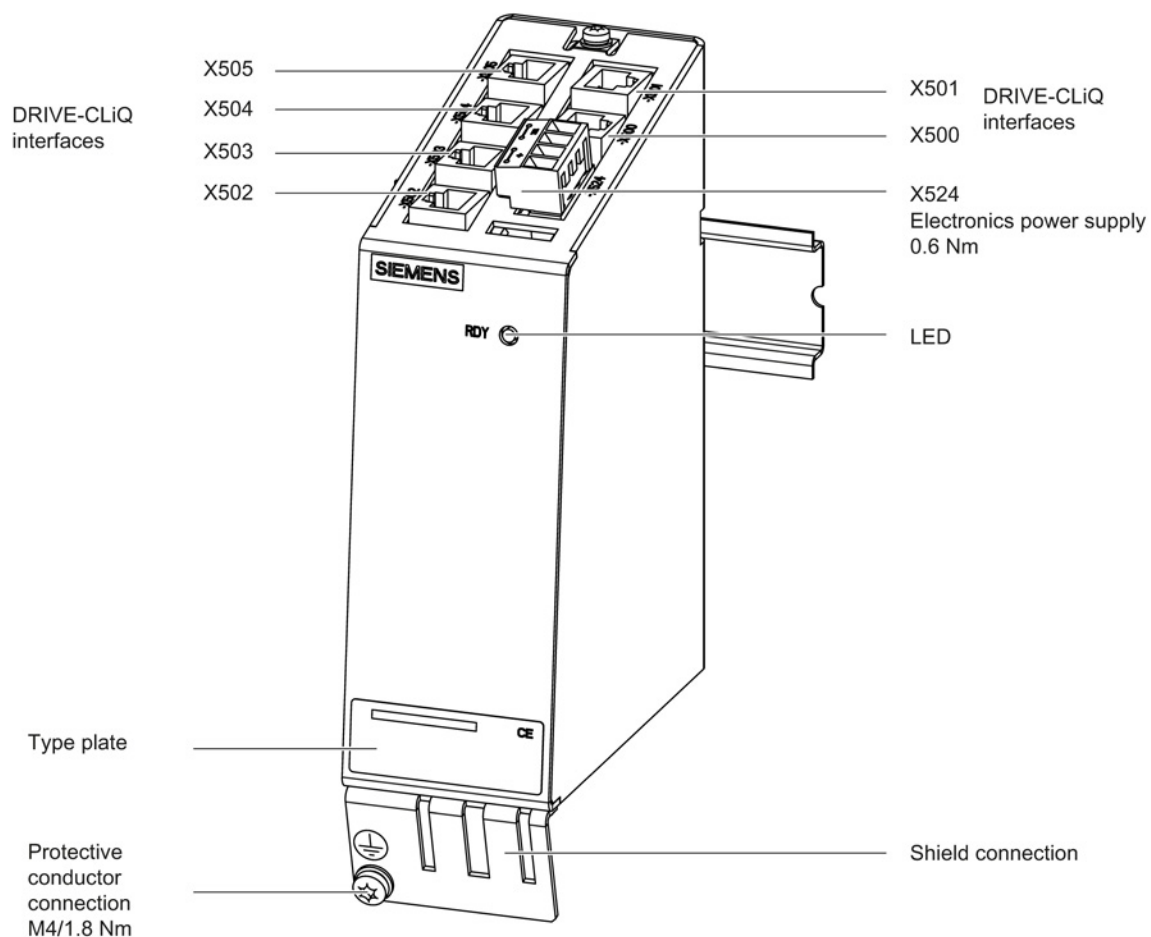
 


Figure 6-1 Interface overview of the DMC20

6.2.2.2 X500-X505 DRIVE-CLiQ interfaces

Table 6- 1 X500-X505: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.

 
Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used to establish connections. The maximum length of MOTION-CONNECT 500 is 100 m and for MOTION-CONNECT 800PLUS cables, 75 m.

6.2.2.3 X524 Electronics power supply

Table 6- 2 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.5 A Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Electronics power supply	
	M	Electronics ground	
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ participants.

6.2.3 Meaning of the LED

Table 6- 3 Description of the LEDs on the DRIVE-CLiQ Hub Module DMC20

LED	Color	Status	Description, cause	Remedy
READY	–	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messages being reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

6.2.4 Dimension drawing

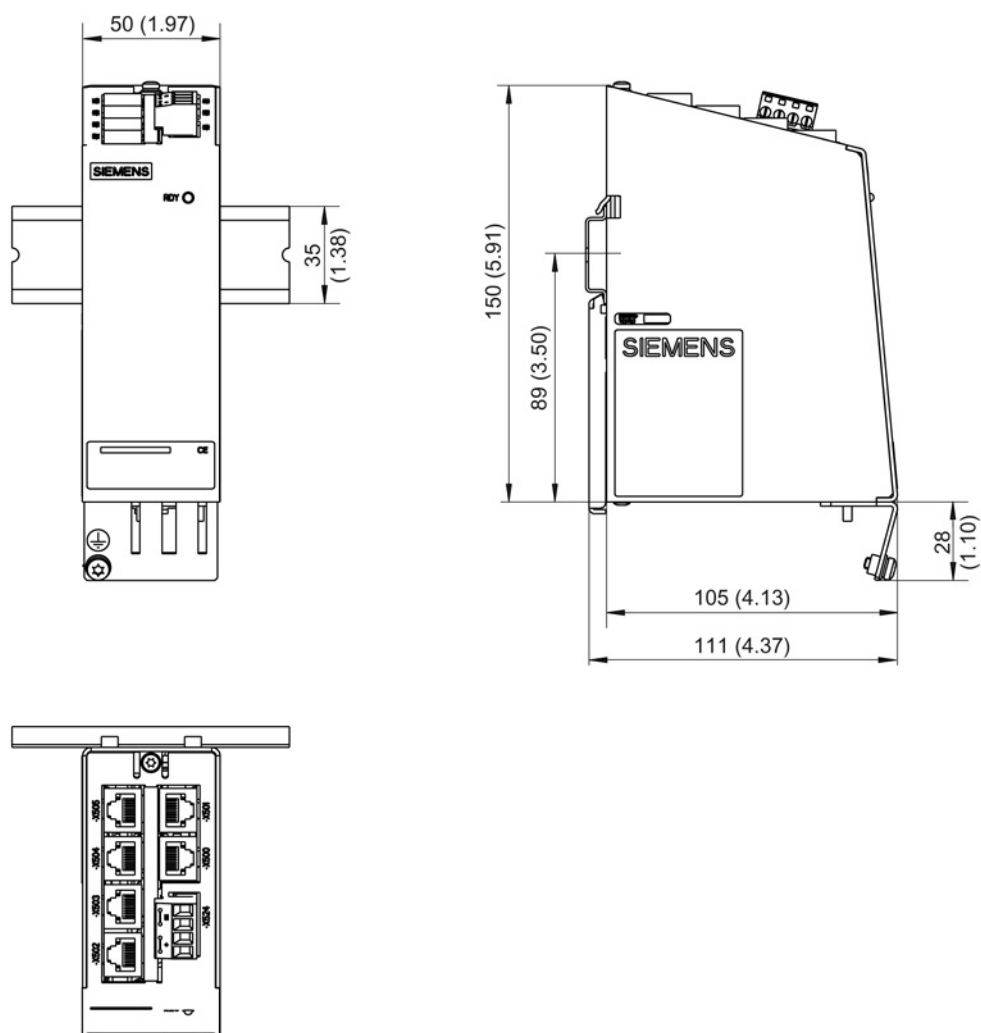


Figure 6-2 Dimension drawing of the DRIVE-CLiQ Hub Module DMC20, all data in mm and (inches)

6.2.5 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.


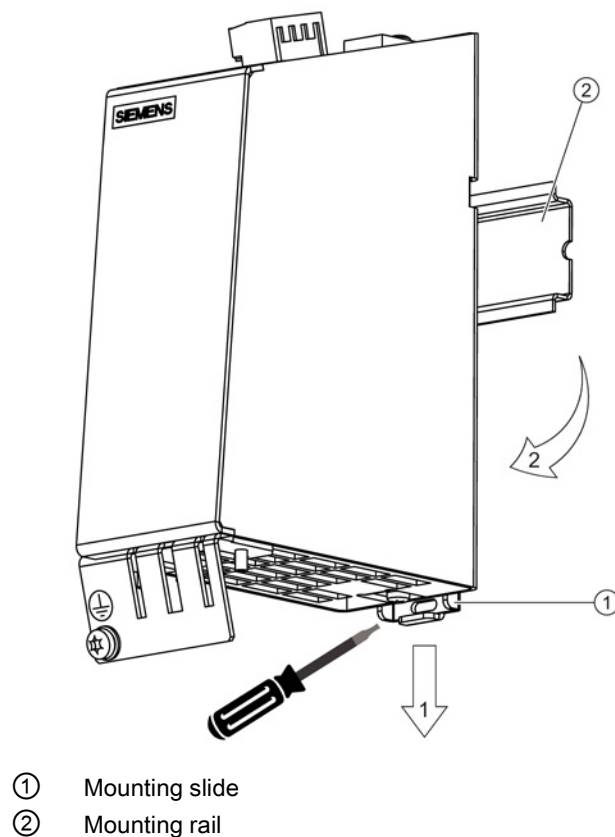


Figure 6-3 Removing from a DIN mounting rail

6.2.6 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

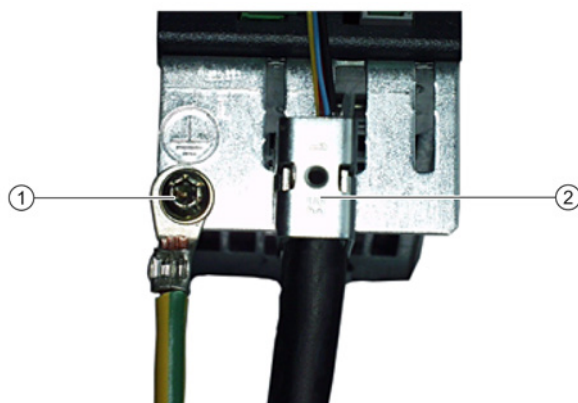

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 6-4 Shield support and protective conductor connection

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

6.2.7 Technical data

Table 6- 4 Technical data of the DMC20

6SL3055-0AA00-6AAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 V DC (20.4 ... 28.8)
Current (without DRIVE-CLiQ node)	A _{DC}	0,15
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,8

6.3 DRIVE-CLiQ Hub Module External DME20

6.3.1 Description

The DRIVE-CLiQ Hub Module External DME20 is used to implement star-shaped distribution of a DRIVE-CLiQ line. With the DME20, an axis grouping can be expanded with 5 DRIVE-CLiQ sockets for additional subgroups.

The component has degree of protection IP67 and is especially suitable for applications which require DRIVE-CLiQ nodes to be removed in groups, without interrupting the DRIVE-CLiQ line and therefore the data exchange.

NOTICE
Damage due to leaking plug connections If IP67 protection is not ensured, water or dirt can enter and lead to damage. <ul style="list-style-type: none">• Ensure that all connectors are correctly screwed into place and appropriately locked.

6.3.2 Interface description

6.3.2.1 Overview

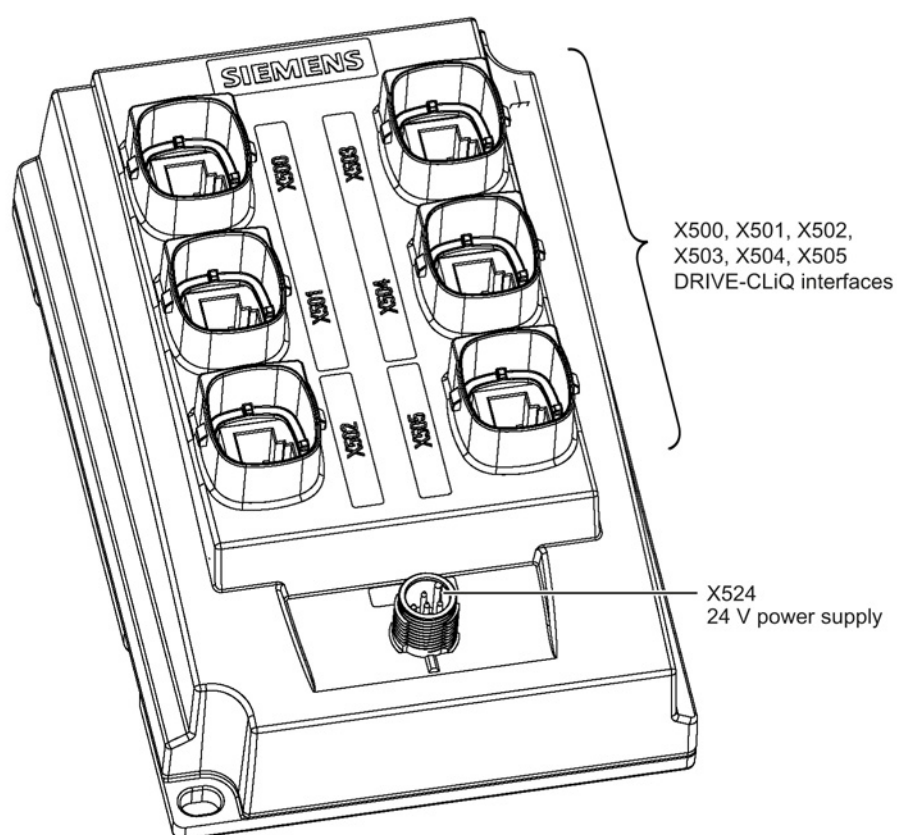
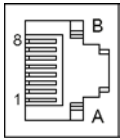


Figure 6-5 Interface overview of the DME20

6.3.2.2 X500-X505 DRIVE-CLiQ interfaces

Table 6- 5 X500-X505: DRIVE-CLiQ interfaces

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.


Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used to establish connections. The maximum length of MOTION-CONNECT 500 is 100 m and for MOTION-CONNECT 800PLUS cables, 75 m.

6.3.2.3 X524 Electronics power supply

Table 6- 6 X524: Electronics power supply

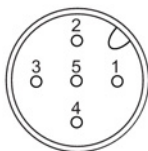	Pin	Designation	Technical data
	1	Electronics power supply	The connection voltage of 20.4 V to 28.8 V refers to the (terminal) voltage at the DME20. This must be taken into account when selecting the cable cross-section and supply cable lengths. Pins 1 and 2: jumpered internally Pins 3 and 4: jumpered internally
	2	Electronics power supply	
	3	Electronics ground	
	4	Electronics ground	
	5	not connected	
5-pin socket, max. connectable cross-section: 4 x 0.75 mm ²			

Note

The maximum cable length for the 24 V supply of the DME20 is 100 m.

In case no UL-compliant design is required, is the use of the following cables and connectors from Siemens is recommended:

Pre-assembled cables

Connecting cable for power supply with M12 plug and M12 socket,
A-coded, 4-pin,
order number: 6XV1801-5D..

Cables to be assembled by the user

Cable	Connector
24 V DC cable, 2-wire, 2 x 0.75 mm ² , order number: 6XV1812-8A	M12 plug connector, 4-pin, A-coded, order number: 6GK1907-0DC10-6AA3

Table 6- 7 Cable length P24 supply cable

Connected loads ¹⁾ m	1	2	3	4	5
Cross-section					
0.34 mm ²	75 m	45 m	30 m	25 m	20 m
2 x 0.34 mm ²	100 m	90 m	65 m	50 m	40 m
0.75 mm ²	100 m	100 m	75 m	60 m	50 m
2 x 0.75 mm ²	100 m	100 m	100 m	100 m	100 m
T _a = 55 °C 100 m DRIVE-CLiQ					

¹⁾ Connected motors with DRIVE-CLiQ encoder, DRIVE CLiQ mounted encoder SME

6.3.3 Dimension drawing


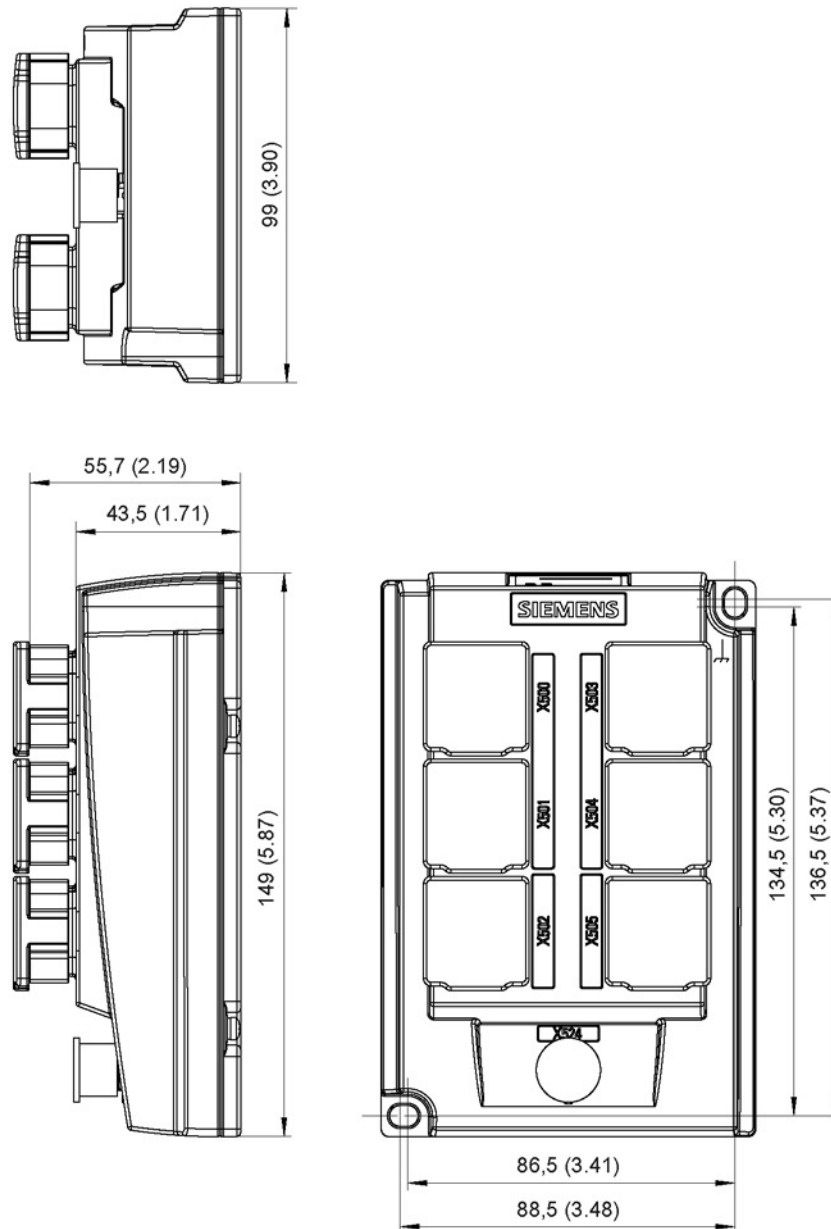


Figure 6-6 Dimension drawing of the DRIVE-CLiQ Hub Module External DME20, all data in mm and (inches)

6.3.4 Installation

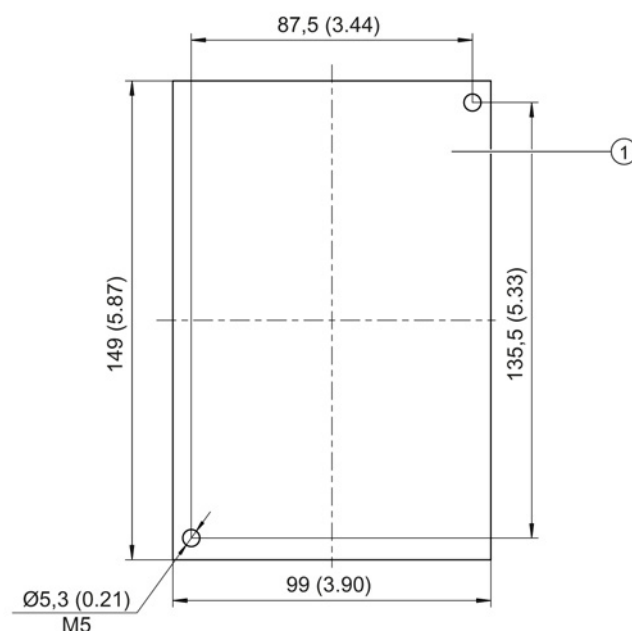

① Contact surface

Figure 6-7 Mounting dimensions DME20

Installation

1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
3. Mount the DME20 DRIVE-CLiQ Hub Module External on the contact surface. The tightening torque is 6.0 Nm.

6.3.5 Technical data

Table 6- 8 Technical data of the DME20

6SL3055-0AA00-6ABx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ node)	A _{DC}	0,15
PE/ground connection	Screwed to the housing M5 / 6 Nm	
Degree of protection		IP67
Weight	kg	0,8

6.3.6 Specifications for use with UL approval

Pre-assembled cables

Sensor/actuator cable, 5-pin, variable cable,
free cable end at straight socket M12-SPEEDCON,
cable length: 2, 5, 10, 15 m
SAC-5P-xxx-186/FS SCO
Up to 100 m on request

Phoenix Contact

Cables to be assembled by the user

Cable	Connector
Cable coil, black PUR/PVC, 5-pin Conductor colors: brown/white/blue/black/gray Cable length: 100 m SAC-5P-100.0-186/0.75 Order number: 1535590	Sensor/actuator connector, socket, straight, 5-pin, M12, A-coded Screw connection, metal knurl, cable gland Pg9 SACC-M12FS-5CON-PG9-M Order number: 1681486
Phoenix Contact	


Power supply

The DME20 must use one of the following 24 V power supplies with voltage limiting:

- SITOP 6EP1x.. or 6ES7307..
- SINAMICS Control Supply Module 6SL3100-1DE22-0Axx

Pin assignment of the cable

Table 6- 9 Connection to X524 electronics power supply

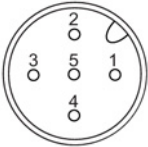	Pin	Designation	Technical data
	1 (brown) ¹⁾	Electronics power supply	The supply voltage of 20.4 V ... 28.8 V refers to the (terminal) voltage at the DME20. This must be taken into account when selecting the cable cross-section and supply cable lengths. Pins 1 and 2: jumpered internally Pins 3 and 4: jumpered internally
	2 (white) ¹⁾	Electronics power supply	
	3 (black) ¹⁾	Electronics ground	
	4 (blue) ¹⁾	Electronics ground	
	5 (gray) ¹⁾	Not connected internally	

¹⁾ The colors refer to the cable specified above

Voltage Sensing Module VSM10

7.1 Description

The Voltage Sensing Module VSM10 is a voltage sensing module that is used to sense the actual value of a voltage. For example, it can be used to sense the three-phase line supply voltage, which is then provided to the closed-loop control. The phase differential voltage can be measured, either grounded (in the delivery state) or isolated.

The Voltage Sensing Module can be used for the following line types:

- Up to 600 V 3-ph. AC for all line types
- Up to 690 V 3-ph. AC for networks with grounded start point and IT networks

A 100 V 3-ph. AC input is available for transducer transformers. It is not permissible to use both voltage connections simultaneously!

For booksize units, these components can be optionally used to increase the degree of ruggedness against irregularities in the line supply.

A VSM is already integrated for Active Interface Modules Chassis and Smart Line Modules Chassis.

In addition to the voltage sensing, a temperature sensor can be connector to the VSM10 to thermally monitor the line reactor. Further, the functionality of the line filter can checked using two analog inputs. All data recorded are transferred to the higher-level system via DRIVE-CLiQ.

The Voltage Sensing Module achieves radio interference category C2 with limit classes A1 for interference voltage and A for emitted interference.

Table 7- 1 Interface overview of the VSM10

Type	Quantity
Analog inputs	2
Voltage connection (690 V)	1 (3-phase)
Voltage connection (100 V)	1 (3-phase)
Temperature sensor input (KTY/PTC)	1
Neutral point grounding	1
DRIVE-CLiQ interface	1

7.2 Safety instructions for the Voltage Sensing Module (VSM10)

WARNING

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

WARNING

Risk of fire through overheating if there are insufficient ventilation clearances

Insufficient ventilation clearances lead to overheating with associated risk to persons as a result of smoke and fire. This can also result in more downtimes and reduced service lives of the Voltage Sensing Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Voltage Sensing Module.

NOTICE

Destruction of the VSM10 as a result of voltage measurements incorrectly carried out

If the voltage measurement is carried out incorrectly, the VSM10 can be destroyed as a result of the high voltage stress across the insulating clearance.

- When using long motor cables, it is not permissible that the output voltage of the Motor Module is directly measured at the motor.

NOTICE

Destruction of the VSM10 as a result of a terminal assignment which is not permissible

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being destroyed.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

NOTICE**Damage through use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note**Function equipotential bonding for distributed DRIVE-CLiQ nodes**

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. This applies to all distributed DRIVE-CLiQ nodes such as DM20, SME2x, SME12x, etc.

Note**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note**Malfunctions when using various generations of the VSM10 with parallel infeed**

When connecting infeeds in parallel, only Voltage Sensing Modules of the same generation may be used (either 6SL3053-0AA00-3AA0 or 6SL3053-0AA00-3AA1), as otherwise malfunctions can occur.

- Especially when replacing a VSM10 (Page 247) it is important that all of the other VSM10 connected in parallel are replaced.

7.3 Interface description

7.3.1 Overview

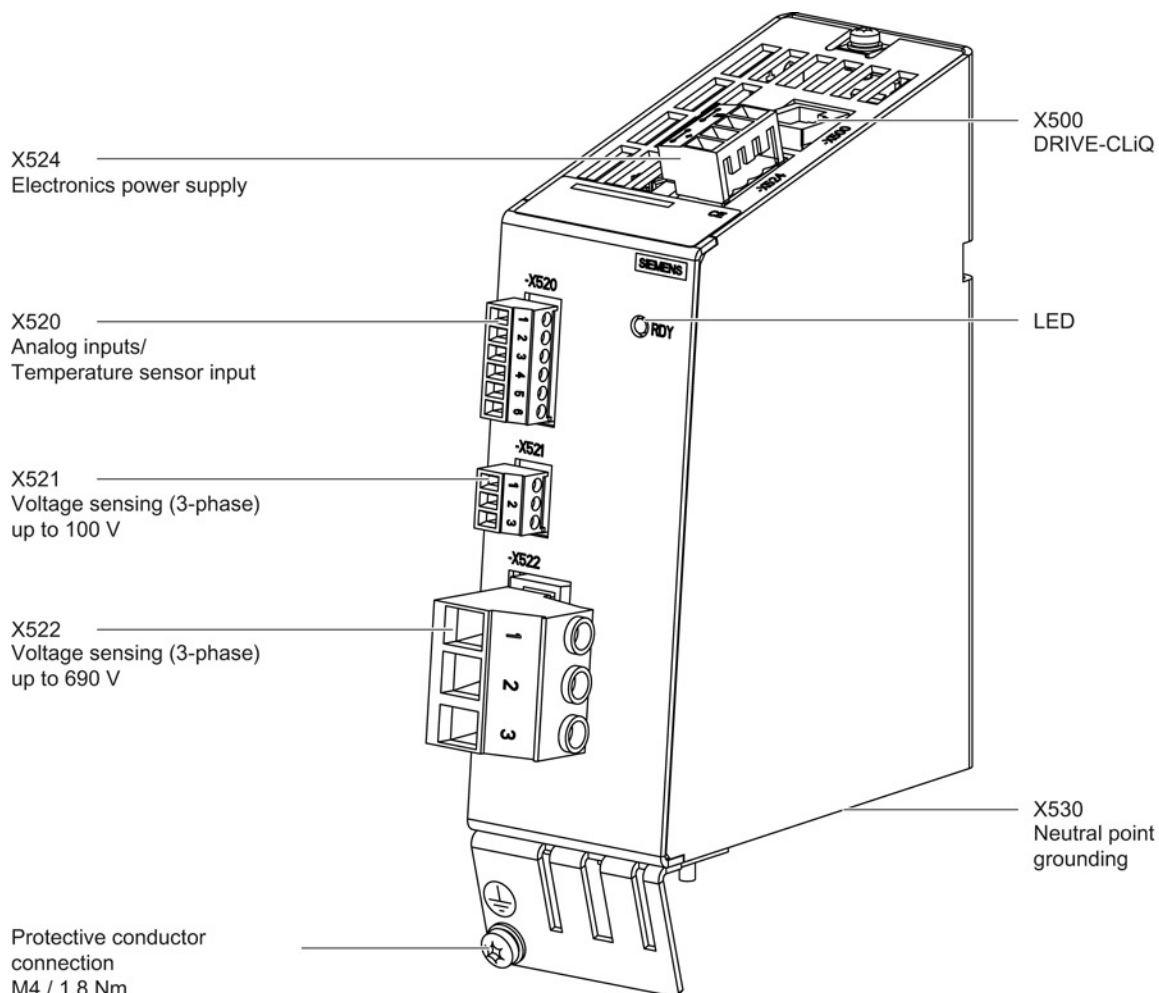


Figure 7-1 Interface overview of the VSM10

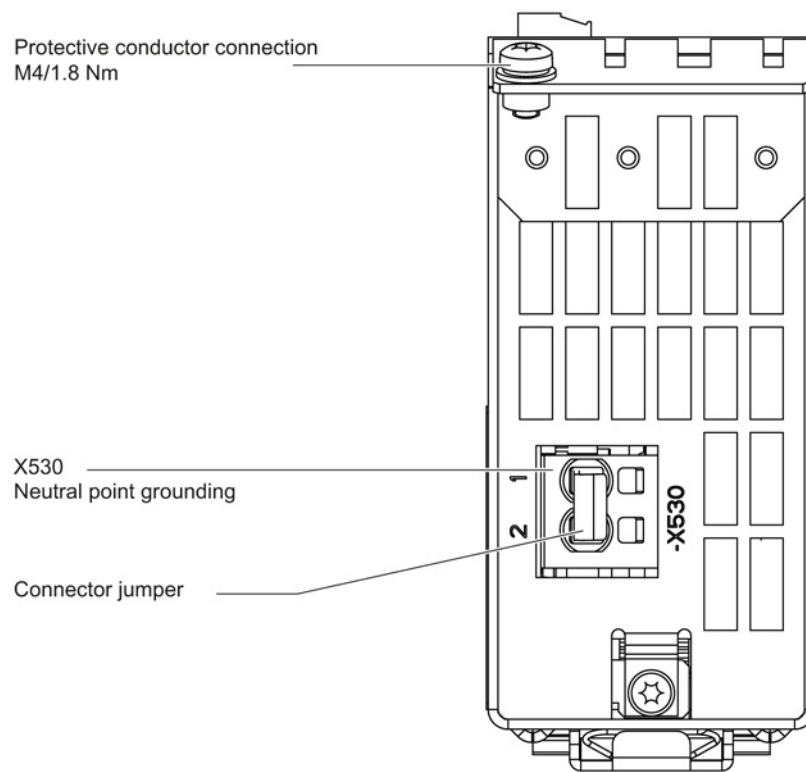
 


Figure 7-2 X530 interface at the VSM10 (view from below)

7.3.2 X500 DRIVE-CLiQ interface

Table 7- 2 X500: DRIVE-CLiQ interface

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

7.3.3 X520 analog inputs/temperature sensor

Table 7- 3 X520: Analog inputs/temperature sensor

	Terminal	Designation	Technical data
	1	AI 0-	2 analog differential inputs Voltage: -10 ... +10 V; Ri > 100 kΩ Resolution: 12 bits + sign
	2	AI 0+	
	3	AI 1-	
	4	AI 1+	
	5	+ Temp	Temperature sensor KTY84-1C130/PTC Measuring current via temperature sensor connection: 2 mA
	6	- Temp	

Type: Screw terminal 1 (Page 360)
Max. cross-section that can be connected: 1.5 mm²

Note**Permissible voltage values**

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results. The following voltages are permissible:

- Input voltage: ± 30 V (destruction limit)
- Common mode voltage: ± 10 V with respect to ground potential (increased errors when exceeded)

NOTICE**Damage to motor in the event of incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

Note

In order to minimize noise emission, shielded cables should be used.

Note

The maximum cable length for a shielded cable applied on both sides to the temperature sensor and to the analog inputs is 30 m.

 
**! WARNING****Danger to life due to electric shock in the event of voltage flashovers on the temperature sensor cable**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Only use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

7.3.4 X521 three-phase voltage sensing up to 100 V 3-ph. AC

Table 7- 4 X521: Voltage sensing 100 V

	Terminal	Designation	Technical data
	1	Phase voltage U	Connection to the voltage sensing for medium-voltage networks via a safe electrically isolated transformer Resistance to neutral point: ~500 kΩ Insulation resistance, neutral point - ground when the jumper is not inserted: >10 MΩ
	2	Phase voltage V	
	3	Phase voltage W	
Type: Screw terminal 1 (Page 360) Max. cross-section that can be connected: 1.5 mm ²			

NOTICE

 
Destruction of the VSM10 as a result of a terminal assignment which is not permissible

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being destroyed.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

7.3.5 X522 three-phase voltage sensing up to 690 V 3-ph. AC

Table 7- 5 X522: Voltage sensing 690 V

	Terminal	Designation	Technical data
	1	Phase voltage U	Directly connected to the line voltage sensing
	2	Phase voltage V	
	3	Phase voltage W	Resistance to neutral point: ~3500 kΩ Insulation resistance, neutral point - ground when the jumper is not inserted: >10 MΩ
Type: Screw terminal 5 (Page 360) Max. cross-section that can be connected: 6 mm²			

NOTICE

Destruction of the VSM10 as a result of a terminal assignment which is not permissible

The VSM10 has two terminal strips, X521 and X522, to sense the three-phase line supply voltage. A terminal assignment which is not permissible results in the module being destroyed.

- Use just one of the two terminal strips.
- Only connect voltages to terminal strip X521 up to a maximum 100 V (phase-to-phase) via a transformer.
- Only connect voltages to terminal strip X522 up to a maximum 690 V (phase-to-phase) directly.

NOTICE

Damage to the VSM10 through overcurrent with an incorrect connection sequence

Enabling the Line Module with an incorrect connection sequence results in overcurrent.

- Connect the line phases to the VSM10 in the same sequence as the one to the Line Module.

 
Note

Line voltage tap

If the configuration has a line filter, then the phase voltages for the VSM (X522) must be taken from in front of the line filter. If the configuration does not have a line filter, then X522 must be connected to the line side of the line reactor (voltages are taken from in front of the line reactor).

7.3.6 X524 Electronics power supply

Table 7- 6 X524: Electronics power supply

	Terminal	Designation	Technical data
	+	Electronics power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: max. 0.2 A Max. current via jumper in connector: 20 A
	+	Electronics power supply	
	M	Electronics ground	
	M	Electronics ground	
Type: Screw terminal 3 (Page 360) Max. cross-section that can be connected: 2.5 mm²			


The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

7.3.7 X530 neutral point grounding

Table 7- 7 X530: Neutral point grounding

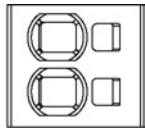	Terminal	Designation	Technical data
	1	Neutral point of the voltage sensing	Jumper inserted: Grounded measurement
	2	Ground potential	Jumper not inserted: isolated measurement
Type: Spring-loaded terminal 5 (Page 359) Max. cross-section that can be connected: 10 mm ²			

The Voltage Sensing Module is supplied with inserted jumper. When delivered, the neutral point is connected to the protective conductor via the connector jumper. A current flows to PE as a result of the voltage to be measured. This connection is removed by removing the connector jumper. The measurement is then electrically isolated.


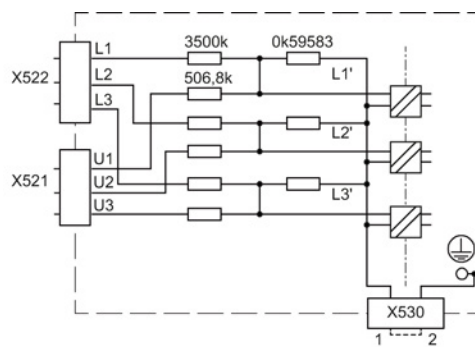


Figure 7-3 Internal circuit of the Voltage Sensing Module VSM10

7.4 Connection example

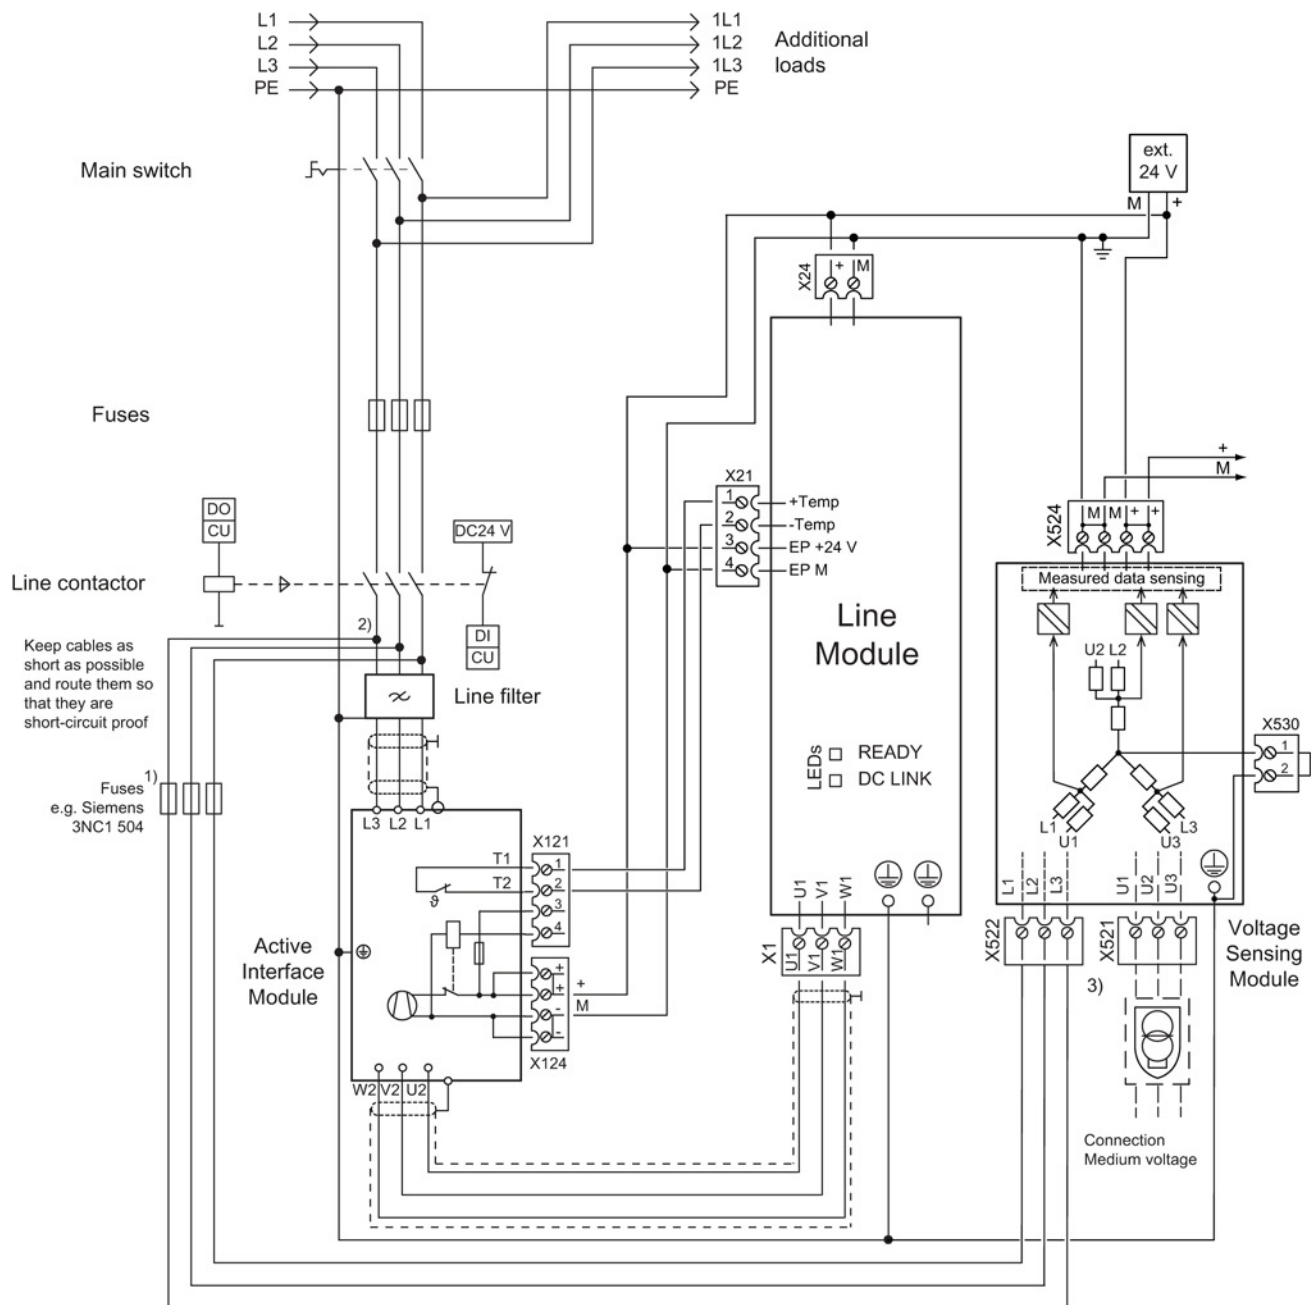

- 1) It is only possible to omit the fuses if the cables to the Voltage Sensing Module are routed so that no short-circuit or ground fault can be expected under normal operating conditions (short-circuit proof routing).
- 2) Tap the line voltage as actual value for the Voltage Sensing Module VSM10 corresponding to the system design, for example refer to the table.
- 3) Only one of the two terminals X521 and X522 may be used at one time!

Figure 7-4 Connection example for the VSM10 to measure the line voltage

Table 7- 8 Suggestions for terminals and cable lugs which can be used to connect a VSM10 to the line

Conductor cross-section	Connection via	For components
Up to 6 mm ²	Direct connection possible	Smart Line Modules 5 kW and 10 kW
6 mm ² to 16 mm ²	ST16-TWIN terminal blocks, if required with a reducing jumper and ST4-TWIN or ST2.5-TWIN (Phoenix Contact company)	Active Line Modules 16 kW Smart Line Modules 16 kW Active Interface Module 16 kW
16 mm ² to 50 mm ²	AGK10 UKH tap-off terminals with UKH terminals (Phoenix Contact company)	Active Line Modules 36 kW and 55 kW Smart Line Modules 36 kW and 55 kW Active Interface Module 36 kW and 55 kW
> 50 mm ²	Ring cable lug DIN 46234-8-2.5	Components with M8 connection bolts Active Line Modules 55 kW, 80 kW, and 120 kW Active Interface Module 80 kW and 120 kW
	Intermediate high-current connector, type UHV (Phoenix Contact) and ring cable lug DIN 46234-8-2.5	

7.5 Meaning of the LED

Table 7- 9 Meanings of the LEDs on the Voltage Sensing Module VSM10

LED	Color	Status	Description, cause	Remedy
READY	–	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messages being reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

7.6 Dimension drawing

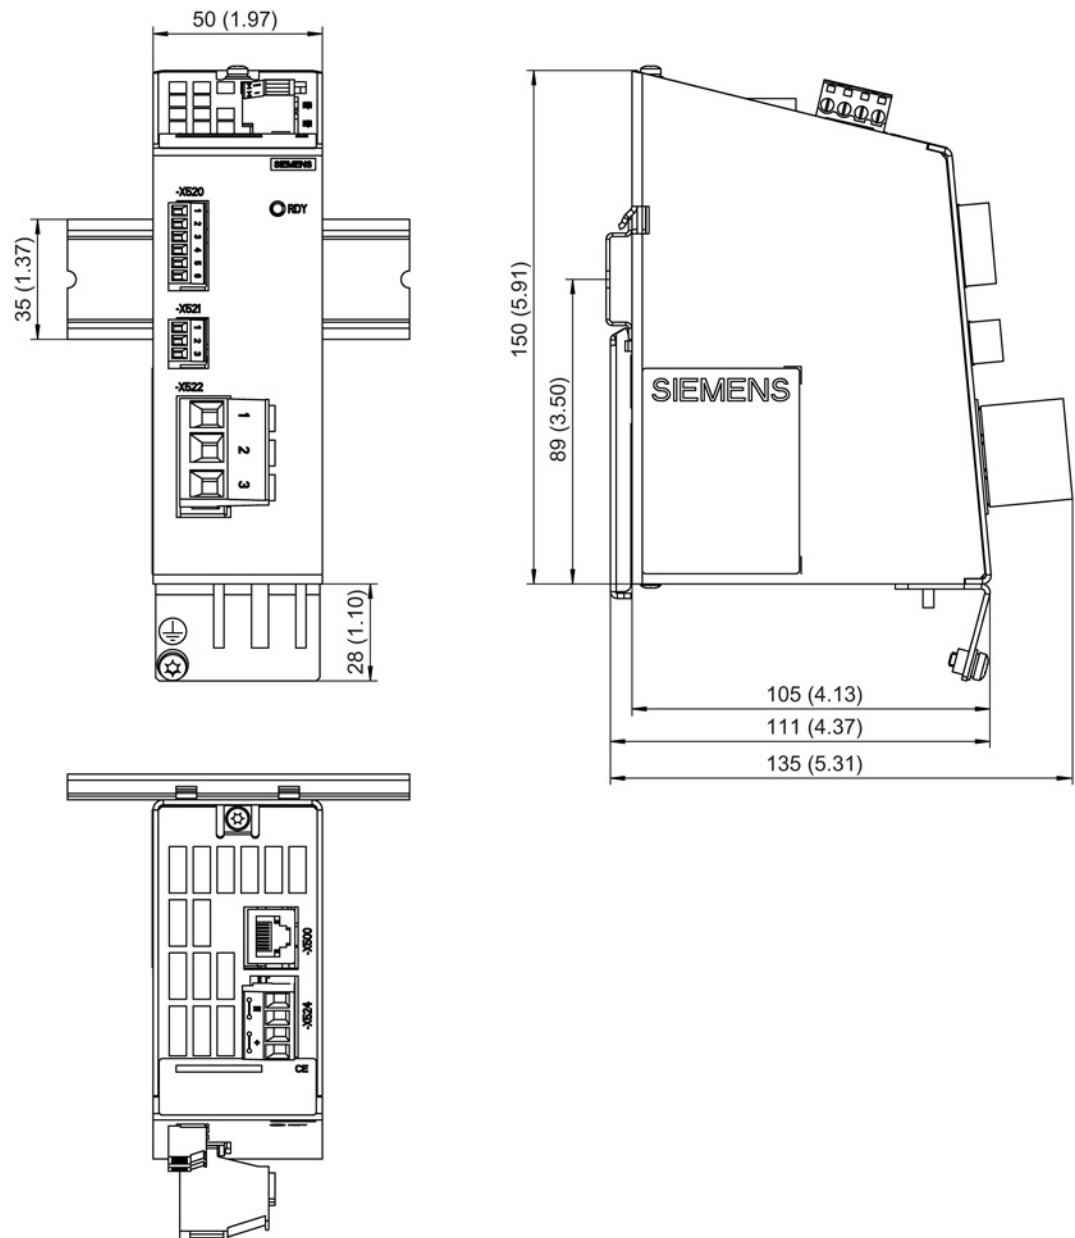


Figure 7-5 Dimension drawing of the Voltage Sensing Module VSM10, all data in mm and (inches)

7.7 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

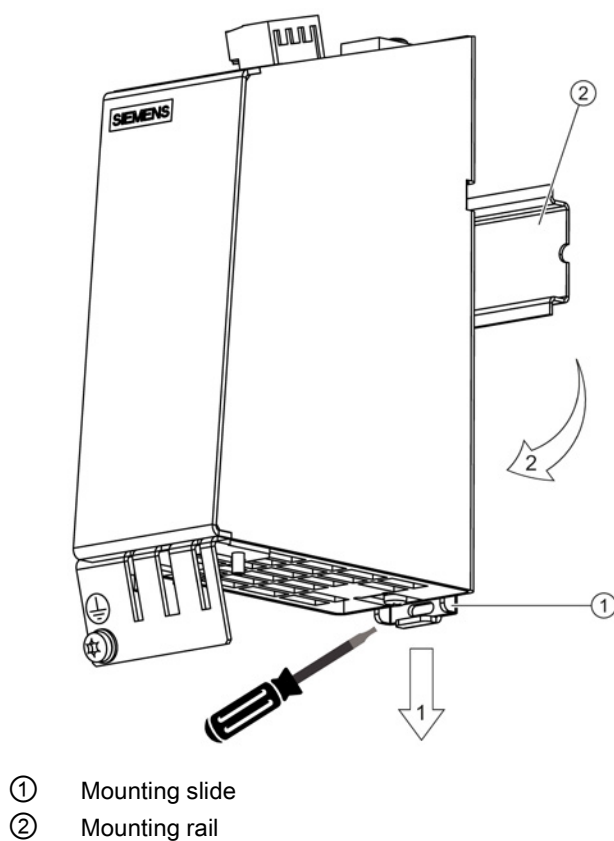



Figure 7-6 Removing from a DIN mounting rail

7.8 Protective conductor connection and shield support

The following shield connection clamps can be used on the bottom part of the component housing for shield connection of the analog inputs:

Shield connection clamp		Order number
Phoenix Contact	SK8	3025163
Phoenix Contact	SK14	3025176
Phoenix Contact	SK20	3025189
Weidmüller	KLBÜ CO1	1753311001

The following pictures show the shield contacts with a shield connection clamp from Weidmüller.

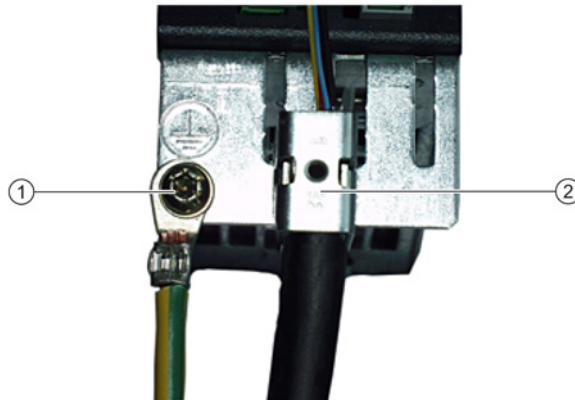

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 7-7 Shield support and protective conductor connection at the VSM10

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths


If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

7.9 Operation on an isolated-neutral system (IT system)

When using a Voltage Sensing Module on an insulated line supply (IT supply system), remove the connector jumper in terminal X530 at the lower side of the component.

Use two screwdrivers or a suitable tool in order to relieve the holding springs in the terminal and then withdraw the connector jumper.

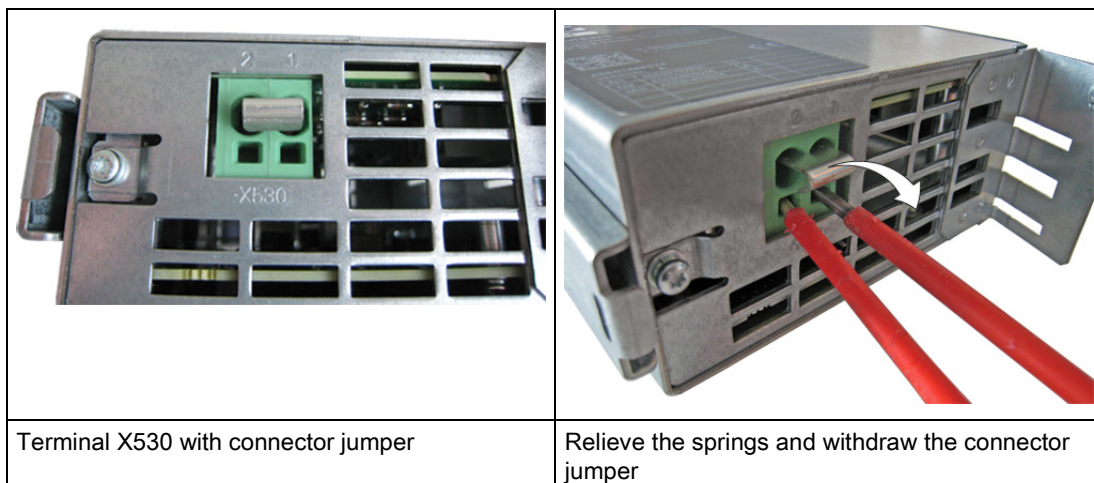

7.10 Technical data

Table 7- 10 Technical data


6SL3053-0AA00-3AA1	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without DRIVE-CLiQ)	A _{DC}	0,3
Power loss	W	< 10
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	1
Degree of protection		IP20

7.11 Service and maintenance

Replacing the Voltage Sensing Module VSM10 in Smart Line Modules Chassis and Active Interface Modules Chassis

When using a Voltage Sensing Module VSM10 in an Active Interface Module Chassis or Smart Line Module Chassis, it is essential that you observe the following application cases:

1. Replacing a VSM10 with order number 6SL3053-0AA00-3AA0 by a VSM10 with order number 6SL3053-0AA00-3AA1:
It is NOT permissible that the connector jumper ① at terminal X530 at the lower side of the VSM10 is removed!

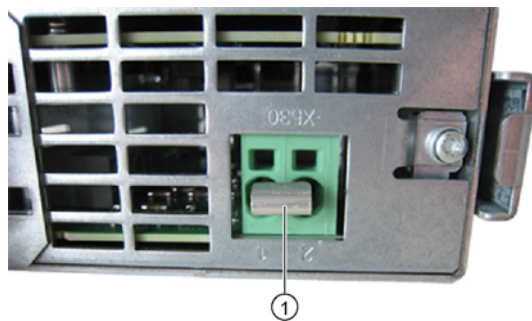

2. Replacing a VSM10 with order number 6SL3053-0AA00-3AA1 by a VSM10 with order number 6SL3053-0AA00-3AA1:
Proceed with the connector jumper ① at terminal X530 of the new VSM10 (spare part) just the same as at the previously installed VSM10.



DANGER

Danger to life due to electric shock when incorrectly replacing spare parts

If you remove the connector jumper at terminal X530 when replacing a VSM10 with order number 6SL3053-0AA00-3AA0 by a VSM10 with order number 6SL3053-0AA00-3AA1, then a hazardous voltage is present in the Active Interface Module Chassis or Smart Line Module Chassis. Death or serious injury can result when live parts are touched.

- When replacing the VSM10 proceed as specified above.

Encoder system connection

8.1 Introduction

The encoder system should be connected to SINAMICS S120 via DRIVE-CLiQ.

Motors with DRIVE-CLiQ interfaces (e.g. synchronous motors 1FK7 and 1FT7, and induction motors 1PH7 and 1PH8) are designed for this purpose. These motors simplify commissioning and diagnostics because the motor and encoder type are identified automatically.

Motors and external encoders without DRIVE-CLiQ interface

Motors without DRIVE-CLiQ interfaces, as well as external encoders without integrated DRIVE-CLiQ interface, must be connected via Sensor Modules to enable the encoder and temperature signals to be evaluated. Sensor Modules Cabinet-Mounted (SMC) are available for installation in control cabinets and Sensor Modules External (SME) for installation outside control cabinets.

If not otherwise specified, only one encoder system can be connected to each Sensor Module.

Motors and external encoders with DRIVE-CLiQ interface

Motors with DRIVE-CLiQ interfaces can be connected to the associated Motor Module directly via the MOTION-CONNECT DRIVE-CLiQ cables available. The connection of the MOTION-CONNECT DRIVE-CLiQ cable at the motor has degree of protection IP67.

The DRIVE-CLiQ interface supplies the motor encoder via the integrated 24 V DC supply and transfers the motor encoder and temperature signals and the electronic rating plate data, such as a unique identification number, rated data (voltage, current, torque) directly to the Control Unit. Different encoder cables are therefore no longer required for the various encoder types, e.g. resolvers or absolute encoders. Wiring can be effected throughout with a MOTION-CONNECT DRIVE-CLiQ cable.

DRIVE-CLiQ encoder

A DRIVE-CLiQ encoder is an absolute encoder with integrated DRIVE-CLiQ interface (see Chapter DRIVE-CLiQ encoder (Page 339)).

8.2 Overview of Sensor Modules

Sensor Modules Cabinet-Mounted (SMC)

Sensor Modules Cabinet-Mounted SMC10, SMC20, SMC30 and SMC40 can be ordered and configured separately. They are used when a motor with a DRIVE-CLiQ interface is not available or when external encoders in addition to the motor encoder are required. Only one encoder system may be connected to the Sensor Modules Cabinet-Mounted SMC10, SMC20 and SMC30. The SMC40 supports two encoder systems. The Sensor Modules Cabinet-Mounted evaluate these measuring systems and convert the calculated values to DRIVE-CLiQ. Motor or encoder data are not saved.

Note

The Sensor Module Cabinet-Mounted supplies the power to the encoder; however, the Sensor Module Cabinet-Mounted must be provided separately with 24 V DC.

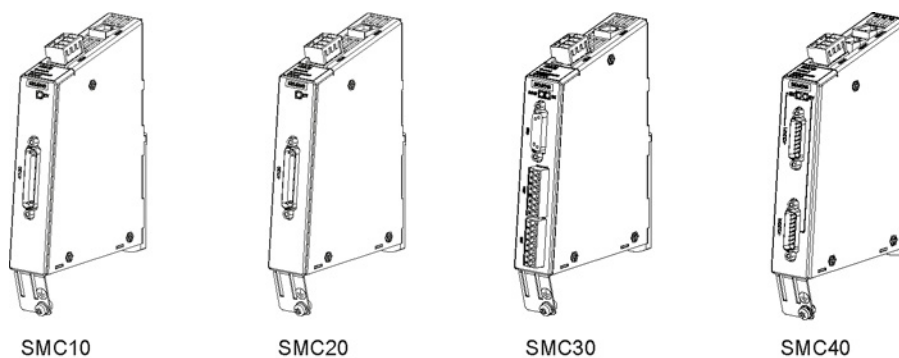


Figure 8-1 Overview of Sensor Modules Cabinet-Mounted (SMC)

Sensor Modules External (SME)

The Sensor Modules External SME20, SME25, SME120, and SME125 are only intended for use on machines (in North America, in accordance with the NFPA 79 "Electrical Standard for Industrial Machinery"). It is not permissible to connect DRIVE-CLiQ interfaces to other networks, e.g. Ethernet, but only to the DRIVE-CLiQ interfaces of the components.

Direct encoder systems outside the cabinet can be connected to the Sensor Modules External. The Sensor Modules External evaluate these encoder systems and convert the calculated values to DRIVE-CLiQ. No motor or encoder data is stored in the Sensor Modules External.

Note

The Sensor Module External provides the encoder power supply. The power supply for the Sensor Module External is provided from the connected DRIVE-CLiQ cable. This fact must be taken into consideration when the DRIVE-CLiQ cable is selected.

The Sensor Modules External have a higher degree of protection (IP67) and are therefore suitable for installation outside the cabinet.

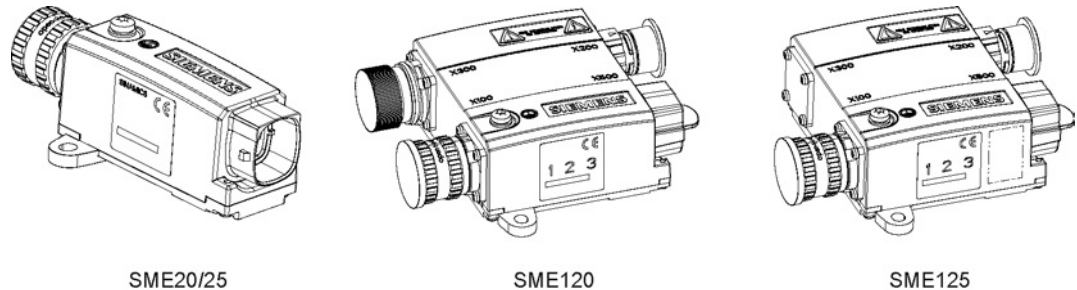


Figure 8-2 Overview of Sensor Modules External (SME)

Connectable encoder systems

Table 8- 1 Overview of the connectable encoder systems

Encoder systems	SMC				SME			
	SMC10	SMC20	SMC30	SMC40	SME20	SME25	SME120	SME125
Resolver	Yes	-	-	-	-	-	-	-
Incremental encoder sin/cos (1 Vpp) with/without reference signal	-	Yes	-	-	Yes	-	Yes	-
Incremental encoder TTL / HTL	-	-	Yes	-	-	-	-	-
Absolute encoder EnDat 2.1 ¹⁾	-	Yes	-	-	-	Yes	-	Yes
Absolute encoder EnDat 2.2 ²⁾	-	-	-	Yes	-	-	-	-
Absolute encoder SSI	-	Yes ³⁾	Yes ⁴⁾	-	-	Yes ³⁾	-	Yes ³⁾
Temperature evaluation	Yes	Yes	Yes	-	Yes ⁵⁾	-	Yes (protective electrical separation)	Yes (protective electrical separation)

¹⁾ Absolute encoders EnDat 2.2 with order designation 02 can also be connected

²⁾ Absolute encoders EnDat 2.2 with order designation 22 can be connected, absolute encoders EnDat 2.2 with order designation 02 cannot be connected

³⁾ Only possible for SSI encoders with 5 V supply

⁴⁾ Possible for SSI encoders with 5 V or 24 V supply

⁵⁾ With specified 6FX8002-2CA88 adapter cable

8.3 Safety instructions for Sensor Modules and encoders



WARNING

Danger to life if the fundamental safety instructions and remaining risks are not carefully observed

If the fundamental safety instructions and remaining risks in Chapter 1 (Page 19) are not observed, accidents involving severe injuries or death may occur.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.



WARNING

Danger to life due to fire if overheating occurs because of insufficient ventilation clearances

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Sensor Module Cabinet-Mounted.

Note

Risk of encoder failures by encoder signal disturbances

Unfavorable material combinations generate static electricity between the belt pulley and the belt. This electrostatic charge (several kV) can discharge via the motor shaft and the encoder which leads to disturbance of the encoder signals (encoder error).

- Use an antistatic version of the belt (special conductive polyurethane mixture).



WARNING

Danger to life due to electric shock when disconnecting and connecting encoder cables during operation

When opening plug connections in operation, arcs can result in severe injury or death.

- Only disconnect or connect the encoder cables to Siemens motors in a voltage-free state if hot-plugging has not been specifically released. When using direct measuring systems (third-party encoders), ask the manufacturer whether it is permissible to disconnect/connect under voltage.

NOTICE**Damage when connecting an impermissible number of encoder systems**

If more than the maximum permissible number of encoder systems are connected to a Sensor Module, this will cause damage.

- At a Sensor Module only connect the maximum permissible number of encoder systems.
 - Sensor Modules SMC10, SMC20 and SMC30: Single-encoder system
 - Sensor Module SMC40: Two-encoder systems
 - Sensor Modules SMEx: Single-encoder system

Note**Diminished level of interference immunity due to equalizing currents via the electronics ground**

Ensure that there are no electrical connections between the encoder system housing and the signal cables, or the encoder system electronics.

If this is not carefully observed, under certain circumstances the system will not be able to reach the required interference immunity level (there is then a danger of equalization currents flowing through the electronics ground).

NOTICE**Damage through use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

Note**Function equipotential bonding for distributed DRIVE-CLiQ nodes**

Integrate all of the components that are connected via DRIVE-CLiQ in the functional equipotential bonding concept. The connection should be preferably established by mounting on metallic bare machine and plant components that are connected with one another using an equipotential bonding conductor.

Alternatively, you can establish equipotential bonding using a conductor (min. 6 mm²), which as far as possible, is routed in parallel to the DRIVE-CLiQ cable. This applies to all distributed DRIVE-CLiQ nodes such as DM20, SME2x, SME12x, etc.

Note**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

Note

The safety information on the Sensor Module must be observed.

After the product has served its lifetime, the individual parts should be disposed of in compliance with local regulations.

8.4 Sensor Module Cabinet-Mounted SMC10

8.4.1 Description

The Sensor Module Cabinet-Mounted SMC10 evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature via DRIVE-CLiQ to the Control Unit.

The SMC10 is used to evaluate sensor signals from resolvers.

8.4.2 Interface description

8.4.2.1 Overview

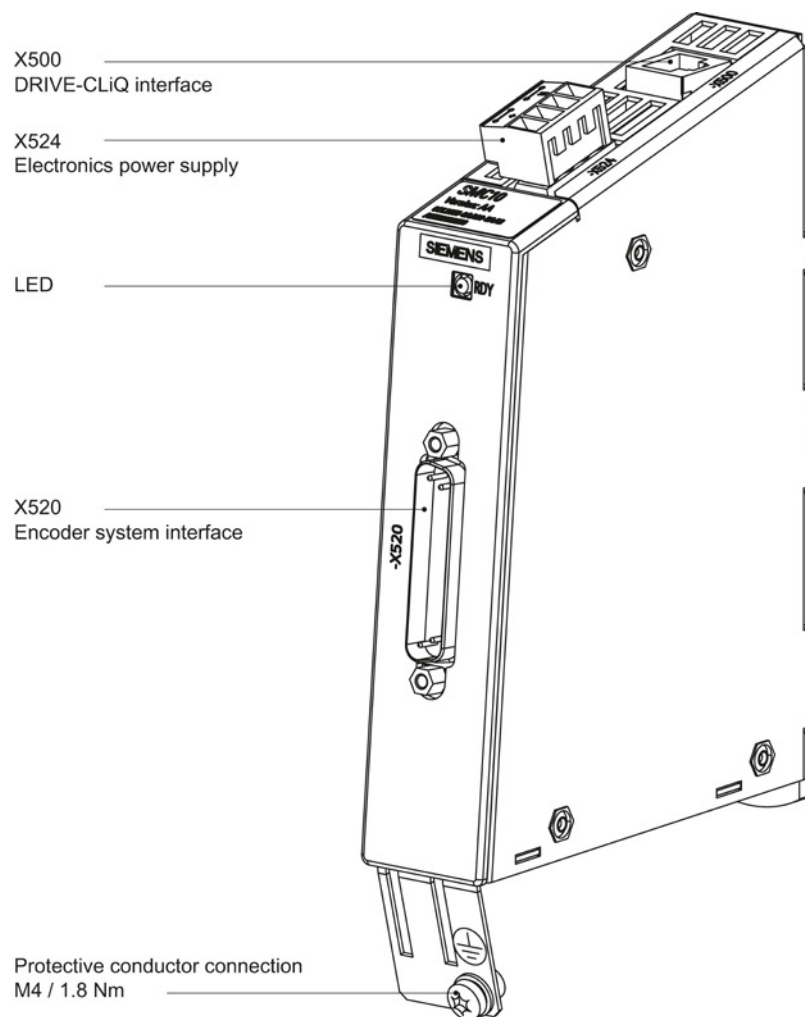
 


Figure 8-3 Interface overview for the SMC10

8.4.2.2 X500 DRIVE-CLiQ interface

Table 8- 2 X500: DRIVE-CLiQ interface

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

8.4.2.3 X520 encoder system interface

Table 8- 3 X520: Encoder system interface

	Pin	Signal name	Technical data
	1	Reserved, do not use	
	2	Reserved, do not use	
	3	S2	Resolver signal A (sin+)
	4	S4	Inverted resolver signal A (sin-)
	5	Ground	Ground (for internal shield)
	6	S1	Resolver signal B (cos+)
	7	S3	Inverted resolver signal B (cos-)
	8	Ground	Ground (for internal shield)
	9	R1	Resolver excitation positive
	10	Reserved, do not use	
	11	R2	Resolver excitation negative
	12	Reserved, do not use	
	13	+ Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	14	Reserved, do not use	
	15	Reserved, do not use	
	16	Reserved, do not use	
	17	Reserved, do not use	
	18	Reserved, do not use	
	19	Reserved, do not use	
	20	Reserved, do not use	
	21	Reserved, do not use	
	22	Reserved, do not use	
	23	Reserved, do not use	
	24	Ground	Ground (for internal shield)
	25	- Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC
Connector type:	25-pin SUB D connector		
Measuring current via temperature sensor connection: 2 mA			

¹⁾ Accuracy of temperature measurement:

- KTY: $\pm 7^{\circ}\text{C}$ (including evaluation)
- PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.



! WARNING

Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.4.2.4 X524 Electronics power supply

Table 8- 4 X524: Electronics power supply

	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.35 A
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.4.3 Connection example

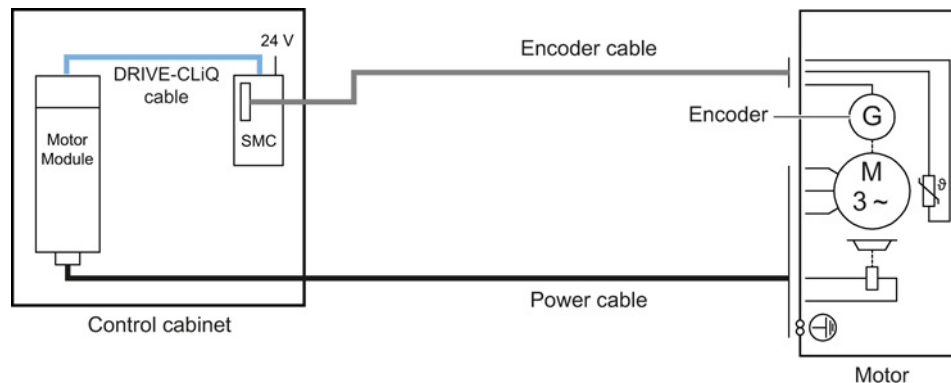


Figure 8-4 Connection of an encoder system via a Sensor Module Cabinet-Mounted (SMC) for a motor without a DRIVE-CLiQ interface

8.4.4 Meaning of the LED

Table 8- 5 Meaning of the LED on the Sensor Module Cabinet-Mounted SMC10

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated regardless of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

8.4.5 Dimension drawing

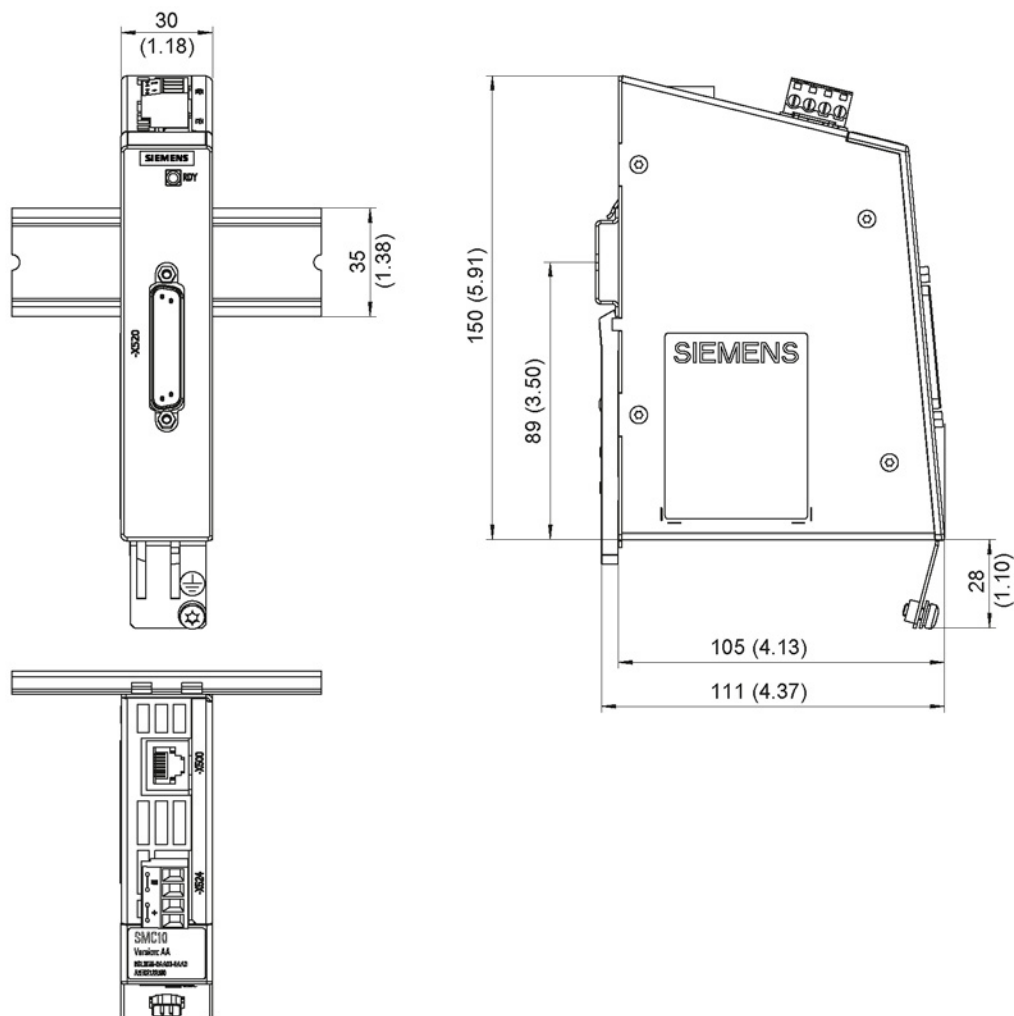


Figure 8-5 Dimension drawing of the Sensor Module Cabinet SMC10, all dimensions in mm and (inches)


8.4.6 Mounting

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

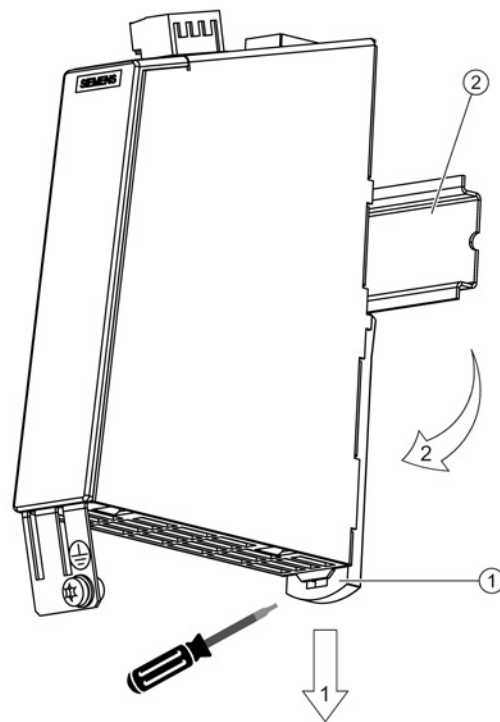

- ① Mounting slide
- ② Mounting rail

Figure 8-6 Removing from a DIN mounting rail

8.4.7 Technical data

Table 8- 6 Technical data

6SL3055-0AA00-5AAx	Unit	Value
Electronics power supply		
Voltage	V_{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A_{DC}	$\leq 0,20$
Current (with encoder system)	A_{DC}	$\leq 0,35$
Power loss	W	≤ 10
Specification		
Transformation ratio of the resolver (\ddot{u})		0,5
Excitation voltage on the SMC10 when $\ddot{u}=0.5$	V_{rms}	4,1
Amplitude monitoring threshold (secondary tracks) of the SMC10	V_{rms}	1
Excitation voltage (cannot be parameterized)	V_{rms}	4,1
Excitation frequency (synchronized to the current controller clock cycle)	kHz	5 to 16
PE/ground connection	At the housing with M4/1.8 Nm screw	
Max. encoder cable length	m	130
Weight	kg	0,45
Degree of protection		IP20 or IPXXB

Table 8- 7 Max. frequency that can be evaluated (speed)

Resolver		Max. speed resolver / motor		
Number of poles	Number of pole pairs	8 kHz/125 μ sec	4 kHz/250 μ sec	2 kHz/500 μ sec
2-pole	1	120000 rpm	60000 rpm	30000 rpm
4-pole	2	60000 rpm	30000 rpm	15000 rpm
6-pole	3	40000 rpm	20000 rpm	10000 rpm
8-pole	4	30000 rpm	15000 rpm	7500 rpm

The ratio between the ohmic resistance R and the inductance L (the primary winding of the resolver) determines whether the resolver can be evaluated with the SMC10. See the following diagram:

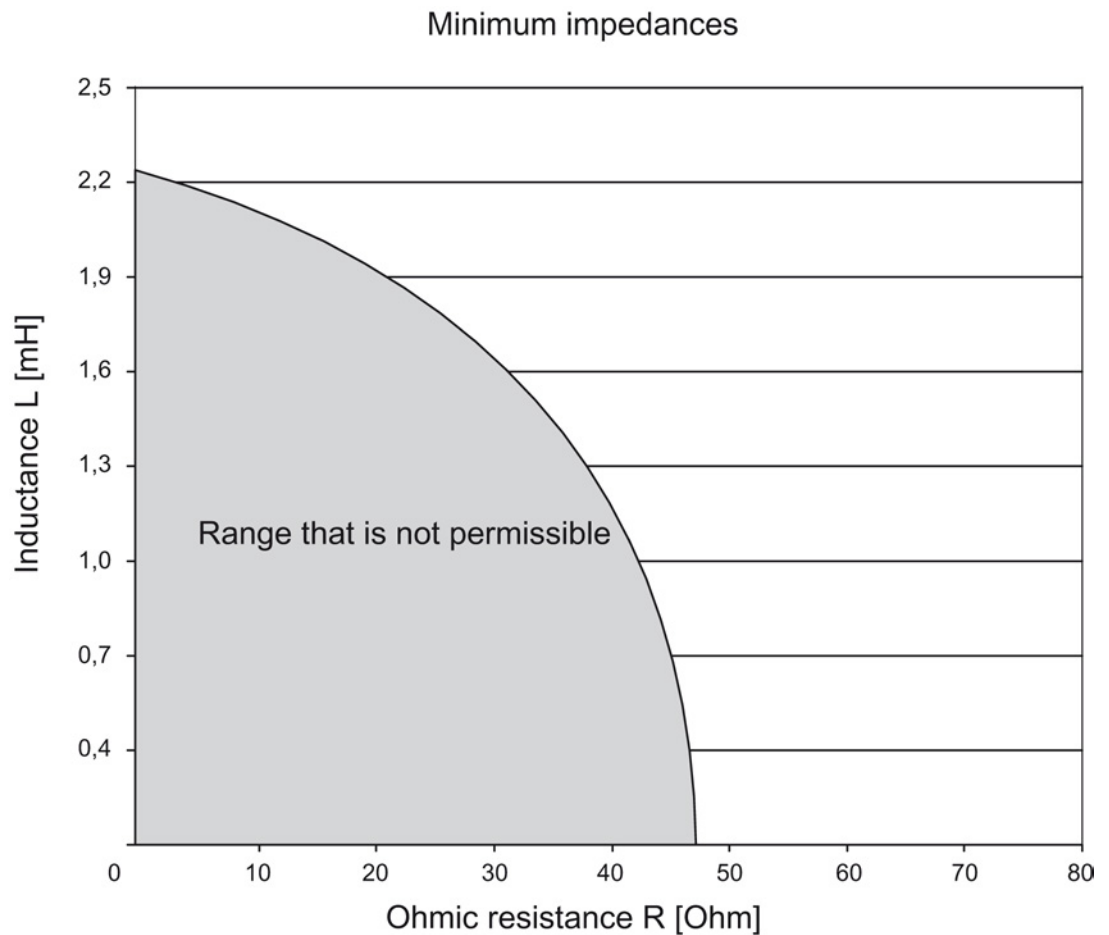


Figure 8-7 Connectable impedances with an excitation frequency $f = 5000$ Hz

8.5 Sensor Module Cabinet-Mounted SMC20

8.5.1 Description

The Sensor Module Cabinet-Mounted SMC20 evaluates encoder signals and transmits the speed, actual position value, rotor position and, if necessary, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC20 is used to evaluate encoder signals from incremental encoders with SIN/COS (1 Vpp) or absolute encoders with EnDat 2.1. EnDat 2.2 order designation 02 or SSI.

8.5.2 Interface description

8.5.2.1 Overview

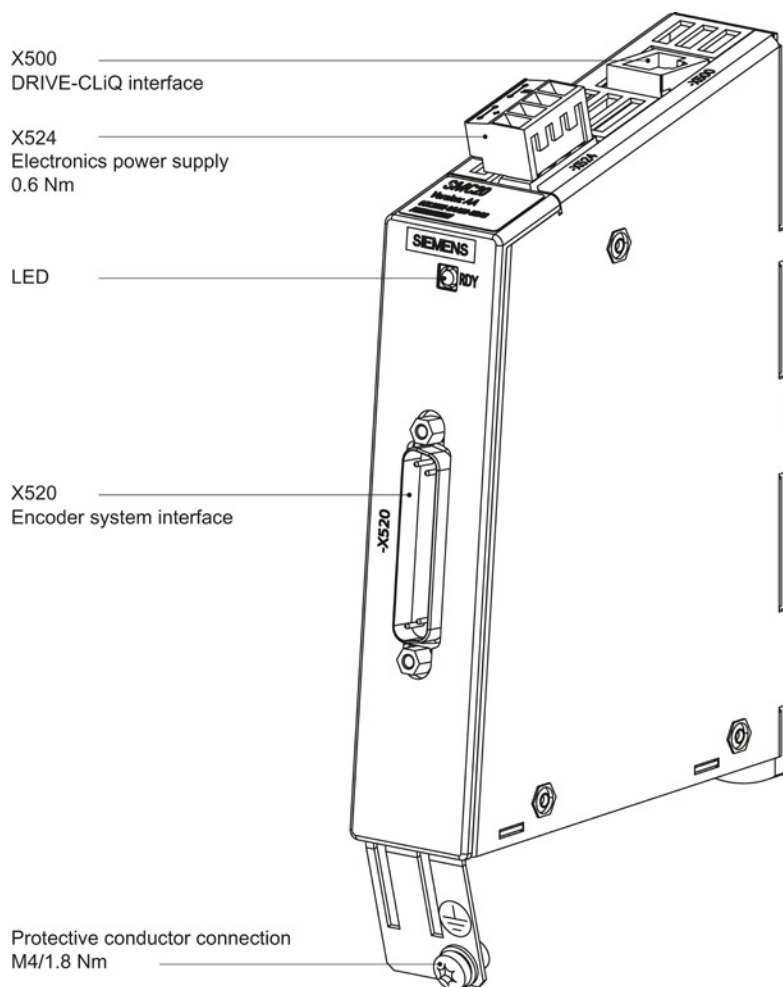
 


Figure 8-8 Interface description of the SMC20

8.5.2.2 X500 DRIVE-CLiQ interface

Table 8- 8 X500: DRIVE-CLiQ interface

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

8.5.2.3 X520 encoder system interface

Table 8- 9 X520: Encoder system interface

	Pin	Signal name	Technical data
	1	P encoder	Encoder power supply
	2	M encoder	Ground for encoder power supply
	3	A	Incremental signal A
	4	A*	Inverse incremental signal A
	5	Ground	Ground (for internal shield)
	6	B	Incremental signal B
	7	B*	Inverse incremental signal B
	8	Ground	Ground (for internal shield)
	9	Reserved, do not use	
	10	Clock	Clock, EnDat interface, SSI clock
	11	Reserved, do not use	
	12	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	13	+Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	14	P sense	Sense input of encoder power supply
	15	Data	Data, EnDat interface, SSI data
	16	M sense	Ground sense input encoder power supply
	17	R	Reference signal R
	18	R*	Inverse reference signal R
	19	C	Absolute track signal C
	20	C*	Inverse absolute track signal C
	21	D	Absolute track signal D
	22	D*	Inverse absolute track signal D
	23	Data*	Inverse data, EnDat interface, Inverse SSI data
	24	Ground	Ground (for internal shield)
	25	-Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC
Connector type:	25-pin SUB D connector		
Measuring current via temperature sensor connection: 2 mA			

¹⁾ Accuracy of the temperature measurement:

- KTY: $\pm 7^{\circ}\text{C}$ (including evaluation)
- PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)

NOTICE**Damage to motor in the event of incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**! WARNING****Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.5.2.4 X524 Electronics power supply

Table 8- 10 X524: Electronics power supply

	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.35 A
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.5.3 Connection example

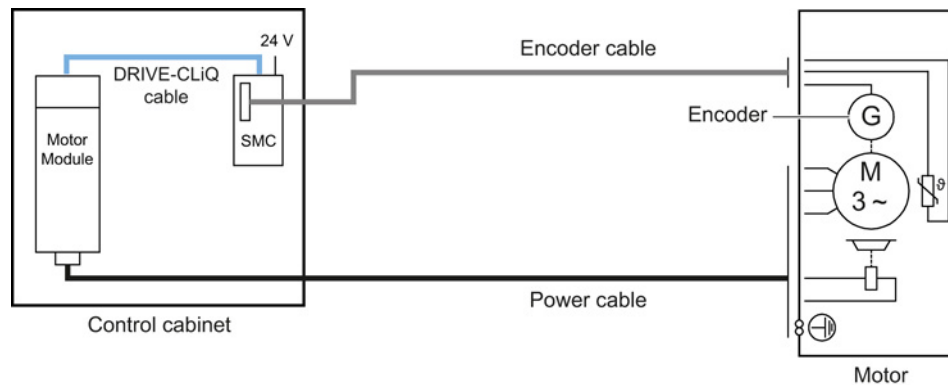


Figure 8-9 Connection of an encoder system via a Sensor Module Cabinet-Mounted (SMC) for a motor without a DRIVE-CLiQ interface

8.5.4 Meaning of the LED

Table 8- 11 Meaning of the LED on the Sensor Module Cabinet-Mounted SMC20

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green / Red	0.5 Hz flashing light	Firmware is being downloaded.	–
		2 Hz flashing light	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
	Green / Orange or Red / Orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

8.5.5 Dimension drawing

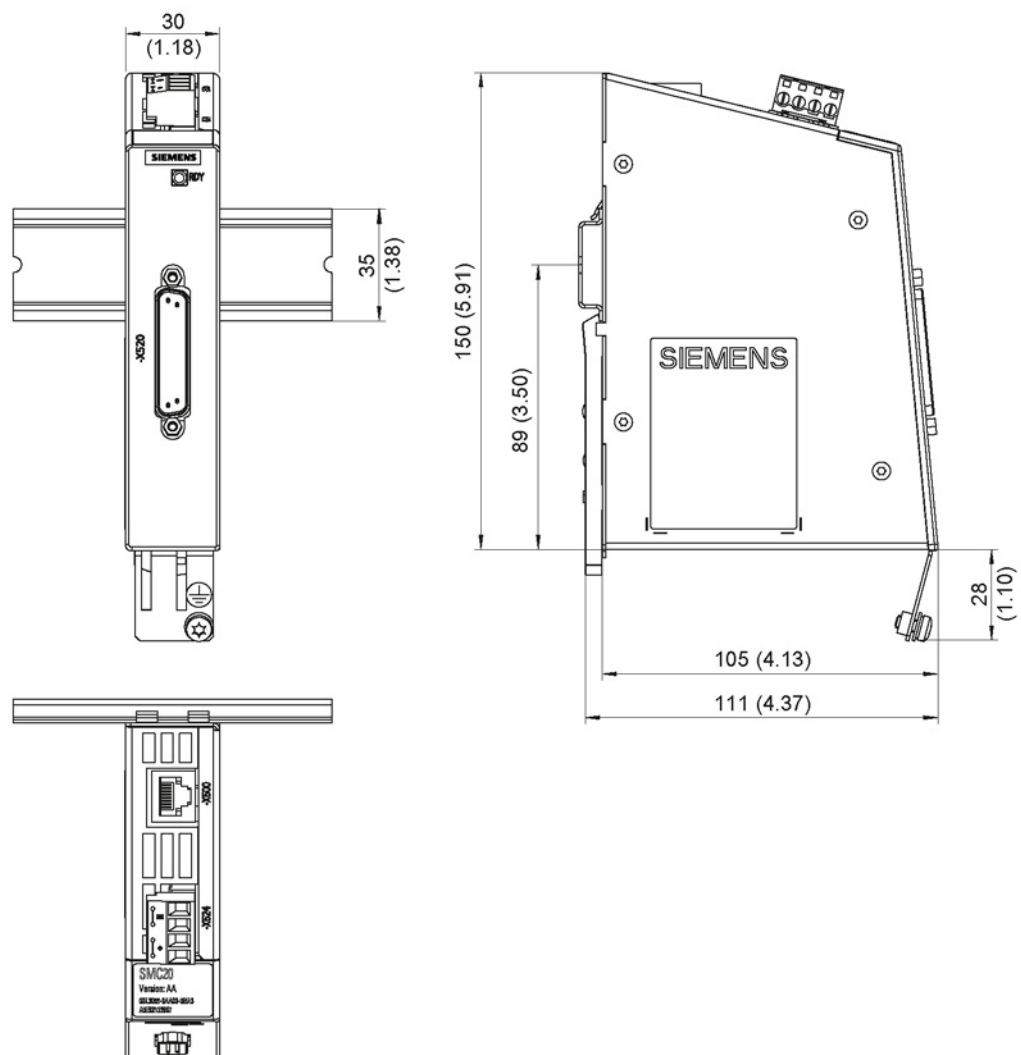


Figure 8-10 Dimension drawing of the Sensor Module Cabinet SMC20, all data in mm and (inches)


8.5.6 Mounting

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

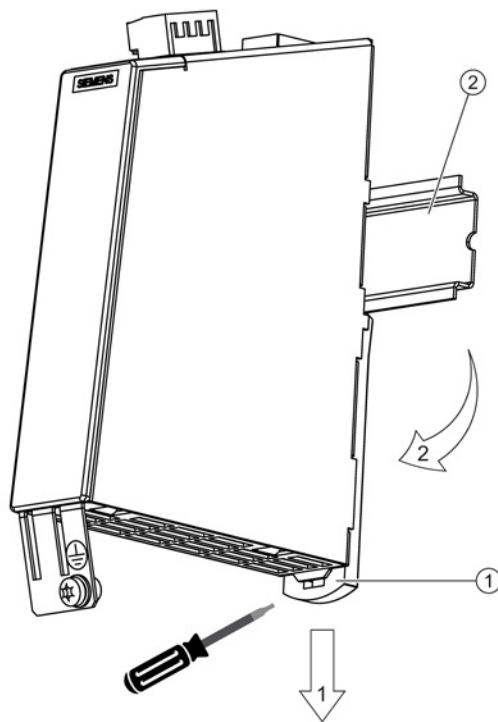

- ① Mounting slide
- ② Mounting rail

Figure 8-11 Removing from a DIN mounting rail

8.5.7 Technical data

Table 8- 12 Technical data

6SL3055-0AA00-5BAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,20
Current (with encoder system)	A _{DC}	≤ 0,35
Power loss	W	≤ 10
Encoder system power supply		
Voltage	V _{DC}	5 V DC (with remote sense) ¹⁾
Current	A _{DC}	0.35
Encoder frequency that can be evaluated (f _{encoder})	kHz	≤ 500
SSI baud rate ²⁾	kBd	100 - 1000 ³⁾
Max. encoder cable length	m	100
PE/ground connection		At the housing with M4/1.8 Nm screw
Weight	kg	0,45
Degree of protection		IP20 or IPXXB

¹⁾ A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

²⁾ Only possible for SSI encoders with 5 V supply.

³⁾ See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 µs, use an SMC20 with order number 6SL3055-0AA00-5BA3.

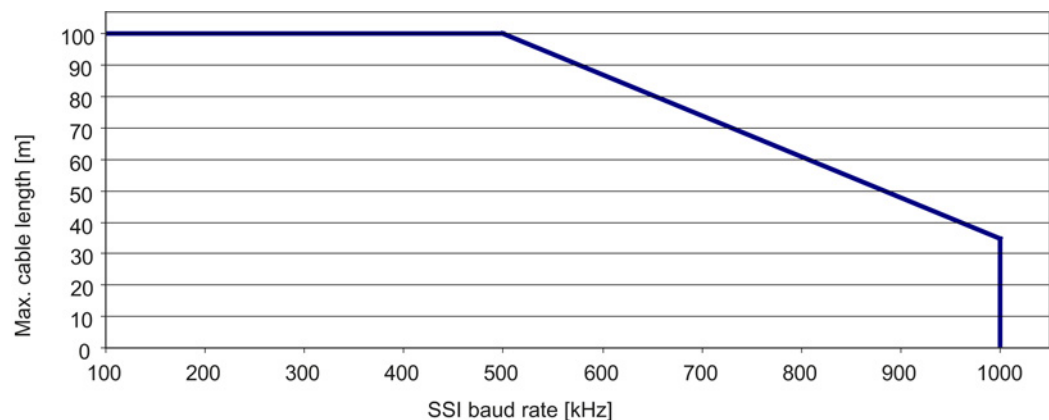


Figure 8-12 Maximum cable lengths depending on the SSI baud rate for SSI encoders

8.6 Sensor Module Cabinet-Mounted SMC30

8.6.1 Description

The Sensor Module Cabinet-Mounted SMC30 evaluates encoder signals and transmits the speed, actual position value and, if necessary, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC30 is used to evaluate encoder signals from encoders with TTL, HTL, or SSI interfaces.

A combination of TTL/HTL signal and SSI absolute signal is possible at terminals X521/X531, if both signals are derived from the same measured variable.

8.6.2 Interface description

8.6.2.1 Overview

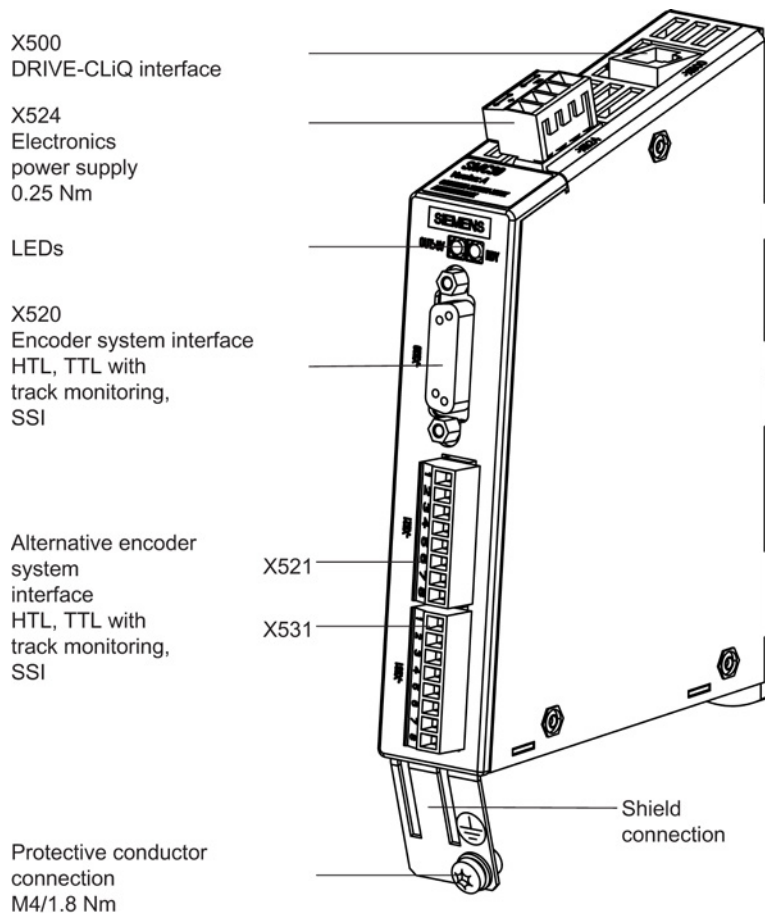
 


Figure 8-13 Interface description of the SMC30

8.6.2.2 X500 DRIVE-CLiQ interface

Table 8- 13 X500: DRIVE-CLiQ interface

 
	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

8.6.2.3 X520 encoder system interface

Table 8- 14 X520: Encoder system interface

	Pin	Signal name	Technical data
	1	+ Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	2	Clock	SSI clock
	3	Clock*	Inverse SSI clock
	4	P encoder 5 V / 24 V	Encoder power supply
	5	P encoder 5 V / 24 V	
	6	P sense	Sense input encoder power supply
	7	M encoder (M)	Ground, encoder power supply
	8	- Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC
	9	M sense	Ground sense input
	10	R	Reference signal R
	11	R*	Inverse reference signal R
	12	B*	Inverse incremental signal B
	13	B	Incremental signal B
	14	A* / data*	Inverted incremental signal A/inverted SSI data
	15	A / data	Incremental signal A/SSI data
Connector type:	15-pin Sub-D socket		
Measuring current via temperature sensor connection: 2 mA			

¹⁾ Accuracy of temperature measurement:

- KTY: $\pm 7^{\circ}\text{C}$ (including evaluation)
- PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)

NOTICE**Damage to the encoder due to incorrect supply voltage**

The encoder supply can be parameterized to 5 V or 24 V. The sensor may be destroyed if you enter the wrong parameters.

- Select the appropriate supply voltage.

NOTICE**Damage to motor in the event of incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

You can find information for parameterizing the KTY temperature sensor in the SINAMICS S120 Function Manual (FH1) in Chapter "Monitoring and protective functions/thermal motor monitoring".

 
 
**WARNING****Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.6.2.4 X521 / X531 alternative encoder system interface

Table 8- 15 X521/X531: Alternative encoder system interface

	Pin	Designation	Technical data
X521 	1	A	Incremental signal A
	2	A*	Inverse incremental signal A
	3	B	Incremental signal B
	4	B*	Inverse incremental signal B
	5	R	Reference signal R
	6	R*	Inverse reference signal R
	7	CTRL	Control signal
	8	M	Ground
X531 	1	P_Encoder 5 V / 24 V	Encoder power supply
	2	M_Encoder	Ground, encoder power supply
	3	- Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY-) Temperature sensor KTY84-1C130 / PTC
	4	+ Temp ¹⁾	Motor temperature sensing KTY84-1C130 (KTY+) Temperature sensor KTY84-1C130 / PTC
	5	Clock	SSI clock
	6	Clock*	Inverse SSI clock
	7	Data	SSI data
	8	Data*	Inverse SSI data

Max. connectable cross-section: 1.5 mm²

Measuring current via the temperature sensor connection: 2 mA

When unipolar HTL encoders are used, A*, B*, and R* on the terminal block must be jumpered with M_Encoder (X531)²⁾.¹⁾ Accuracy of temperature measurement:

- KTY: $\pm 7^{\circ}\text{C}$ (including evaluation)
- PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)

²⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

**! WARNING****Danger to life through electric shock due to unconnected cable shields**

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- Attach the cable shield to the component for the encoder system connection at the terminals.

Temperature sensor connection

NOTICE

Damage to motor in the event of incorrectly connected KTY temperature sensor

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

You can find information for parameterizing the KTY temperature sensor in the SINAMICS S120 Function Manual (FH1) in Chapter "Monitoring and protective functions/thermal motor monitoring".

Note

The maximum length of the temperature sensor cable is 100 m. The cables must be shielded.



⚠ WARNING

 
Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.6.2.5 X524 Electronics power supply

Table 8- 16 X524: Electronics power supply

	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.55 A
	M	Electronics ground	Max. current via jumper in connector:
	M	Electronics ground	20 A (15 A according to UL/CSA)
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.6.3 Connection examples

Connection example 1: HTL encoder, bipolar, with reference signal

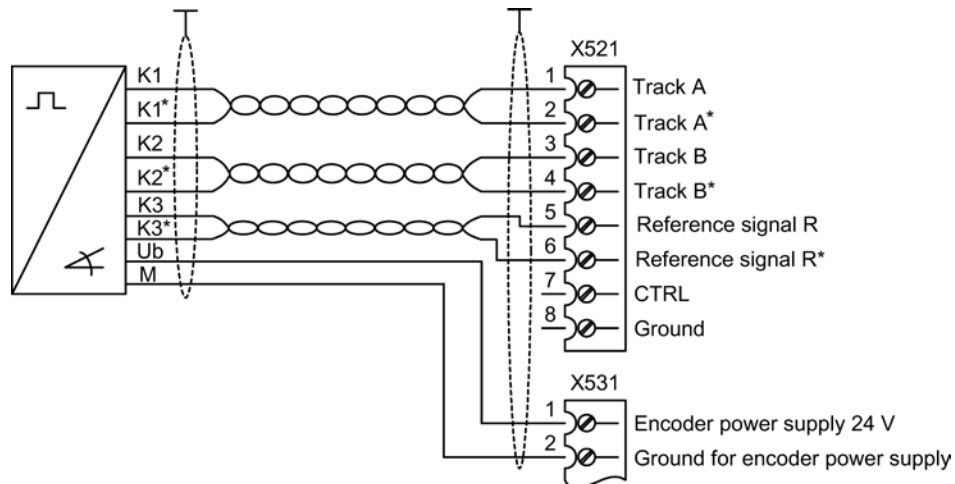


Figure 8-14 Connection example 1: HTL encoder, bipolar, with reference signal

Signal cables must be twisted in pairs to improve immunity to induced noise.

Connection example 2: HTL encoder, unipolar, with reference signal

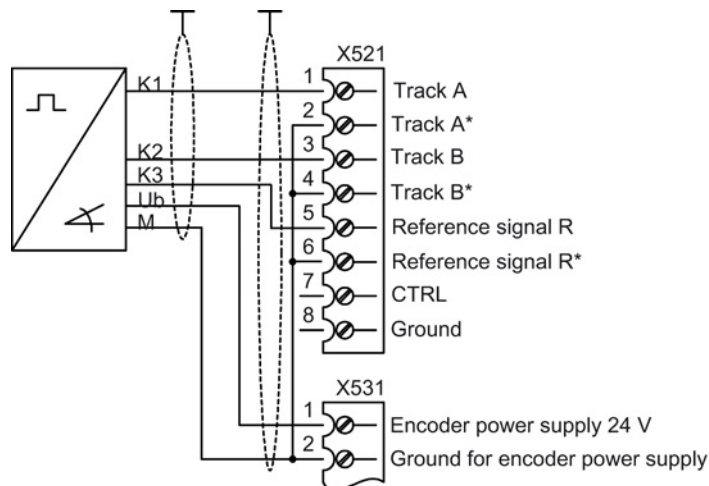


Figure 8-15 Connection example 2: HTL encoder, unipolar, with reference signal¹⁾

¹⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

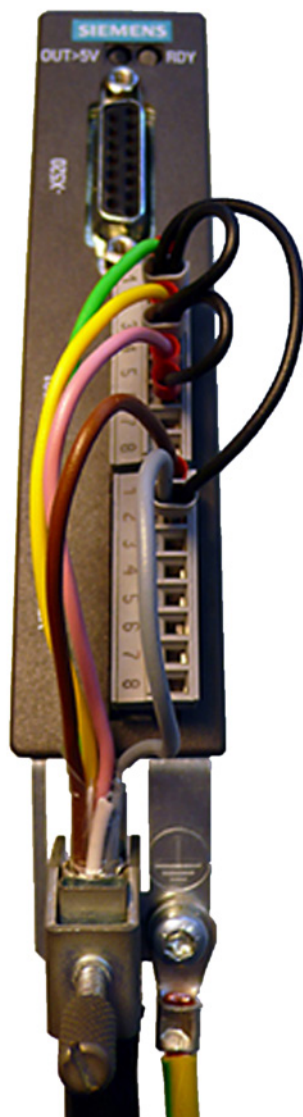


Figure 8-16 Photo of connection example 2: SMC30, 30 mm wide

Note: Diagram of the wire jumpers to connect unipolar HTL encoders with reference signal

8.6.4 Meaning of the LEDs

Table 8- 17 Meaning of LEDs on the Sensor Module Cabinet SMC30

LED	Color	State	Description, cause	Remedy
RDY READY	–	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messages being reconfigured.	Remedy and acknowledge fault
	Green/red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
	Green/red	Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON
	Green/orange or Red/orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–
OUT > 5 V	–	Off	The electronic power supply is missing or outside permissible tolerance range. Power supply \leq 5 V.	–
	Orange	Continuous light	The electronics power supply for the encoder system is available. Power supply > 5 V Notice Make sure that the connected encoder can be operated with a 24 V power supply. If an encoder that is designed for a 5 V supply is operated with a 24 V supply, this can destroy the encoder electronics.	–

¹⁾ See SINAMICS S120/S150 List Manual for the parameters to activate the recognition of components via LED

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

8.6.5 Dimension drawing

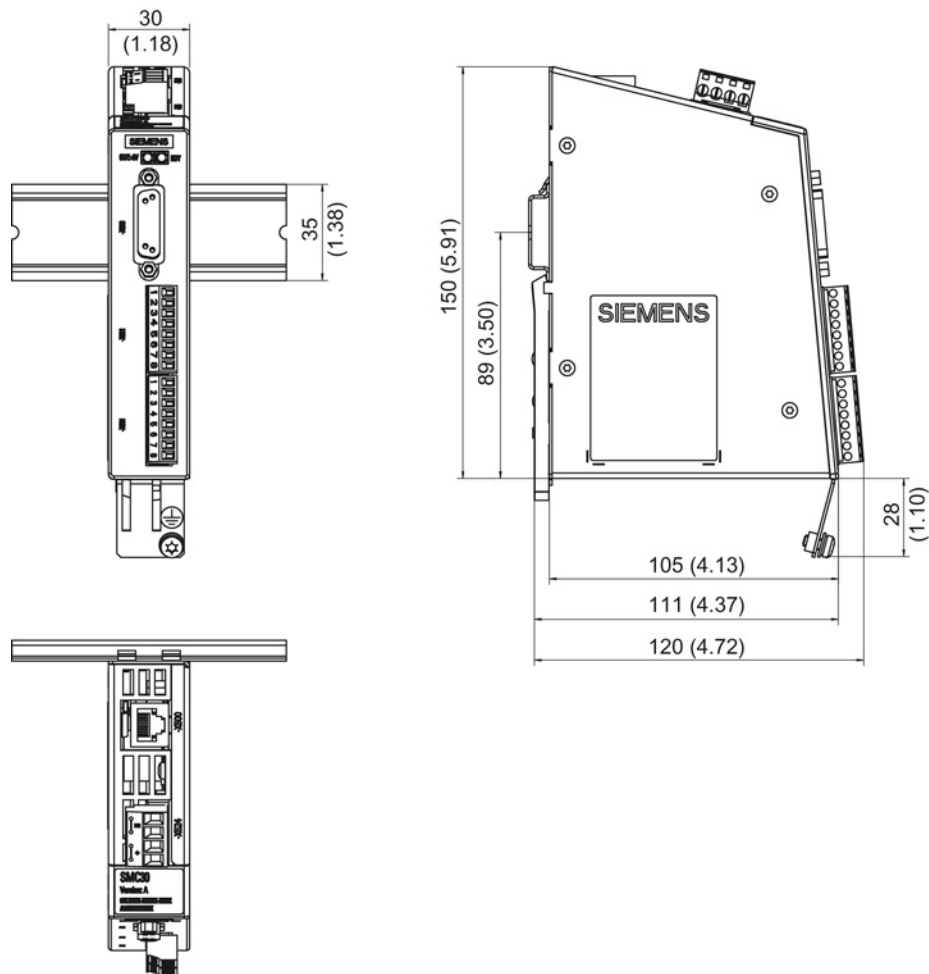


Figure 8-17 Dimension drawing of the Sensor Module Cabinet SMC30, all data in mm and (inches)


8.6.6 Mounting

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

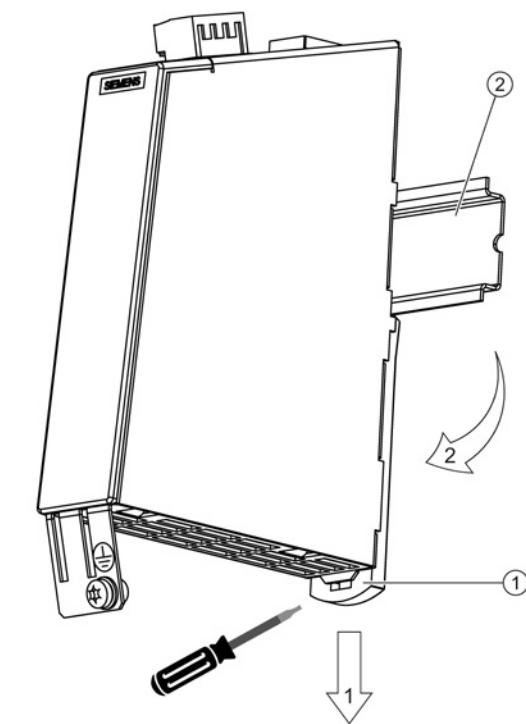


- ① Mounting slide
- ② Mounting rail

Figure 8-18 Removing from a DIN mounting rail

8.6.7 Protective conductor connection and shield support

Shield contacts are only required if the system is connected to X521/X531.

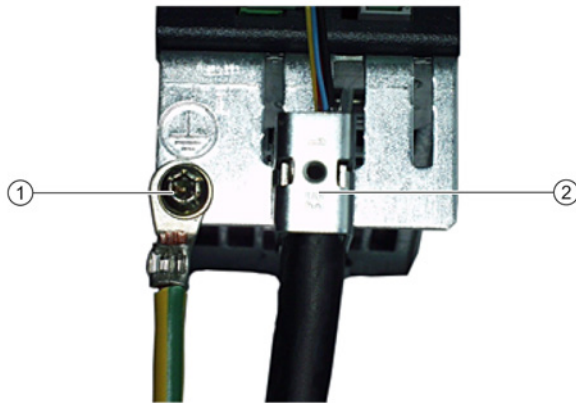

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 8-19 Shield support and protective conductor connection

The bending radii of the cables must be taken into account (see MOTION-CONNECT description).

NOTICE

Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures or the permissible cable lengths are not observed, it can cause damage or the machine may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

8.6.8 Technical data

Table 8- 18 Technical data

6SL3055-0AA00-5CA2	Unit	Value
Electronics power supply		
Voltage	V_{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A_{DC}	$\leq 0,20$
Current (with encoder system)	A_{DC}	$\leq 0,55$
Power loss	W	≤ 10
Encoder system power supply		
Voltage	V_{DC}	5 (with or without remote sense) ¹⁾ or $V_{DC} - 1\text{ V}$
Current	A_{DC}	0.35
Encoder frequency that can be evaluated (f_{encoder})	kHz	≤ 300
SSI baud rate	kBd	100 - 1000 ²⁾
PE/ground connection		At the housing with M4/1.8 Nm screw
Weight		0,45
Degree of protection		IP20 or IPXXB

¹⁾ A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply). Remote Sense only to X520.

²⁾ See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

Connectable encoder systems

Table 8- 19 Specification of encoder systems that can be connected

Parameter	Designation	Threshold	Min.	Max.	Unit
High signal level (TTL bipolar at X520 or X521/X531) ¹⁾	U_{Hdiff}		2	5	V
Low signal level (TTL bipolar at X520 or X521/X531) ¹⁾	U_{Ldiff}		-5	-2	V
High signal level (HTL unipolar)	$U_H^{3)}$	High	17	V_{CC}	V
		Low	10	V_{CC}	V
Low signal level (HTL unipolar)	$U_L^{3)}$	High	0	7	V
		Low	0	2	V
High signal level (HTL bipolar) ²⁾	U_{Hdiff}		3	V_{CC}	V
Low signal level (HTL bipolar) ²⁾	U_{Ldiff}		$-V_{CC}$	-3	V
High signal level (SSI bipolar at X520 or X521/X531) ¹⁾	U_{Hdiff}		2	5	V
Low signal level (SSI bipolar at X520 or X521/X531) ¹⁾	U_{Ldiff}		-5	-2	V
Signal frequency	f_S		-	300	kHz
Edge clearance	t_{min}		100	-	ns
"Zero pulse inactive time" (before and after A=B=high)	t_{Lo}		640	$(t_{ALo-BHi} - t_{Hi})/2^{4)}$	ns
"Zero pulse active time" (while A=B=high and beyond) ⁵⁾	t_{Hi}		640	$t_{ALo-BHi} - 2 \cdot t_{Lo}^{4)}$	ns

¹⁾ Other signal levels according to the RS 422 standard.

²⁾ The absolute level of the individual signals varies between 0 V and V_{CC} of the encoder system.

³⁾ Only with order number 6SL3055-0AA00-5CA2 and firmware version 2.5 SP1 or higher can this value be configured using software. For older firmware releases and Order Nos. less than 6SL3055-0AA00-5CA2 then the "low" threshold applies.

⁴⁾ $t_{ALo-BHi}$ is not a specified value, but is the time between the falling edge of track A and the next but one rising edge of track B.

⁵⁾ Additional information on setting the "Zero pulse active time" can be found in the manual: SINAMICS S120, Function Manual, tolerant encoder monitoring for SMC30

Table 8- 20 Encoders that can be connected

	X520 (SUB-D)	X521 (terminal)	X531 (terminal)	Track monitoring	Remote Sense ²⁾
HTL bipolar 24 V	Yes	Yes		Yes	no
HTL unipolar 24 V ¹⁾	Yes	Yes (however, a bipolar connection is recommended) ¹⁾		no	no
TTL bipolar 24 V	Yes	Yes		Yes	no
TTL bipolar 5 V	Yes	Yes		Yes	At X520
SSI 24 V/5 V	Yes	Yes		no	no
TTL unipolar	no				

¹⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

²⁾ A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the sensor module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

Maximum encoder cable lengths

Table 8- 21 Maximum encoder cable length

Encoder type	Maximum encoder cable length in m
TTL ¹⁾	100
HTL unipolar ²⁾	100
HTL bipolar	300
SSI	100 ³⁾

¹⁾ For TTL encoders at X520 → remote sense → 100 m

²⁾ Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

³⁾ See the diagram "Maximum cable length depending on the SSI baud rate for SSI encoders"

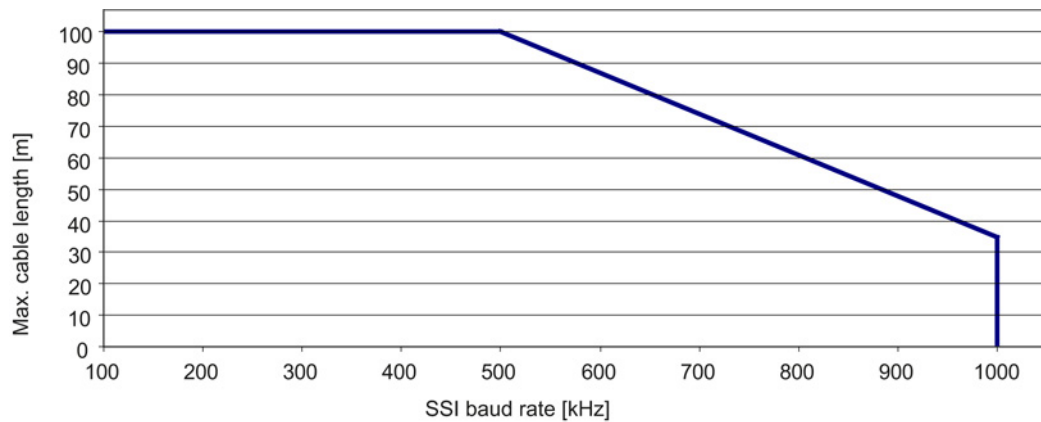
SSI encoder

Figure 8-20 Maximum cable lengths depending on the SSI baud rate for SSI encoders

Encoders with 5 V supply connected to X521/X531

For encoders with a 5 V supply at X521/X531, the cable length depends on the encoder current (for 0.5 mm² cable cross-sections):

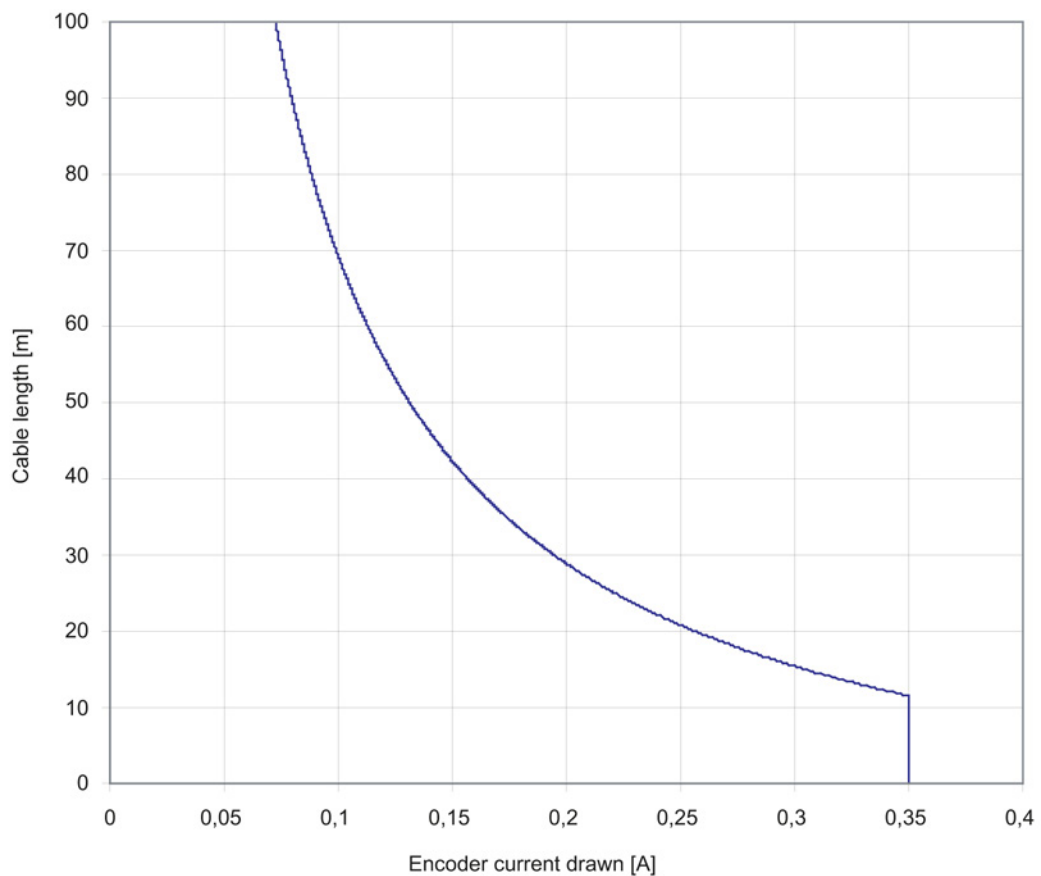


Figure 8-21 Max. cable length as a function of the encoder current drawn

Encoders without remote sense

For encoders without Remote Sense, the permissible cable length is restricted to 100 m.
Reason: The voltage drop depends on the cable length and the encoder current.

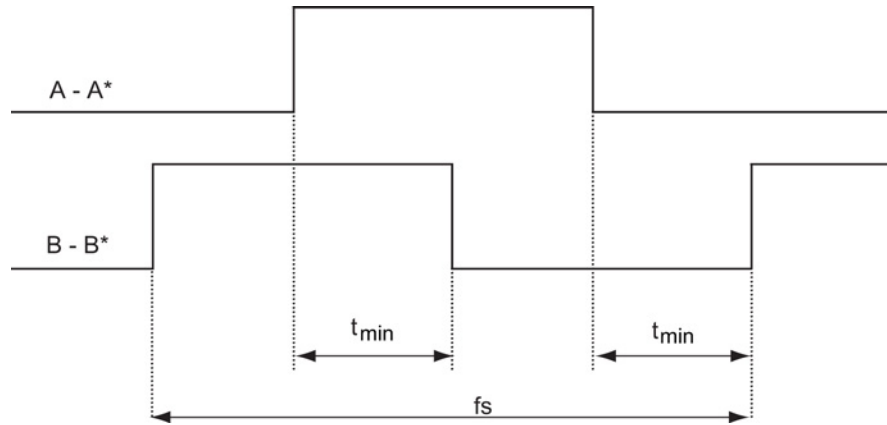


Figure 8-22 Signal characteristic of track A and track B between two edges: Time between two edges with pulse encoders

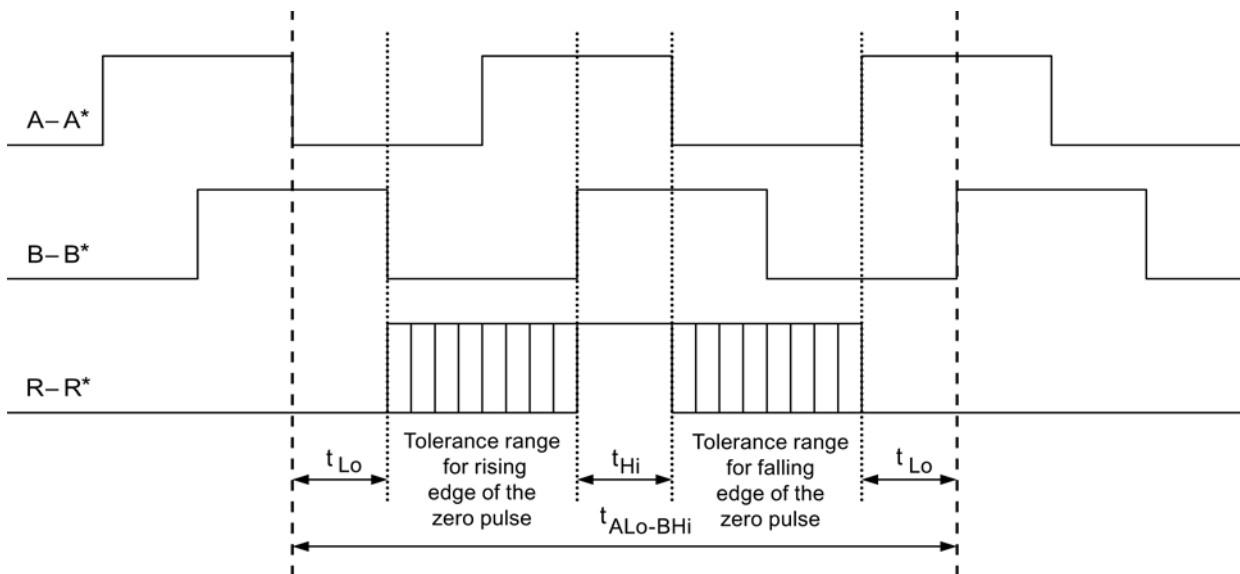


Figure 8-23 Position of the zero pulse to the track signals

8.7 Sensor Module Cabinet-Mounted SMC40

8.7.1 Description

The Sensor Module Cabinet-Mounted SMC40 is used to convert encoder signals from absolute encoders with EnDat 2.2 Order number 22 to DRIVE-CLiQ and send these to the Control Unit. Two encoder systems with EnDat 2.2 Order number 22 can be connected to the SMC40. Their signals are converted independent of each other to two DRIVE-CLiQ encoder signals.

Note

Permissible encoders

- Only use absolute encoders EnDat 2.2 with order designation 22. Do not connect any EnDat 2.2 absolute encoders with order designation 02.
 - Only use absolute encoders (not incremental encoders) with software versions 4.5 and 4.6.
 - Do not use any battery buffered encoders, such as EBI 1135.
-

Configuration and commissioning

To make sure that the Sensor Module Cabinet-Mounted SMC40 is integrated into the topology during first commissioning, you must absolutely observe the following connection conditions:

- Connect at least one of the DRIVE-CLiQ interfaces X500/1 or X500/2 on the SMC40 using DRIVE-CLiQ.
 - Connect one EnDat encoder to the corresponding encoder interface X520/1 (to X500/1) or X520/2 (to X500/2).
 - Operate the SMC40 only in a star topology. The DRIVE-CLiQ sockets X500/1 and X500/2 can **not** be used for a series connection.
-

Note

Later, the SMC40 is integrated into the actual topology only, if the DRIVE-CLiQ interfaces X500/x and the corresponding encoder interfaces X520/x are assigned. Without a connected encoder, it is not possible to subsequently integrate the SMC40 into the topology.

Temperature signals

If the EnDat2.2 encoder already evaluates the temperature, the temperature signals can be transferred through the SMC40 via DRIVE-CLiQ.

8.7.2 Interface descriptions

8.7.2.1 Overview

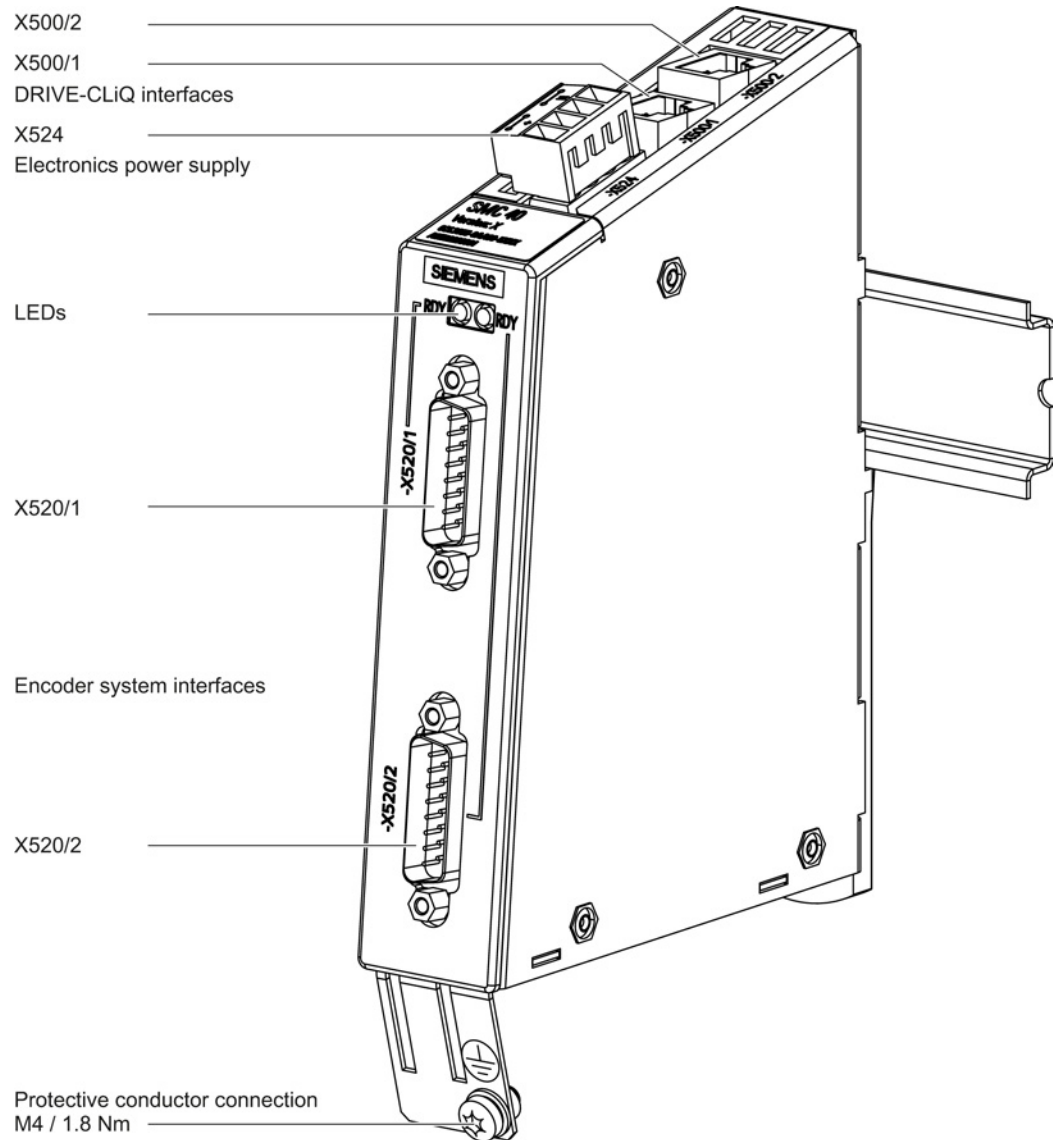


Figure 8-24 Interface overview for the SMC40

Interface assignment


The DRIVE-CLiQ and encoder interfaces of channel 1 and channel 2 are logically completely independently of one another and permanently assigned.

		X500/1 DRIVE-CLiQ socket	X500/2 DRIVE-CLiQ socket	Left RDY LED	Right RDY LED
X520/1	EnDat 2.2 input	channel 1	---	channel 1	---
X520/2	EnDat 2.2 input	---	channel 2	---	channel 2

Connector X524 for the electronics power supply is used for both channels.

8.7.2.2 X500/1 and X500/2 DRIVE-CLiQ interfaces

Table 8- 22 X500/1 and X500/2: DRIVE-CLiQ interfaces

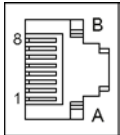	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.


Blanking covers (50 x) Order number: 6SL3066-4CA00-0AA0

Note

The maximum DRIVE-CLiQ cable length is 30 m.

8.7.2.3 X520/1 and X520/2 encoder system interfaces

Table 8- 23 X520/1 and X520/2: Encoder system interfaces

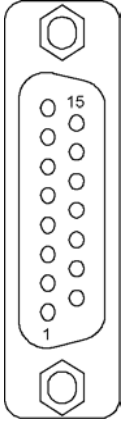	Pin	Signal name	Technical data
	1	P encoder	Encoder power supply
	2	M encoder	Ground, encoder power supply
	3	Reserved, do not use	
	4	Reserved, do not use	
	5	Data	Data, EnDat interface
	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Data*	Inverse data EnDat interface
	9	P encoder	Encoder power supply
	10	Reserved, do not use	
	11	M encoder	Ground, encoder power supply
	12	Reserved, do not use	
	13	Reserved, do not use	
	14	Clock	Clock, EnDat interface
	15	Clock*	Inverse clock EnDat interface
Connector type:	15-pin SUB D connector		

Note

The maximum cable length to encoder systems is 100 m. The specified supply voltage of the encoder must be observed.

Note

Pins 1/9 and 2/11 on the SMC40 side and on the encoder side (in the M12 connector, pin 8/2 and pin 5/1) are connected in parallel, and to increase the cable cross-section each must be wired with a separate conductor.



! WARNING

 
Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Terminal Module TM120.

8.7.2.4 X524 Electronics power supply

Table 8- 24 X524: Electronics power supply

	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 ... 28.8 V)
	+	Electronics power supply	Current consumption: max. 0.35 A
	M	Electronics ground	Maximum current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	
Type: Screw terminal 2 (Page 360) Max. cross-section that can be connected: 2.5 mm ²			

The maximum cable length that can be connected is 10 m.

Note

The maximum cable length for the electronics power supply is 30 m.

Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

8.7.3 Connection example

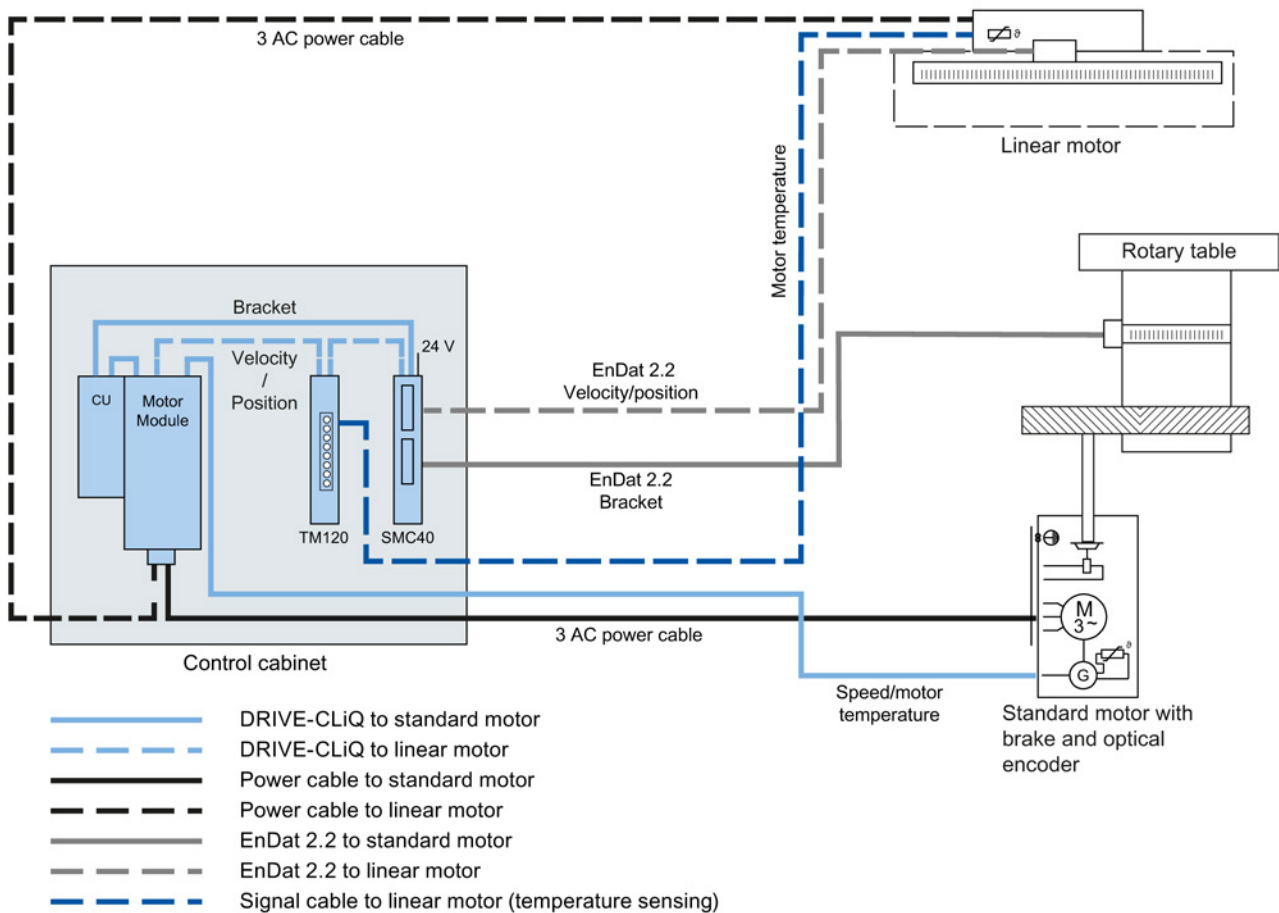


Figure 8-25 Encoder system connection via a Sensor Module Cabinet-Mounted SMC40

The wiring diagram shows two different applications of the SMC40. For each conversion of an EnDat 2.2 encoder signal into a DRIVE-CLiQ signal, a dedicated DRIVE-CLiQ cable must be used, as the electronics in the SMC40 is designed so that each channel is independent. The DRIVE-CLiQ cables cannot be interchanged.

Connecting a standard motor with brake and optical encoder

A standard motor with gearbox for a rotary indexing table drive is shown in the connection example. The rotary indexing table has an angular position measuring system with EnDat 2.2 interface. The measured angular data are transferred via EnDat 2.2 to the SMC40 and from there via DRIVE-CLiQ to the Control Unit.

The motor contains an integrated encoder and temperature evaluation, which transfers data via DRIVE-CLiQ directly to the Motor Module.

Connecting a linear motor without DRIVE-CLiQ interface

From a linear motor with linear scale, velocity and position are first transferred via the EnDat 2.2 connection to the SMC40 and from there, via DRIVE-CLiQ to a Terminal Module TM120.

The temperature sensors of the linear motor supply their analog temperature values directly to the TM120, which guarantees the safe electrical separation of the temperature cable and which transfers the temperature data together with the velocity and position data in the DRIVE-CLiQ protocol to the Motor Module.

8.7.4 Meaning of the LEDs

Table 8- 25 Meaning of the LEDs on the Sensor Module Cabinet-Mounted SMC40

LED	Color	Status	Description, cause	Remedy
RDY READY	–	Off	The electronics power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. Note: LED is controlled irrespective of the corresponding messages being reconfigured.	Remove and acknowledge the fault.
	Green/red	Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated ¹⁾ . Note: Both options depend on the LED status when component recognition is activated.	–

¹⁾ See SINAMICS S120/150 List Manual for the parameters to activate the recognition of components via LED

Each channel has a multifunction LED.

Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual (IH1)

SINAMICS S120/S150 List Manual (LH1)

8.7.5 Dimension drawing

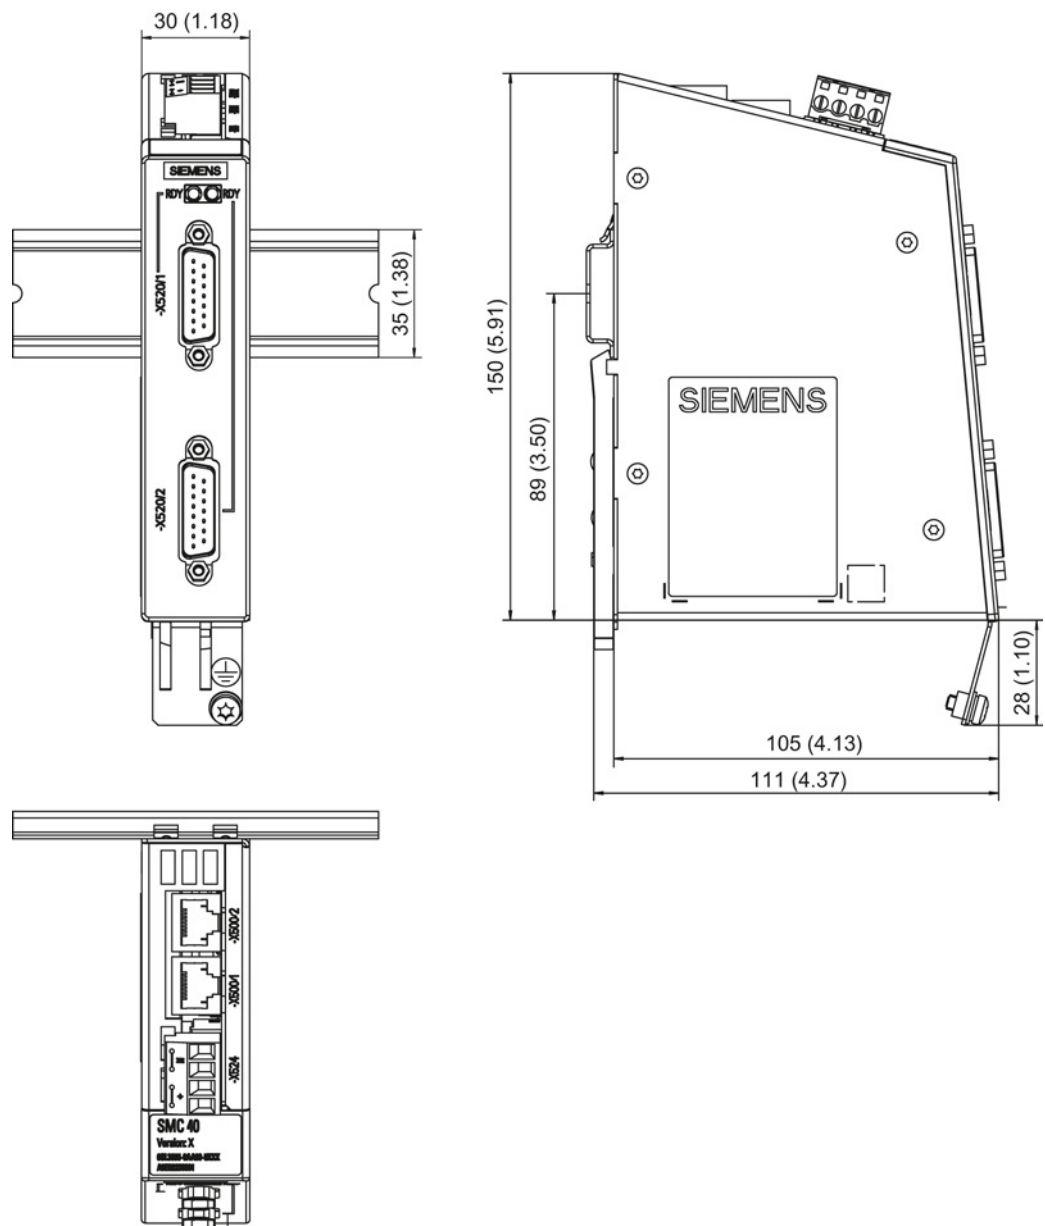


Figure 8-26 Dimension drawing of the Sensor Module Cabinet SMC40, all data in mm and (inches)


8.7.6 Installation

Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

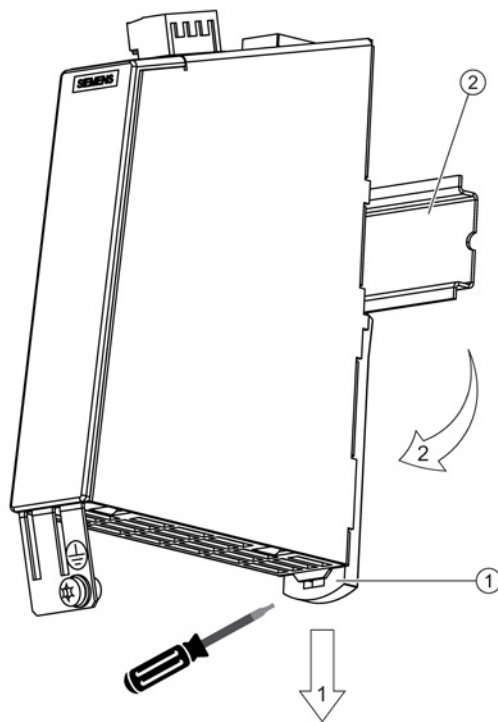

- ① Mounting slide
- ② Mounting rail

Figure 8-27 Removing from a DIN mounting rail

Mounting clearances

The SMC40 can be installed in the line-up together with other SMC as required. When mounting next to heat sources, the following minimum lateral clearances must be observed:

- 50 mm for Line Modules and Motor Modules
- 100 mm for hotter components (e.g. pulsed resistor)

8.7.7 Technical data

Table 8- 26 Technical data

6SL3055-0AA00-5DA0	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,10
Current (with encoder system)	A _{DC}	≤ 0,35
Power loss	W	≤ 4
Encoder system power supply		
Voltage	V _{DC}	5.1 (without Remote Sense)
Current	A _{DC}	0.5
Evaluable encoder protocol		EnDat 2.2 with order designation 22
Max. encoder cable length	m	100
PE/ground connection		At the housing with M4/1.8 Nm screw
Weight	kg	0,45
Degree of protection		IP20 or IPXXB

8.8 Sensor Module External SME20

8.8.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME20. The SME20 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

Incremental direct encoder systems with SIN/COS (1 Vpp) and reference signal can be connected.

It is possible to connect a motor with a 17-pole circular connector for the encoder to the 12-pole circular connector of the SME20 using adapter cable 6FX 8002-2CA88-xxxx.

- KTY/PTC temperature sensors can be used for evaluation of the motor temperature.
- The Sensor Module is only suitable for motors without absolute track signals (C/D track):
 - Induction motors (e.g. 1PH)
 - Synchronous motors with pole position identification (e.g. 1FN, 1FW, 1FE)

Neither motor nor encoder data are saved in the SME20.

8.8.2 Interface description

8.8.2.1 Overview

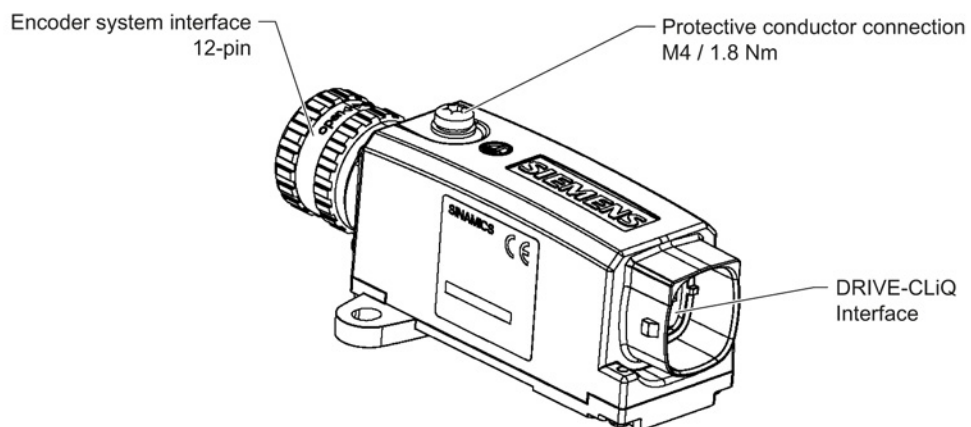
 


Figure 8-28 Interface description SME20

8.8.2.2 DRIVE-CLiQ interface

Table 8- 27 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		
Power consumption max. 0.25 A			

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.


Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.8.2.3 Encoder system interface

Table 8- 28 Encoder system interface SME20

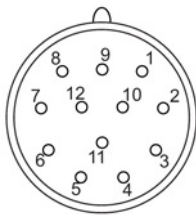	Pin	Signal name	Technical data
	1	B*	Inverse incremental signal B
	2	P5	Encoder power supply
	3	R	Reference signal R
	4	R*	Inverse reference signal R
	5	A	Incremental signal A
	6	A*	Inverse incremental signal A
	7	-Temp ^{1) 2)}	Temperature sensor connection ³⁾ KTY84-1C130 or PTC
	8	B	Incremental signal B
	9	+Temp ^{1) 2)}	Temperature sensor connection ³⁾ KTY84-1C130 or PTC
	10	M	Ground for encoder power supply
	11	M	Ground for encoder power supply
	12	P5	Encoder power supply
Connector kit:	12-pin, order number: 6FX2003-0SA12		
Measuring current via temperature sensor connection: 2 mA Blanking cover for encoder system interface: Pöppelmann GmbH & Co. KG, Lohne, Order No.: GPN 300 F211			

- 1) These connections do not have protective separation!
- 2) Accuracy of the temperature measurement:
- KTY: $\pm 7^{\circ}\text{C}$ (including evaluation)
 - PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)
- 3) Connecting cable: Order number 6FX8002-2CA88-xxxx

NOTICE**Damage to motor in the event of incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.



! WARNING

Danger to life due to electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.
- If safe electrical separation cannot be guaranteed (for linear motors or third-party motors, for example), use a Sensor Module External (SME120 or SME125) or Terminal Module TM120.

8.8.3 Connection example

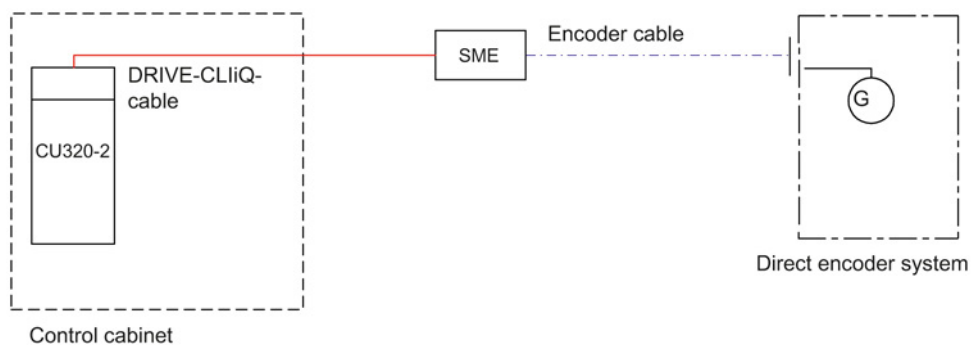


Figure 8-29 Connection of a direct encoder system via a Sensor Module External (SME)

8.8.6 Technical data

Table 8- 29 Technical data

6SL3055-0AA00-5EAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,15
Current (with encoder system)	A _{DC}	≤ 0,25
Power loss	W	≤ 4
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0,35
Encoder frequency that can be evaluated (f _{encoder})	kHz	≤ 500
PE/ground connection		At the housing with M4/1.8 Nm screw
Weight	kg	0,31
Degree of protection		IP67

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 μs, an SME20 with order number 6SL3055-0AA00-5EA3 must be used.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 10 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

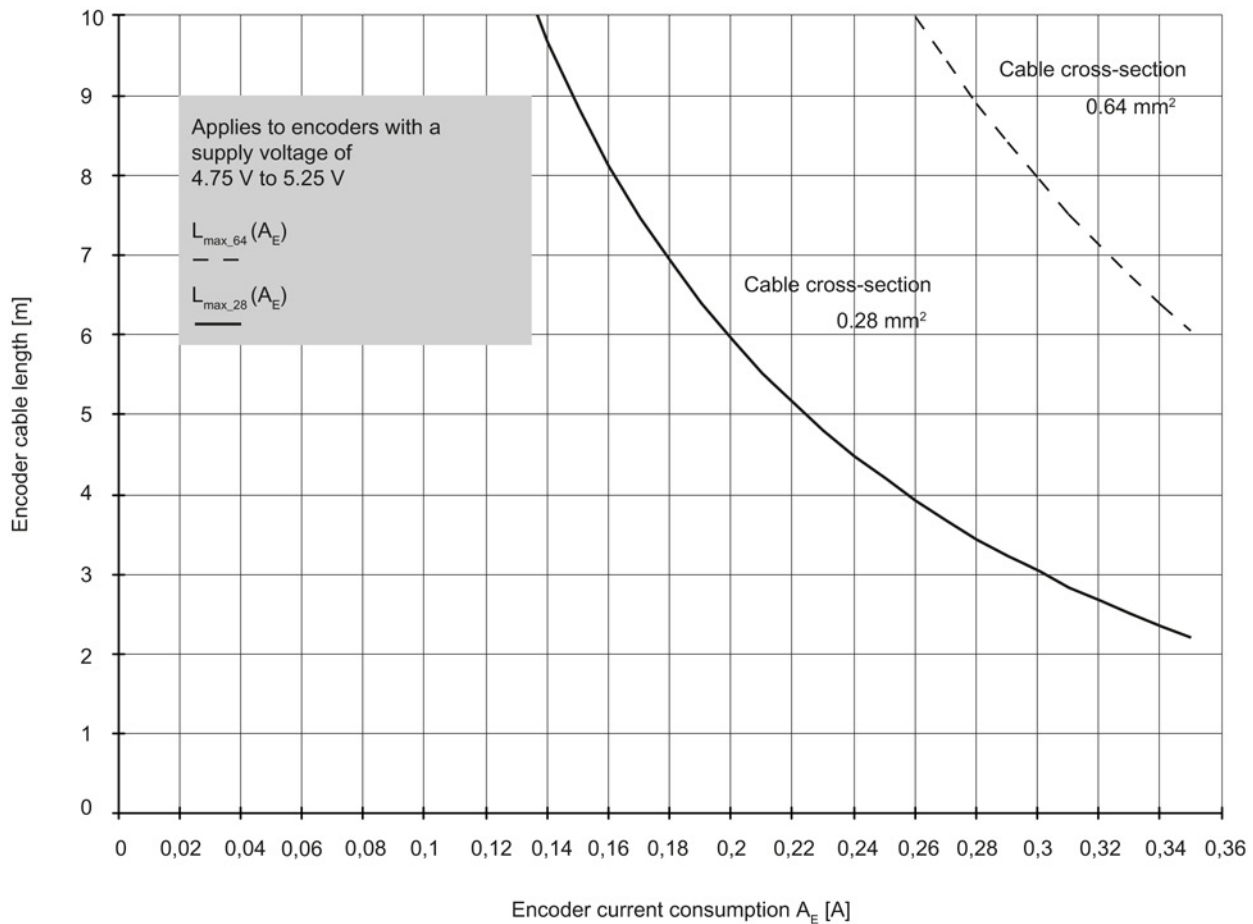


Figure 8-32 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 10 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm².

8.9 Sensor Module External SME25

8.9.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME25. The SME25 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

Direct encoder systems with EnDat 2.1, EnDat 2.2 order designation 02 or SSI with SIN/COS (1 Vpp) incremental signals can be connected, however without reference signal.

Neither motor nor encoder data are saved in the SME25.

8.9.2 Interface description

8.9.2.1 Overview

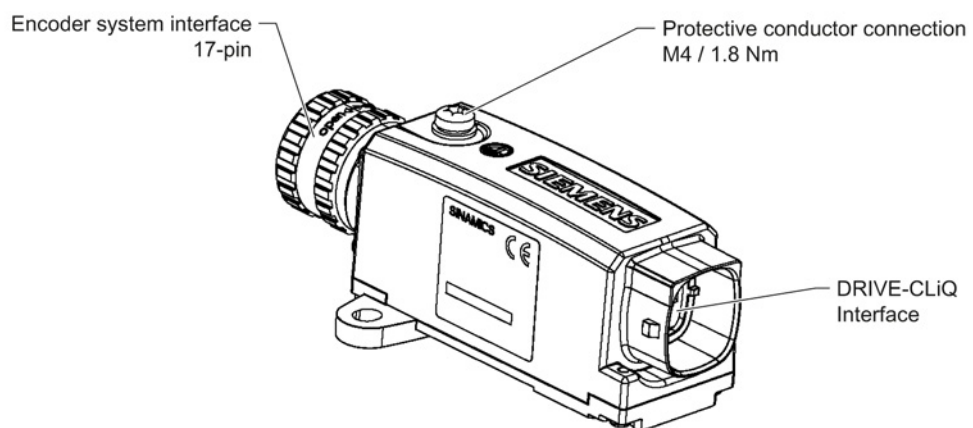
 


Figure 8-33 Interface description SME25

8.9.2.2 DRIVE-CLiQ interface

Table 8- 30 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		
Power consumption max. 0.25 A			

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.


Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.9.2.3 Encoder system interface

Table 8- 31 Encoder system interface SME25

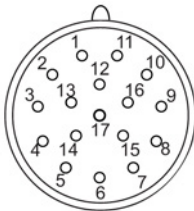	Pin	Signal name	Technical data
	1	P5	Encoder power supply
	2	Reserved, do not use	
	3	Reserved, do not use	
	4	M	Ground, encoder power supply
	5	Reserved, do not use	
	6	Reserved, do not use	
	7	P5	Encoder power supply
	8	Clock	Clock, EnDat interface, SSI clock
	9	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	10	M	Ground, encoder power supply
	11	Housing potential	
	12	B	Incremental signal B
	13	B*	Inverse incremental signal B
	14	Data	Data, EnDat interface, SSI data
	15	A	Incremental signal A
	16	A*	Inverse incremental signal A
	17	Data*	Inverse data, EnDat interface, Inverse SSI data
Connector kit:	17-pin, order number: 6FX2003-0SA17		
Blanking plate for encoder system interface: Pöppelmann GmbH & Co. KG, Lohne, Order No.: GPN 300 F211			

8.9.3 Connection example

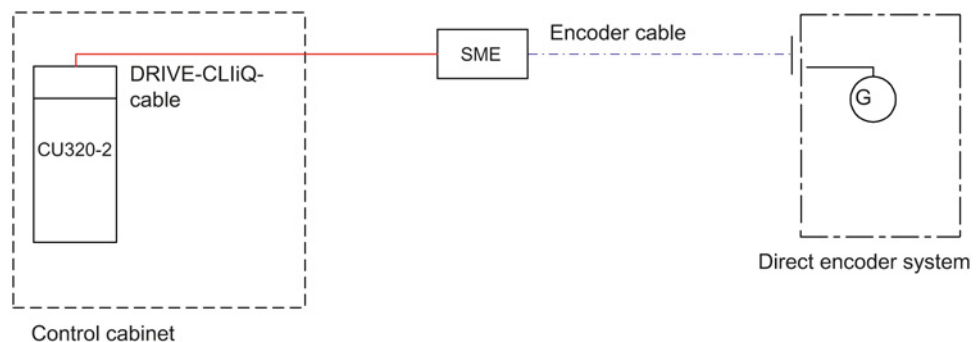


Figure 8-34 Connection of a direct encoder system via a Sensor Module External (SME)

8.9.6 Technical data

Table 8- 32 Technical data

6SL3055-0AA00-5HAX	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,15
Current (with encoder system)	A _{DC}	≤ 0,25
Power loss	W	≤ 4
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0,35
Encoder frequency that can be evaluated (f _{encoder})	kHz	≤ 500
SSI/EnDat baud rate	kBd	100
PE/ground connection		At the housing with M4 screw Tightening torque: 1.8 Nm
Weight	kg	0,31
Degree of protection		IP67

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 µs, an SME25 with order number 6SL3055-0AA00-5HA3 must be used.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 10 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

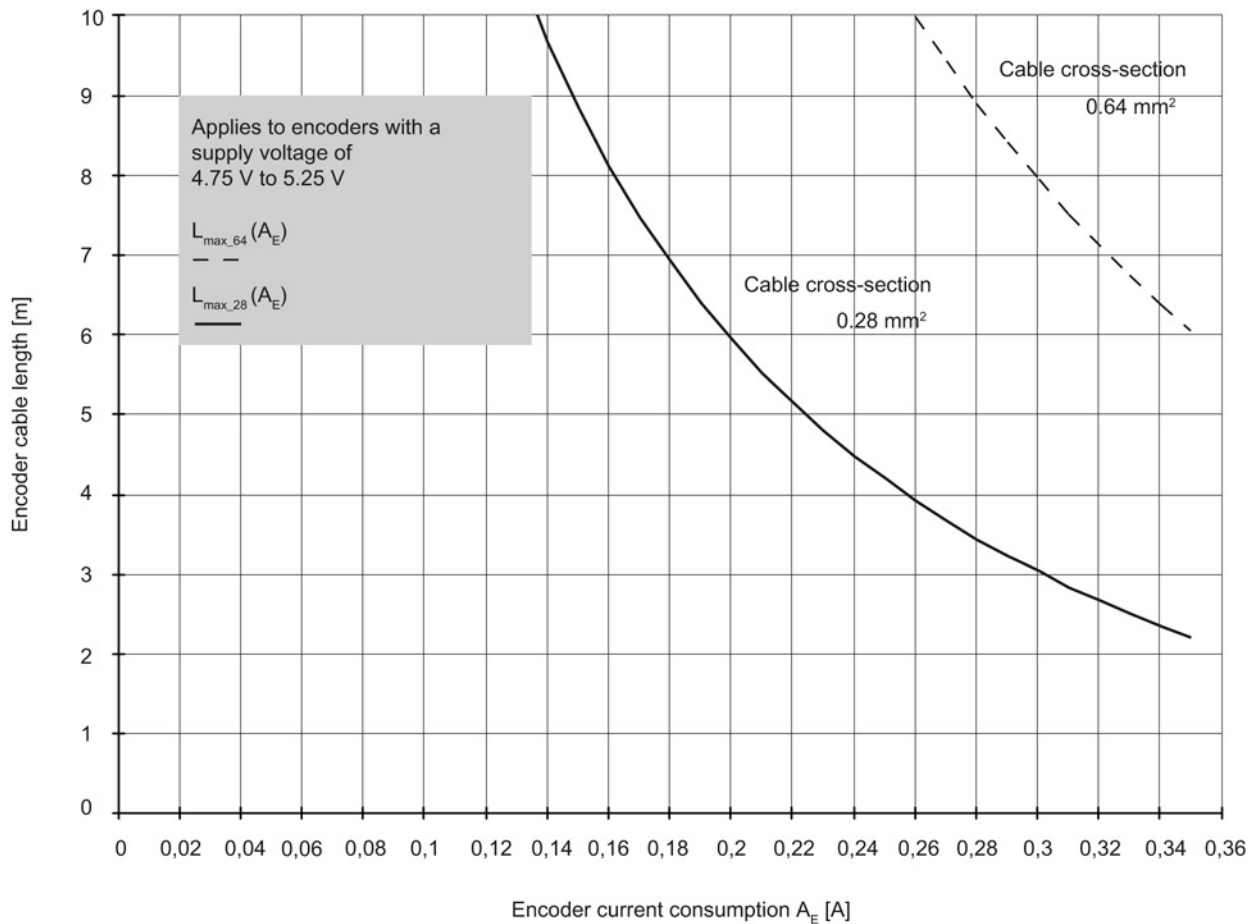


Figure 8-37 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 10 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm².

8.10 Sensor Module External SME120

8.10.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME120. The SME120 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ. Neither motor nor encoder data are saved in the SME120. Incremental direct encoder systems with SIN/COS (1 Vpp) and reference signal can be connected.

An SME120 is always used when the temperature signals of the motors do not have protective separation or where this separation is not possible for certain reasons.

The SME120 is especially used for linear motor applications. A Hall sensor box can be connected to determine the commutation position of a linear motor.

8.10.2 Safety instructions for Sensor Modules External

The following safety instructions specifically apply for Sensor Modules External SME12x.

Note

When handling/using a Sensor Module External, you must also observe the safety instructions for Sensor Modules as well as the safety instructions in Chapter 1 (Page 19).

A Sensor Module External SME12x is a device belonging to safety class I.

WARNING

Rules when handling an SME12x

- It is mandatory that you connect a protective conductor with a minimum cross-section of 2.5 mm² in order to guarantee safe electrical separation.
- In order to ensure degree of protection IP67, close all connections, even connections that are not used, with connectors or suitable sealing caps. You must observe the specified torques.
- Before commissioning, always replace the plastic covers of connections X100 to X500 using the corresponding connectors, as otherwise the Sensor Modules External SME12x will not conform with degree of protection IP67.
- Under no circumstances open the Sensor Modules, as this can mean that they are no longer properly sealed! Repair and maintenance work may only be performed by a SIEMENS service center.
- If it appears that the Sensor Module packaging has been damaged by water, do not commission the Sensor Module.

NOTICE

Damage caused by connecting a grounded encoder system power supply

Only connect those encoder systems where the power supply is **not** grounded.

8.10.3 Interface description

8.10.3.1 Overview

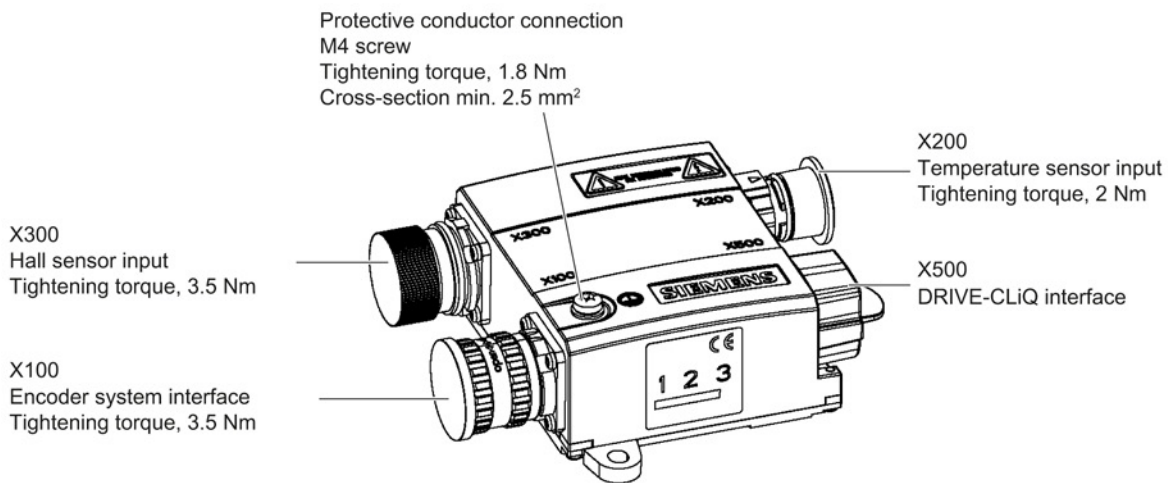
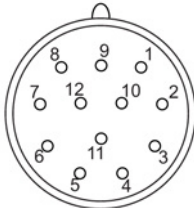


Figure 8-38 Interface description, SME120

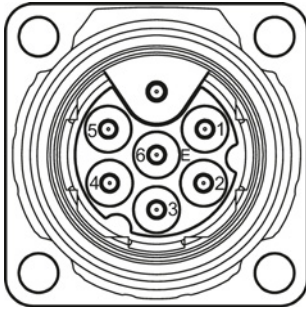
8.10.3.2 X100 encoder system interface

Table 8- 33 X100: Encoder system interface

	Pin	Signal name	Technical data
	1	B*	Inverse incremental signal B
	2	P5	Encoder power supply
	3	R	Reference signal R
	4	R*	Inverse reference signal R
	5	A	Incremental signal A
	6	A*	Inverse incremental signal A
	7	Reserved, do not use	
	8	B	Incremental signal B
	9	Reserved, do not use	
	10	M	Ground, encoder power supply
	11	M	Ground, encoder power supply
	12	P5	Encoder power supply
Connector kit:	12-pin, order number: 6FX2003-0SA12		
Blanking plate for encoder system interface: Pöppelmann GmbH & Co. KG, Lohne, Order No.: GPN 300 F211,			

8.10.3.3 X200 thermistor sensor input

Table 8- 34 X200: Temperature sensor input

	Pin	Function	Technical data
	1	-Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In linear and torque motor applications, connect the KTY84-1C130 motor temperature sensor here
	2	+Temp	
	3	+Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In linear and torque motor applications, connect the PTC triple element 1 or bimetallic switch here
	4	-Temp	
	5	+Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In torque motor applications, connect the PTC triple element 2 here
	6	-Temp	
Connector kit:	6+1 pin, order number: 6FX2003-0SU07		
Measuring current via temperature sensor connection: 2 mA			
Accuracy with the temperature measurement: - KTY: ±7°C (including evaluation) - PTC: ±5°C (including evaluation)			


NOTICE**Overheating of the motor through jumpering the temperature sensor connections**

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

 
8.10.3.4 X300 hall sensor input

Table 8- 35 X300: Hall sensor input

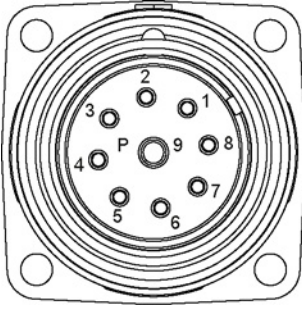	Pin	Signal name	Technical data
	1	C	Absolute track signal C
	2	C*	Inverse absolute track signal C
	3	P5	Encoder power supply
	4	M	Ground, encoder power supply
	5	D	Absolute track signal D
	6	D*	Inverse absolute track signal D
	7	Not assigned	
	8	Not assigned	
	9	Ground	Ground (for internal shield)

8.10.3.5 X500 DRIVE-CLiQ interface

Table 8- 36 X500: DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		
Power consumption max. 0.30 A			

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.10.4 Connection examples

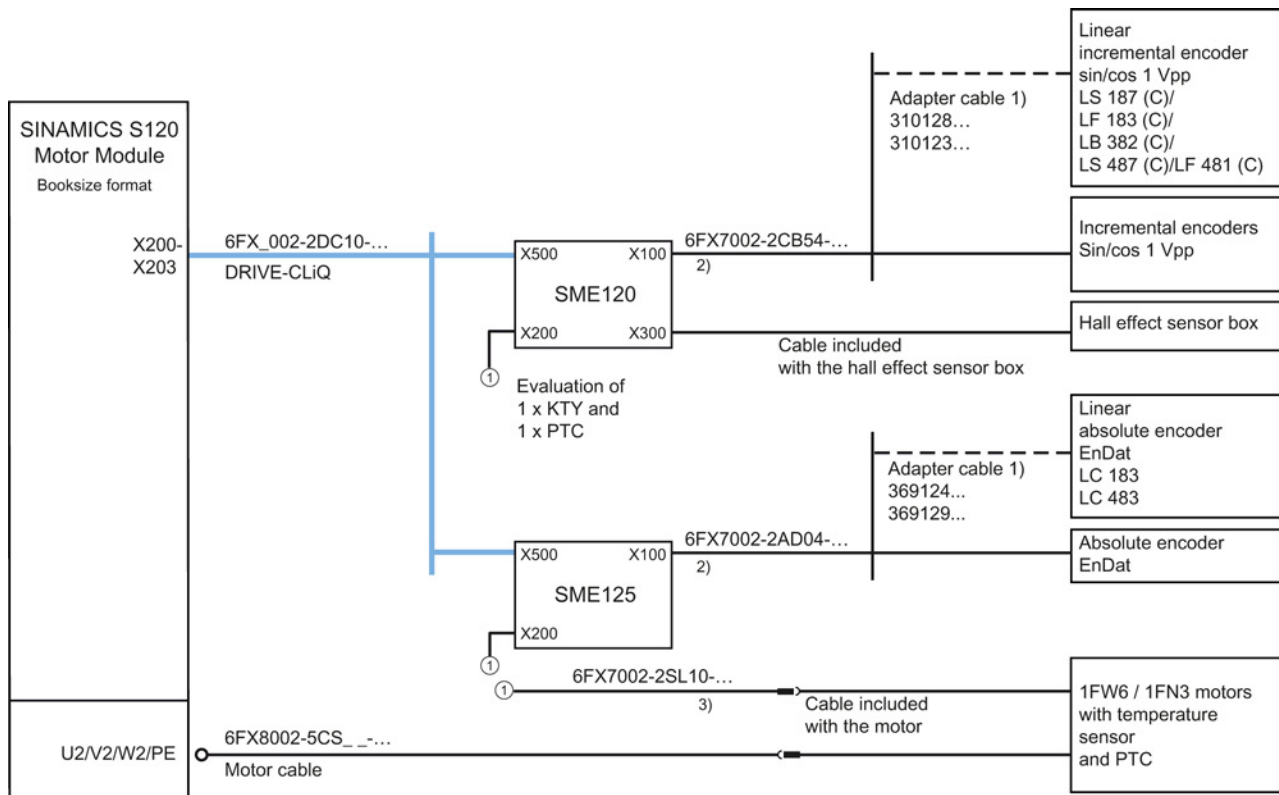


Figure 8-39 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with terminated cable ends

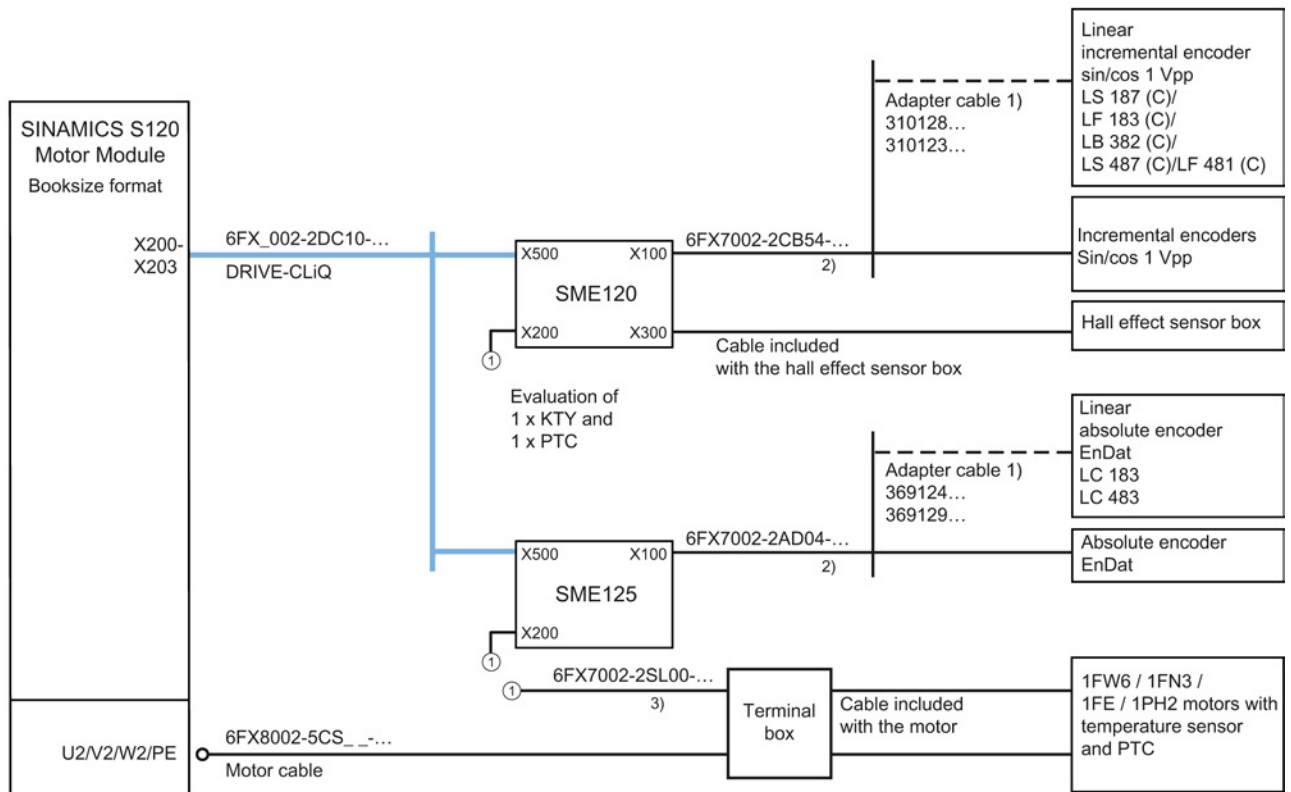


Figure 8-40 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with open cable ends

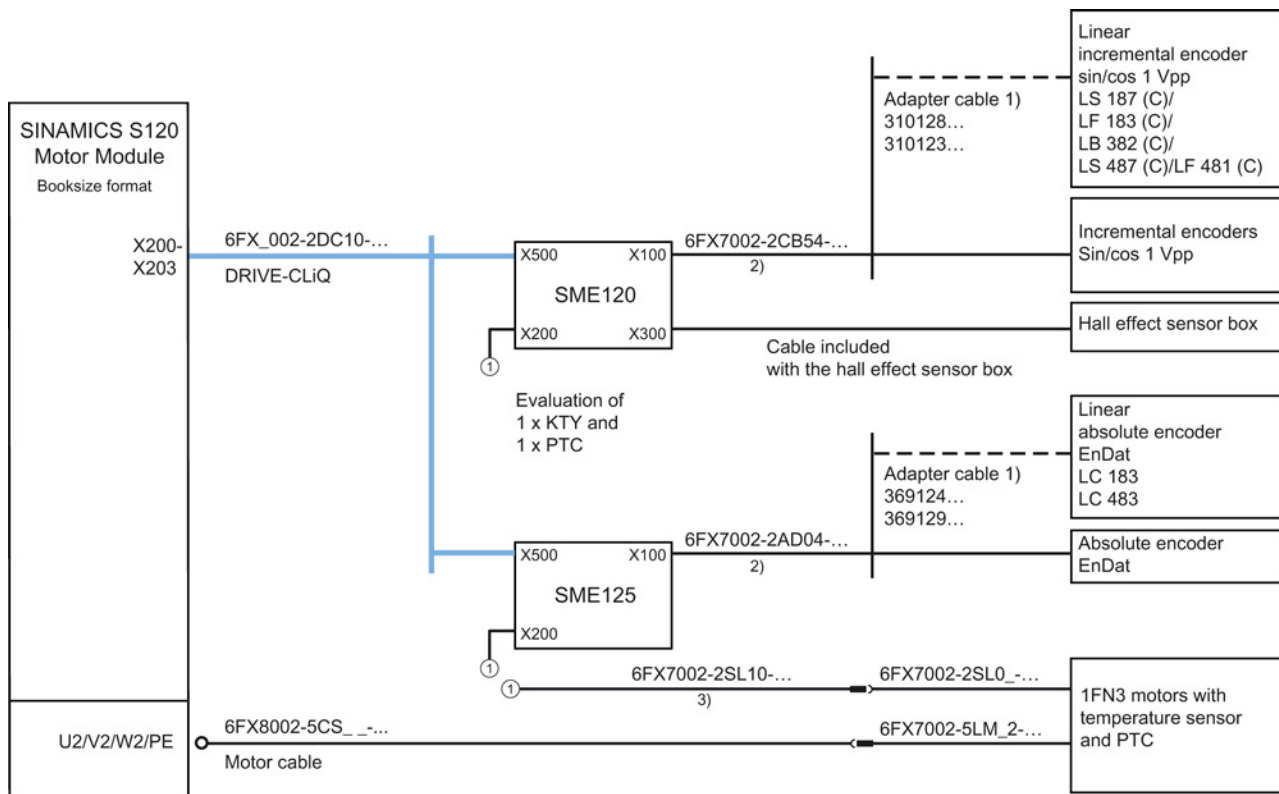


Figure 8-41 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface, with an integrated 2-hole terminal box

Connection examples for motors connected in parallel

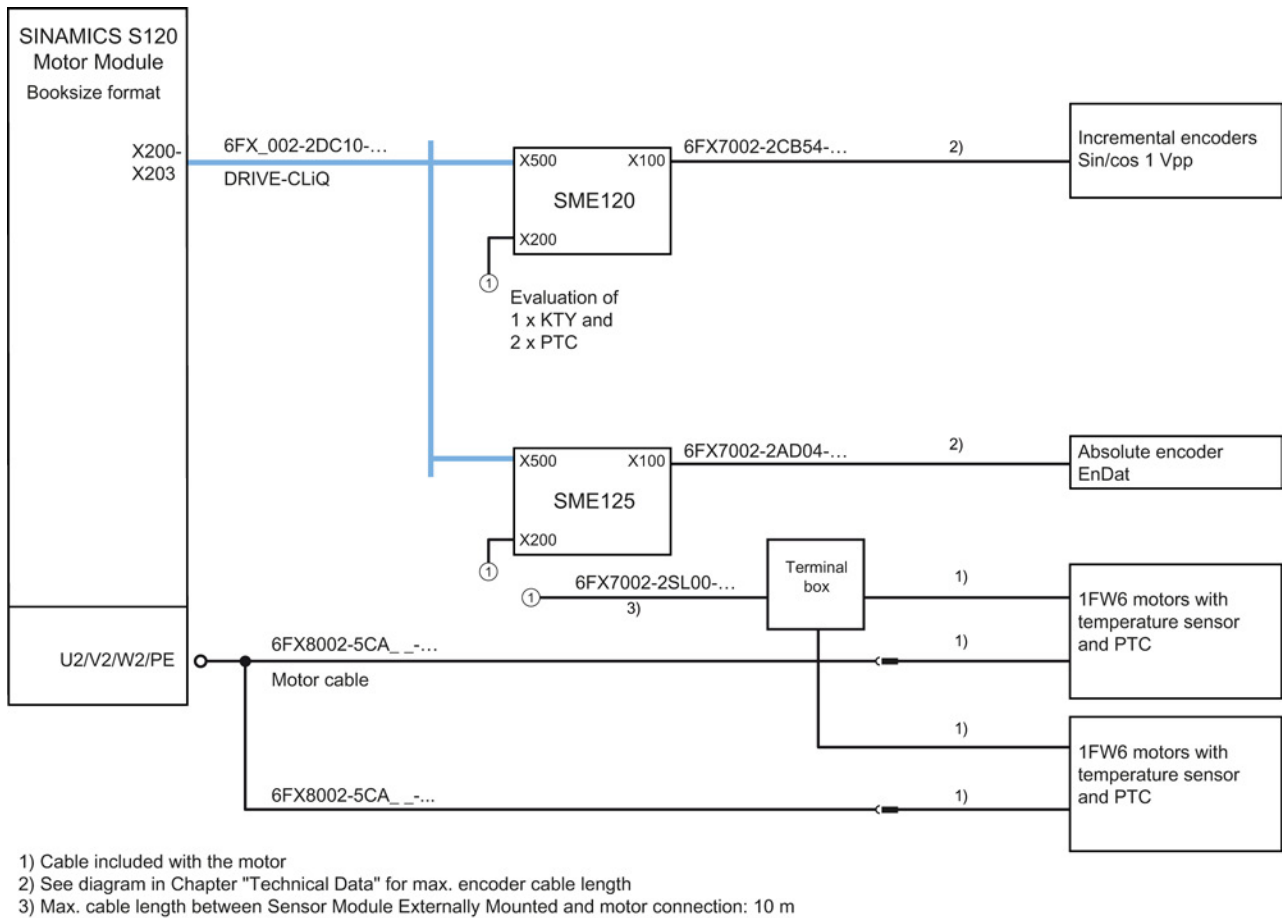


Figure 8-42 Connecting motor encoders via SME for torque motors connected in parallel without a DRIVE-CLiQ interface

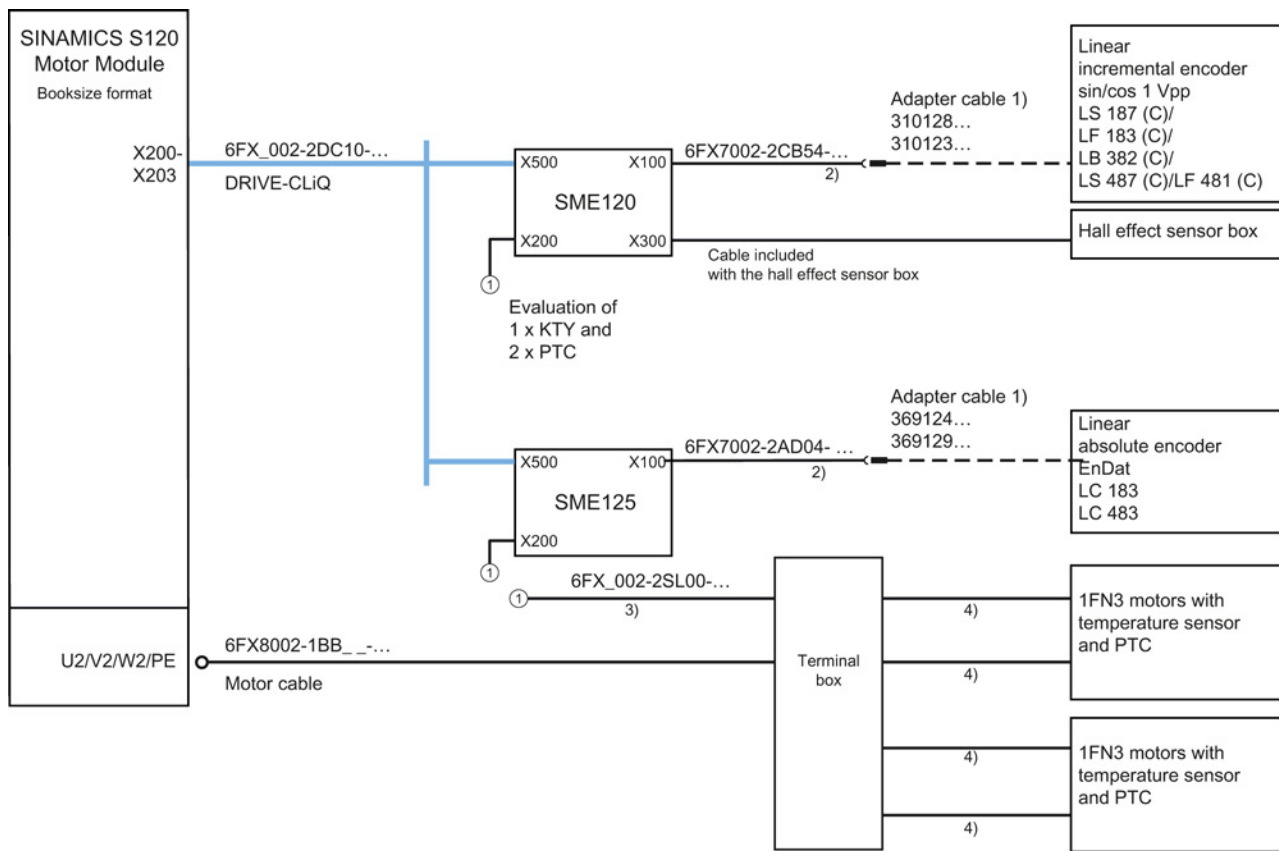


Figure 8-43 Connecting motor encoders via SME for linear motors connected in parallel without a DRIVE-CLiQ interface

8.10.5 Dimension drawing


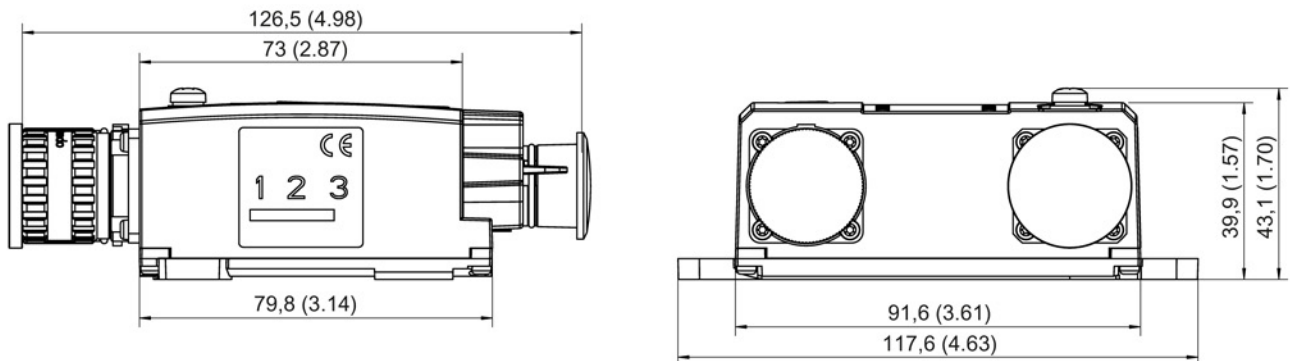


Figure 8-44 Dimension drawing of the Sensor Module External SME120, all data in mm and (inches)

8.10.6 Installation

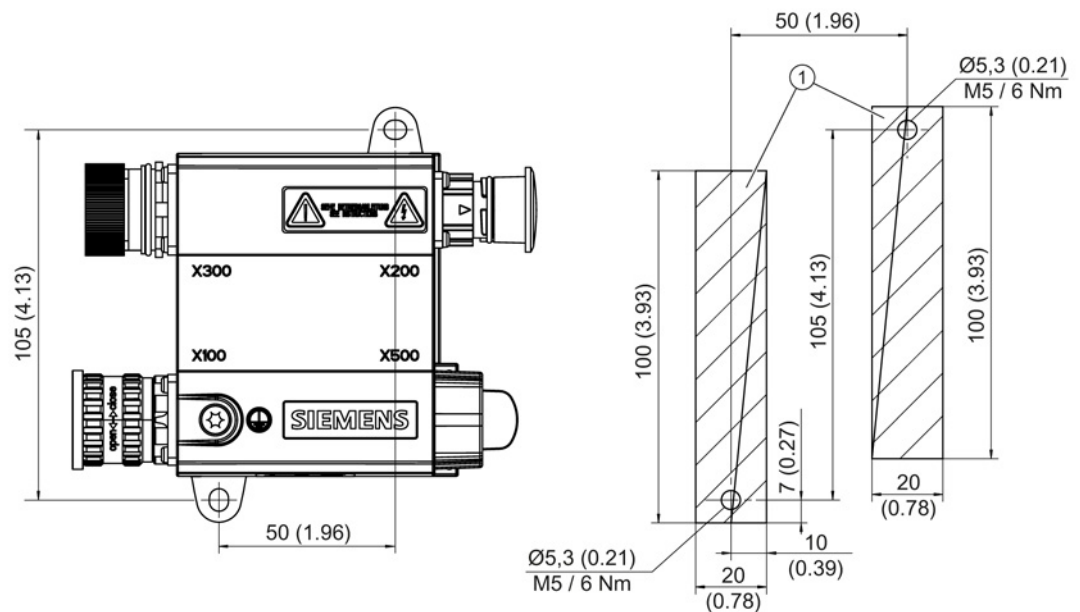

① Contact surface

Figure 8-45 Hole drilling pattern for installation

Installation

1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.10.7 Technical data

Table 8- 37 Technical data

6SL3055-0AA00-5JAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,20
Current (with encoder system)	A _{DC}	≤ 0,30
Power loss	W	≤ 4,5
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0,35
Encoder frequency that can be evaluated (f _{encoder})	kHz	≤ 500
PE/ground connection	At the housing with M4/1.8 Nm screw	
Weight	kg	0,7
Degree of protection		IP67

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 µs, an SME120 with order number 6SL3055-0AA00-5JA3 must be used.

Note

In order to guarantee the degree of protection, all of the plug connectors must be correctly screwed into place and appropriately locked.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 10 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

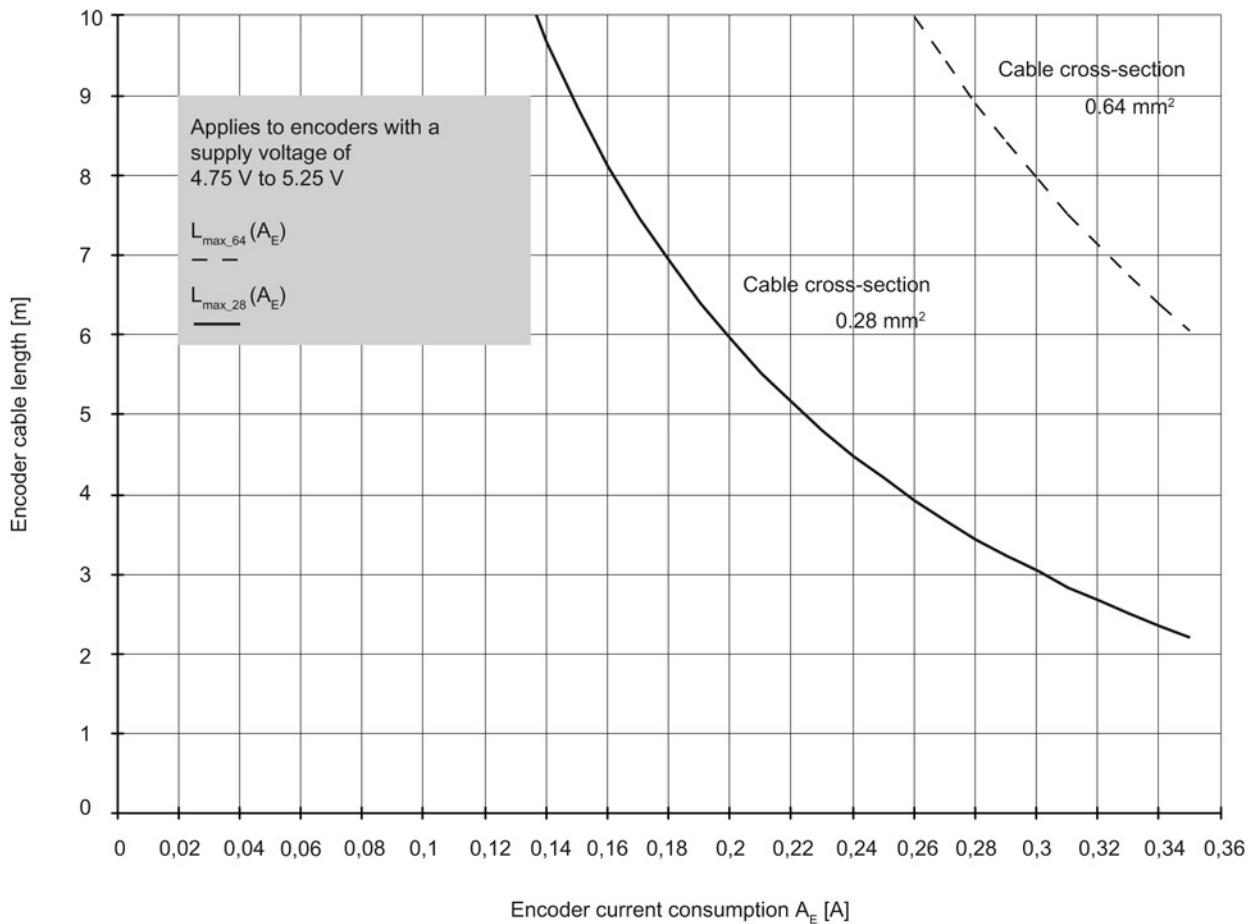


Figure 8-46 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 10 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm².

8.11 Sensor Module External SME125

8.11.1 Description

Direct encoder systems outside the cabinet can be connected to the Sensor Module External SME125. The SME125 evaluates these encoder systems and converts the calculated values to DRIVE-CLiQ.

The components are always used when the temperature signals of the motors do not have protective separation or where this separation is not possible for certain reasons. SME125 is mainly used in linear motor applications.

Direct encoder systems with EnDat 2.1, EnDat 2.2 order designation 02 or SSI with SIN/COS (1 Vpp) incremental signals can be connected, however without reference signal.

Neither motor nor encoder data are saved in the SME125.

8.11.2 Safety instructions for Sensor Modules External

The following safety instructions specifically apply for Sensor Modules External SME12x.

Note

When handling/using a Sensor Module External, you must also observe the safety instructions for Sensor Modules as well as the safety instructions in Chapter 1 (Page 19).

A Sensor Module External SME12x is a device belonging to safety class I.



WARNING

Rules when handling an SME12x

- It is mandatory that you connect a protective conductor with a minimum cross-section of 2.5 mm² in order to guarantee safe electrical separation.
- In order to ensure degree of protection IP67, close all connections, even connections that are not used, with connectors or suitable sealing caps. You must observe the specified torques.
- Before commissioning, always replace the plastic covers of connections X100 to X500 using the corresponding connectors, as otherwise the Sensor Modules External SME12x will not conform with degree of protection IP67.
- Under no circumstances open the Sensor Modules, as this can mean that they are no longer properly sealed! Repair and maintenance work may only be performed by a SIEMENS service center.
- If it appears that the Sensor Module packaging has been damaged by water, do not commission the Sensor Module.

NOTICE

Damage caused by connecting a grounded encoder system power supply


Only connect those encoder systems where the power supply is **not** grounded.

8.11.3 Interface description

8.11.3.1 Overview

Protective conductor connection
M4 screw
Tightening torque, 1.8 Nm
Cross-section min. 2.5 mm²

X100
Encoder system interface
Tightening torque, 3.5 Nm

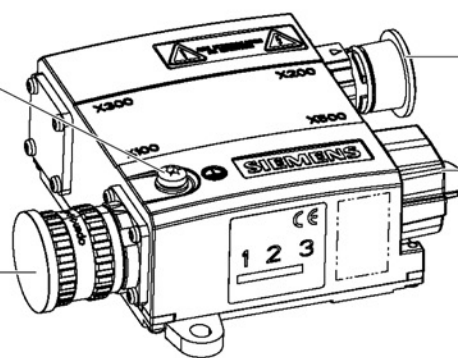


X200
Temperature sensor input
Tightening torque, 2 Nm

X500
DRIVE-CLiQ interface

Figure 8-47 Interface description, SME125

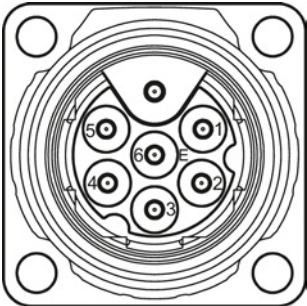
8.11.3.2 X100 encoder system interface

Table 8- 38 X100: Encoder system interface

	Pin	Signal name	Technical data
	1	P5	Encoder power supply
	2	Reserved, do not use	
	3	Reserved, do not use	
	4	M	Ground, encoder power supply
	5	Reserved, do not use	
	6	Reserved, do not use	
	7	P5	Encoder power supply
	8	Clock	Clock, EnDat interface, SSI clock
	9	Clock*	Inverted clock, EnDat interface, inverted SSI clock
	10	M	Ground, encoder power supply
	11	Housing potential	
	12	B	Incremental signal B
	13	B*	Inverse incremental signal B
	14	Data	Data, EnDat interface, SSI data
	15	A	Incremental signal A
	16	A*	Inverse incremental signal A
	17	Data*	Inverse data, EnDat interface, Inverse SSI data
Connector kit:	17-pin, order number: 6FX2003-0SA17		
Blanking plate for encoder system interface: Pöppelmann GmbH & Co. KG, Lohne, Order No.: GPN 300 F211			

8.11.3.3 X200 thermistor sensor input

Table 8- 39 X200: Temperature sensor input

	Pin	Function	Technical data
	1	-Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In linear and torque motor applications, connect the KTY84-1C130 motor temperature sensor here
	2	+Temp	
	3	+Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In linear and torque motor applications, connect the PTC triple element 1 or bimetallic switch here
	4	-Temp	
	5	+Temp	Temperature sensor connection KTY84-1C130/PTC/bimetallic switch with NC contact In torque motor applications, connect the PTC triple element 2 here
	6	-Temp	
Connector kit:	6+1 pin, order number: 6FX2003-0SU07		
Measuring current via temperature sensor connection: 2 mA			
Accuracy with the temperature measurement: - KTY: $\pm 7^{\circ}\text{C}$ (including evaluation) - PTC: $\pm 5^{\circ}\text{C}$ (including evaluation)			

NOTICE

 
Overheating of the motor through jumpering the temperature sensor connections

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

8.11.3.4 X500 DRIVE-CLiQ interface

Table 8- 40 X500: DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		
Power consumption max. 0.30 A			


The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

Note

Only MOTION-CONNECT DRIVE-CLiQ cables may be used for connections. The maximum cable length is 100 m for MOTION-CONNECT 500, and 75 m for MOTION-CONNECT 800PLUS cables.

8.11.4 Connection examples

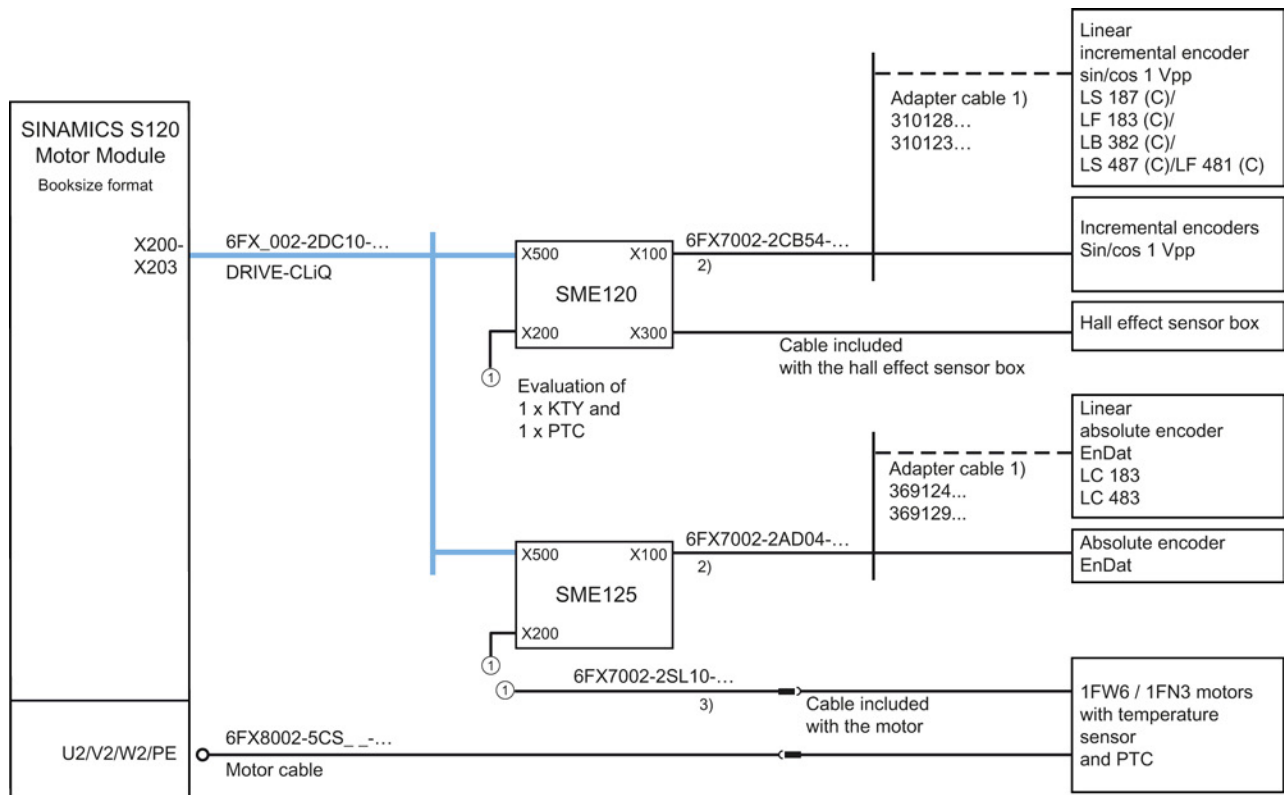


1) Cable can be ordered from supplier of linear scale.

2) See diagram in Chapter "Technical Data" for max. encoder cable length

3) Max. cable length between Sensor Module Externally Mounted and motor connection: 10 m

Figure 8-48 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with terminated cable ends

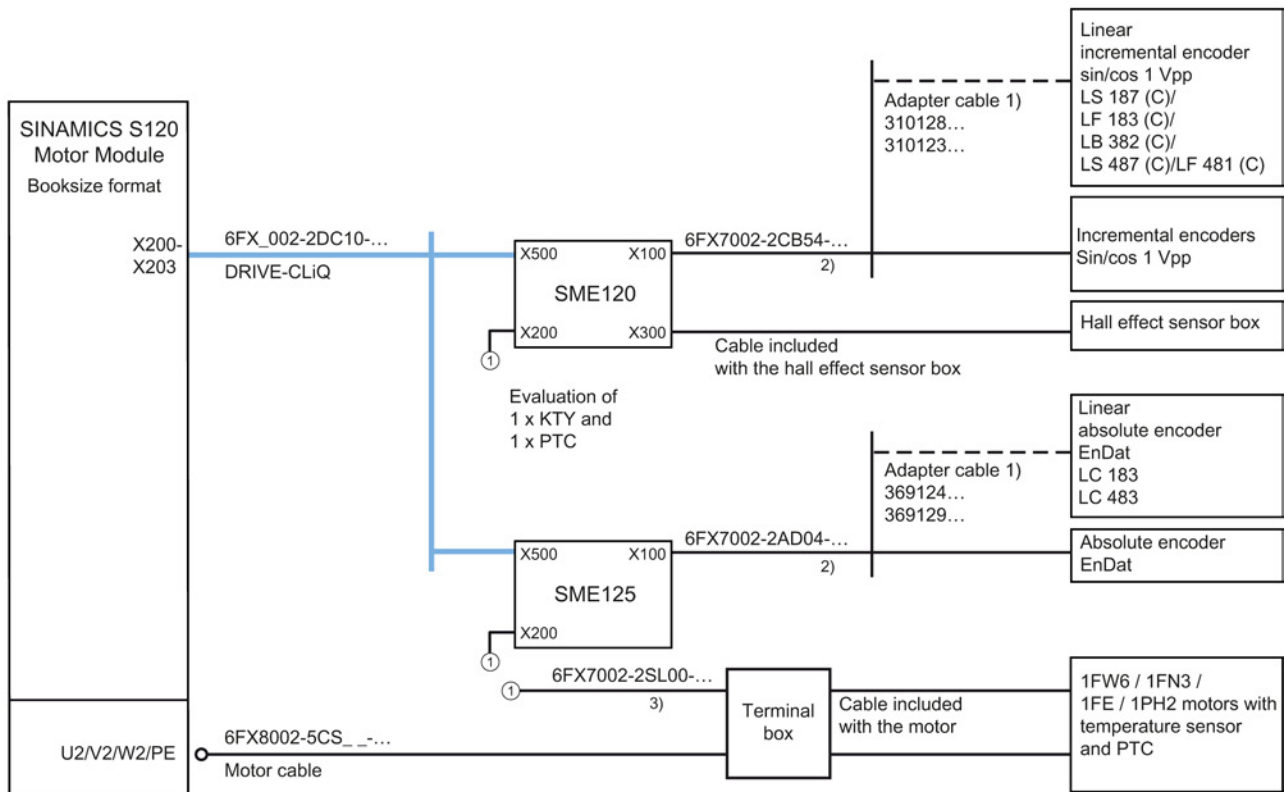


1) Cable can be ordered from supplier of linear scale.

2) See diagram in Chapter "Technical Data" for max. encoder cable length

3) Max. cable length between Sensor Module Externally Mounted and motor connection: 10 m

Figure 8-49 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface and molded connecting cables with open cable ends

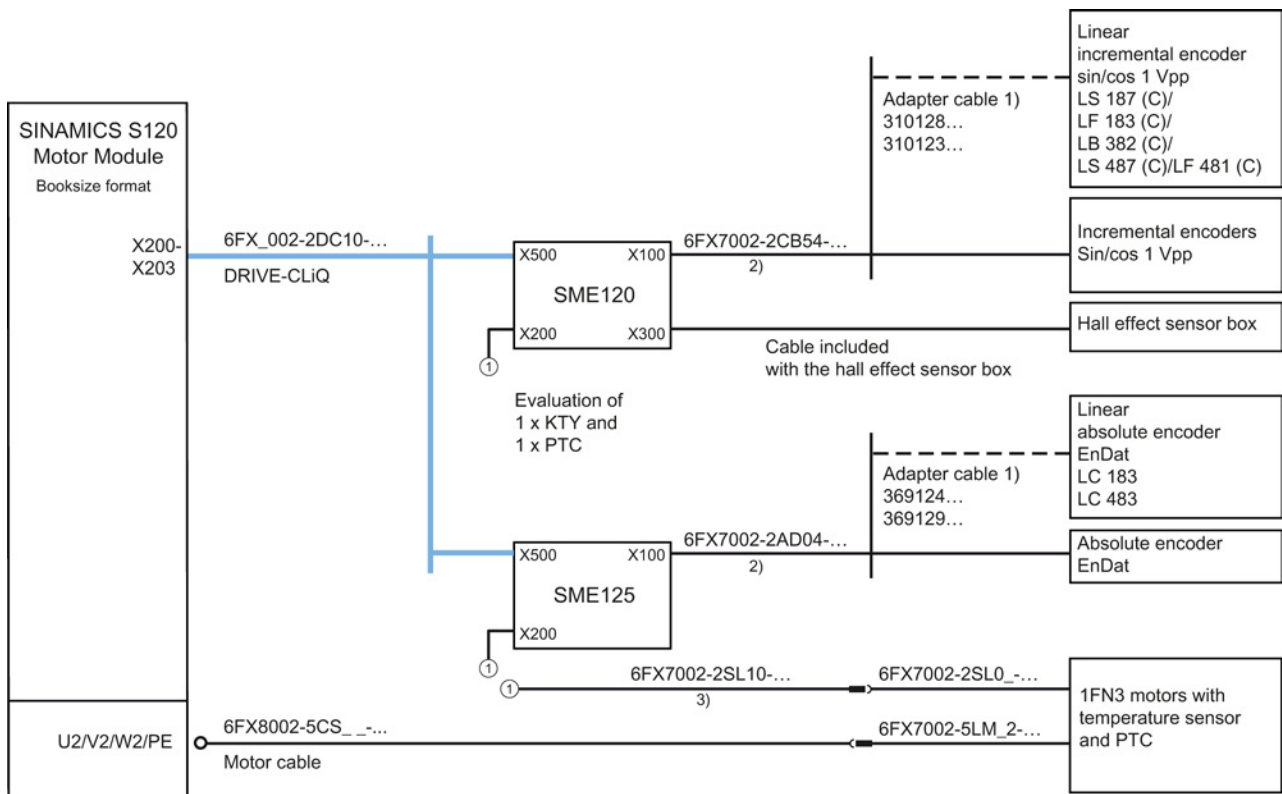

1) Cable can be ordered from supplier of linear scale.

2) See diagram in Chapter "Technical Data" for max. encoder cable length

3) Max. cable length between Sensor Module Externally Mounted and motor connection: 10 m

Figure 8-50 Connecting motor encoders via SME for motors without a DRIVE-CLiQ interface, with an integrated 2-hole terminal box

Connection examples for motors connected in parallel


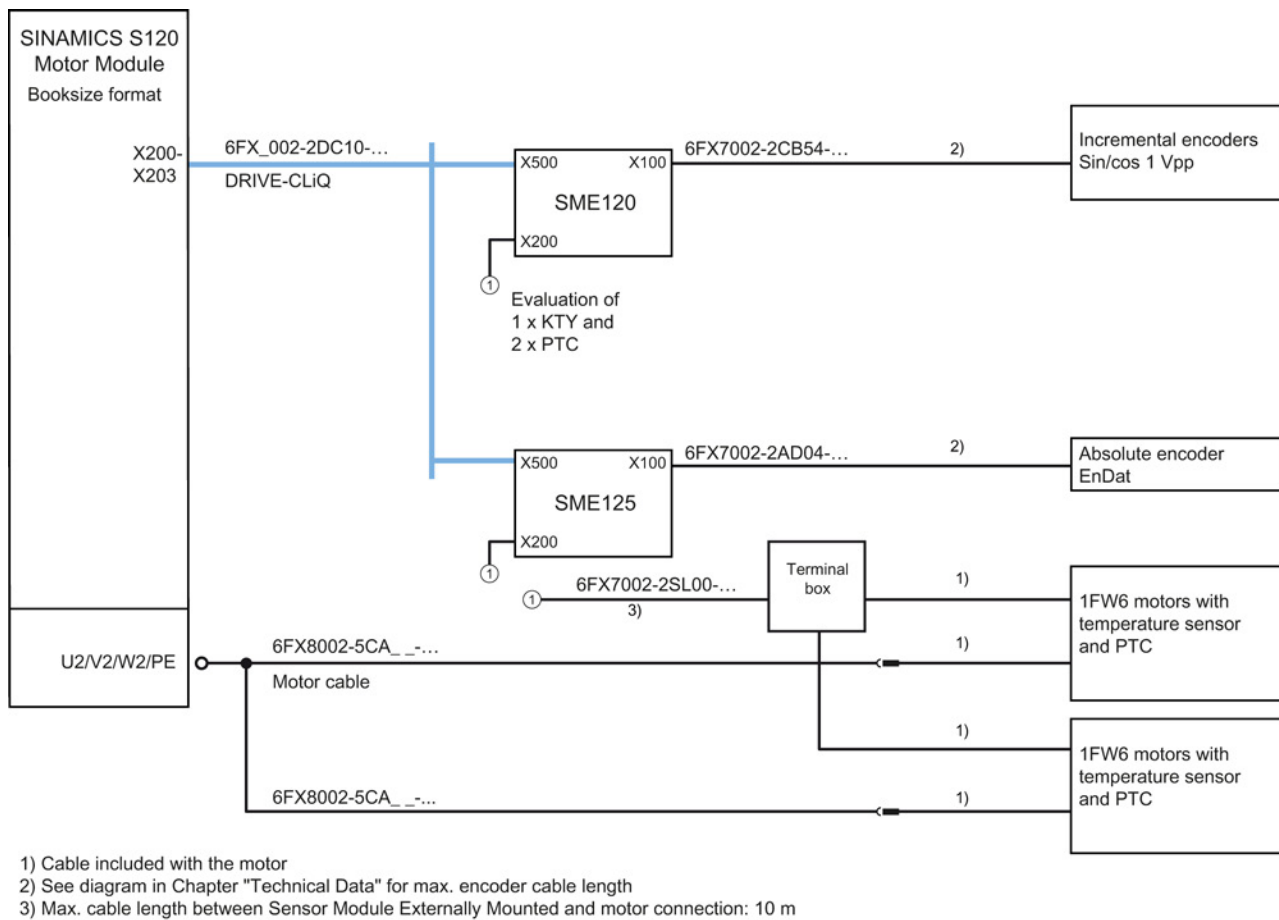


Figure 8-51 Connecting motor encoders via SME for torque motors connected in parallel without a DRIVE-CLiQ interface

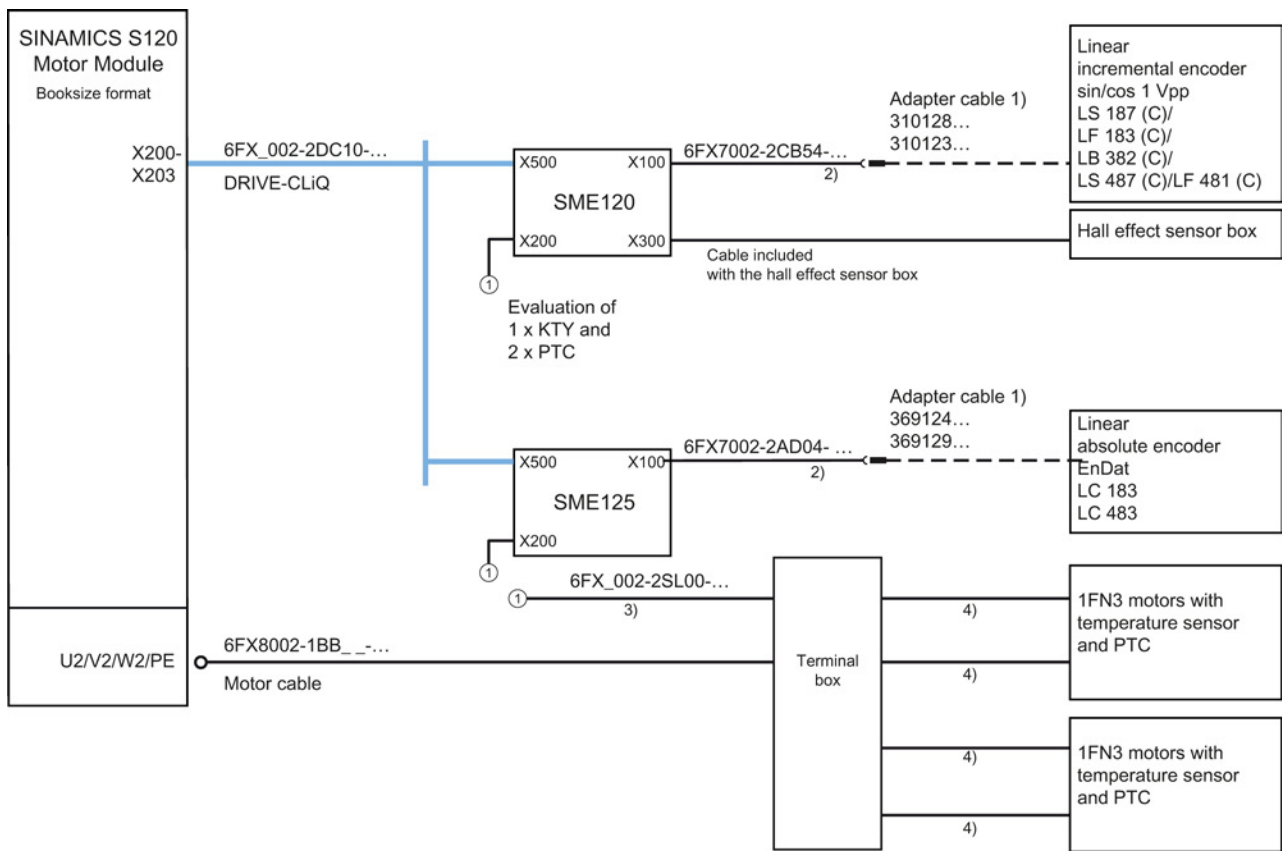

1) Cable can be ordered from supplier of linear scale.

2) See diagram in Chapter "Technical Data" for max. encoder cable length

3) Max. cable length between Sensor Module Externally Mounted and motor connection: 10 m

4) For motors without terminal box, cables are included with the motor. 6FX7002-2SL0_... cables must be used for motors with 2-hole terminal boxes.

Figure 8-52 Connecting motor encoders via SME for linear motors connected in parallel without a DRIVE-CLiQ interface

8.11.5 Dimension drawing


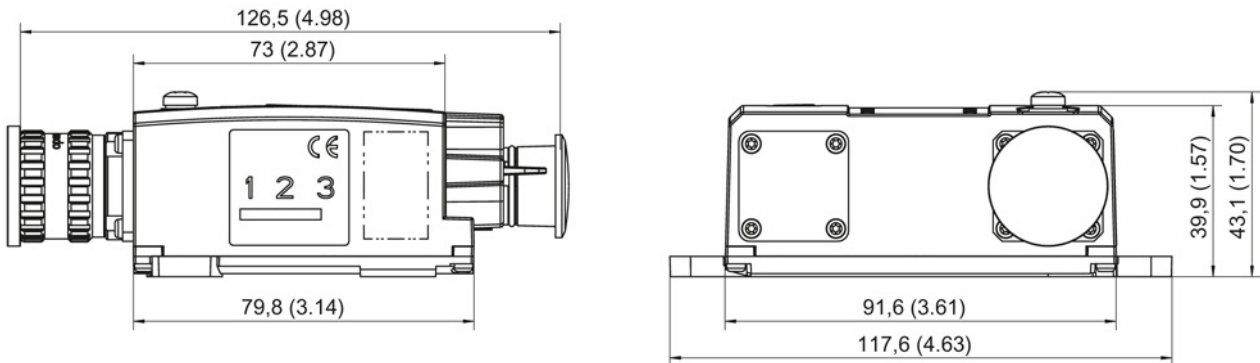


Figure 8-53 Dimension drawing of the Sensor Module External SME125, all data in mm and (inches)

8.11.6 Installation

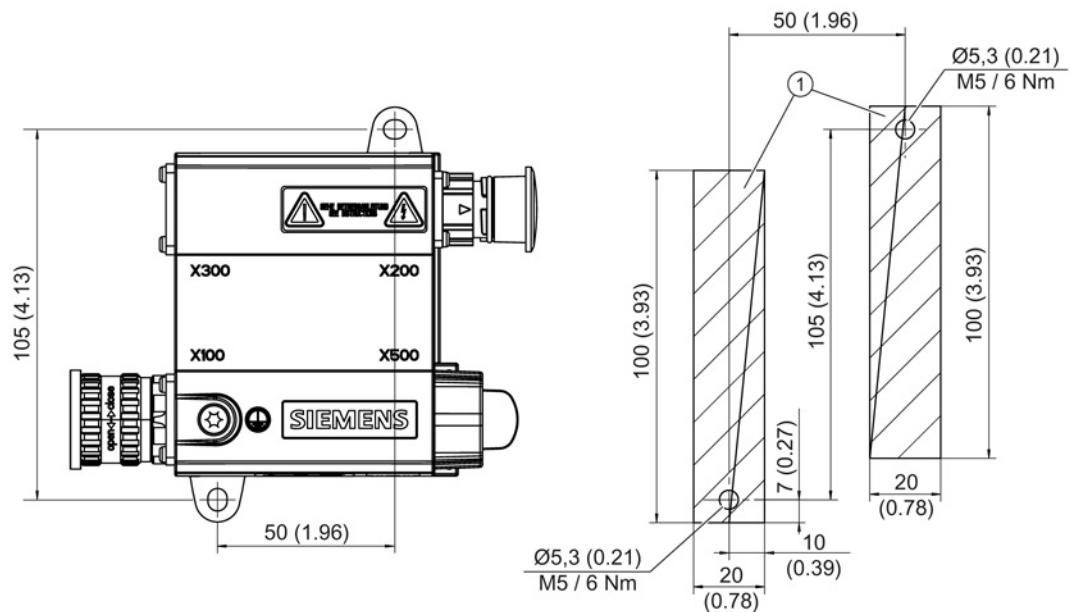

① Contact surface

Figure 8-54 Hole drilling pattern for installation

Installation

1. Place the drilling pattern on the mounting surface. Make sure that the contact surface is bare, unpainted metal.
2. Drill two holes with Ø 5.3 or M5 threaded holes according to the drilling pattern.
3. Fix the Sensor Module to the mounting surface. The tightening torque is 6 Nm.

8.11.7 Technical data

Table 8- 41 Technical data

6SL3055-0AA00-5KAx	Unit	Value
Electronics power supply		
Voltage	V _{DC}	24 (20,4 ... 28,8)
Current (without encoder system)	A _{DC}	≤ 0,20
Current (with encoder system)	A _{DC}	≤ 0,30
Power loss	W	≤ 4,5
Encoder system power supply		
Voltage	V _{DC}	5
Current	A _{DC}	0,35
Encoder frequency that can be evaluated (f _{encoder})	kHz	≤ 500
SSI/EnDat baud rate	kBd	100
PE/ground connection	At the housing with M4 screw Tightening torque: 1.8 Nm	
Weight	kg	0,7
Degree of protection		IP67

Note

Current controller clock cycle

For a current controller clock cycle of 31.25 μs, an SME125 with order number 6SL3055-0AA00-5KA3 must be used.

Note

In order to guarantee the degree of protection, all of the plug connectors must be correctly screwed into place and appropriately locked.

The maximum cable length for the encoder system interface depends on the current consumption of the encoder system and the cross-section of the wire in the cable. However, the maximum length is 10 m. The figure below applies to encoder systems that operate in the supply voltage range between 4.75 V and 5.25 V. The sample parameters shown are 0.28 mm² cross-section (0.14 mm² supply plus 0.14 mm² Remote Sense wires) and 0.64 mm² (0.5 mm² supply plus 0.14 mm² Remote Sense wires).

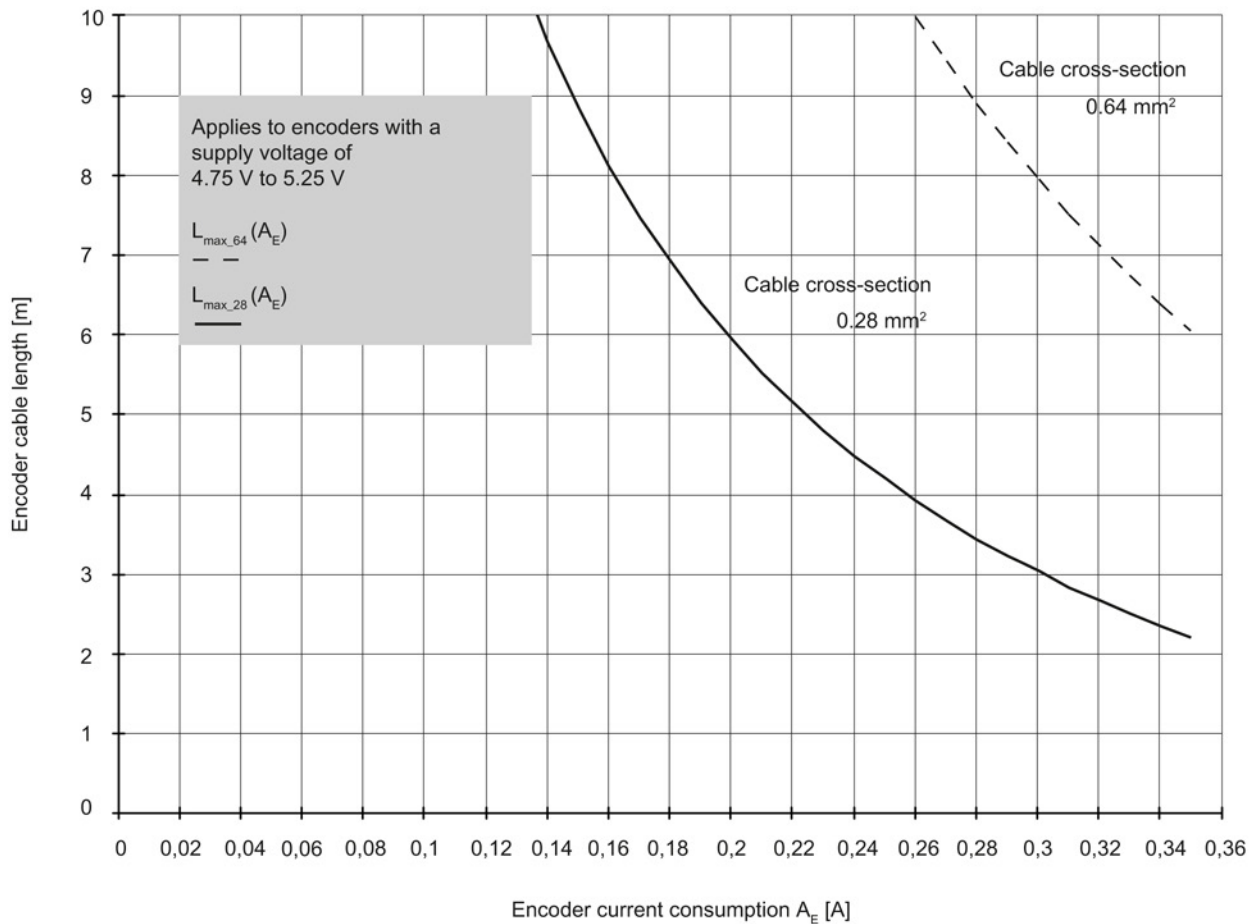


Figure 8-55 Max. cable length as a function of the current drawn by the encoder system

In addition to the encoder systems for the supply voltage range of 4.75 V to 5.25 V in the diagram above, encoder systems are also available for the extended range down to 3.6 V. These are generally operable using encoder system cables up to 10 m in length, provided that the total cross-section of the supply plus Remote Sense wires does not fall below 0.14 mm².

8.12 DRIVE-CLiQ encoder

8.12.1 Description

The DRIVE-CLiQ encoder is available as an absolute encoder with integrated DRIVE-CLiQ interface. The multiturn design of the encoder senses absolute position values extending over 4096 revolutions. The singleturn design senses the absolute position within a revolution.

The most important advantages are:

- Automatic commissioning via DRIVE-CLiQ
- High operating temperatures of 100 °C are possible
- Integrated diagnostics concept

Table 8- 42 Encoder for mounting with DRIVE-CLiQ

Designation	Order number	Description
DRIVE-CLiQ synchronous flange VW 6 mm	6FX2001-5FD13-0AAx	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ clamping flange VW 10 mm	6FX2001-5QD13-0AAx	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ hollow shaft 10 mm	6FX2001-5VD13-0AAx	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ hollow shaft 12 mm	6FX2001-5WD13-0AAx	Absolute encoder with DRIVE-CLiQ, single-turn
DRIVE-CLiQ synchronous flange VW 6 mm	6FX2001-5FD25-0AAx	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ clamping flange VW 10 mm	6FX2001-5QD25-0AAx	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ hollow shaft 10 mm	6FX2001-5VD25-0AAx	Absolute encoder with DRIVE-CLiQ, multiturn
DRIVE-CLiQ hollow shaft 12 mm	6FX2001-5WD25-0AAx	Absolute encoder with DRIVE-CLiQ, multiturn

8.12.2 Interface description

 
8.12.2.1 Overview



Figure 8-56 DRIVE-CLiQ encoder

8.12.2.2 DRIVE-CLiQ interface

Table 8- 43 DRIVE-CLiQ interface

	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground

The blanking cover for the DRIVE-CLiQ port to secure the degree of protection IP 67 is not included in the scope of delivery.

Blanking covers (6 pcs) order number: 6SL3066-4CA01-0AA0

8.12.3 Dimension drawings

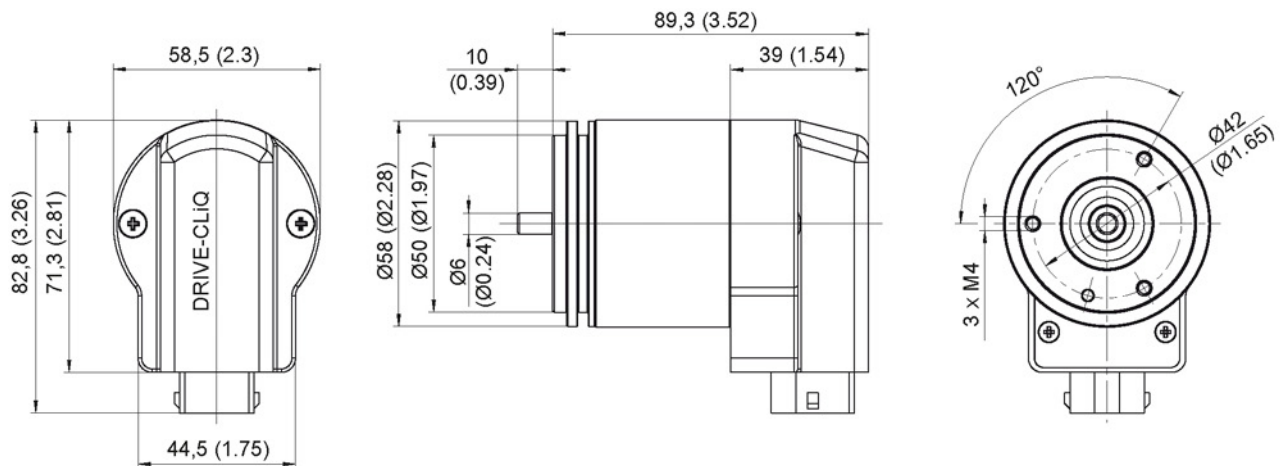


Figure 8-57 Dimension drawing of synchronous flange, all data in mm and (inches)

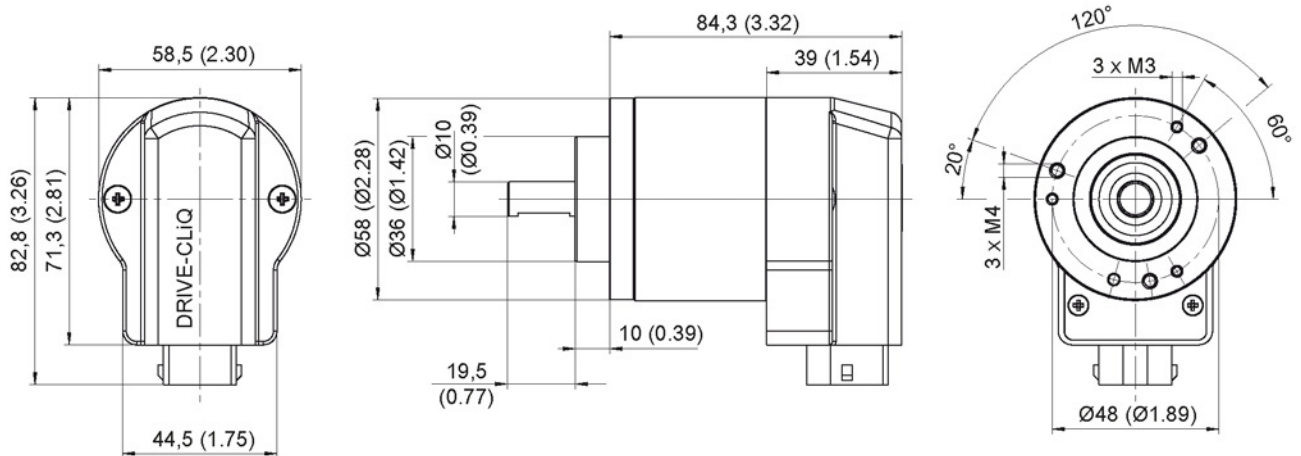


Figure 8-58 Dimension drawing of clamping flange, all data in mm and (inches)

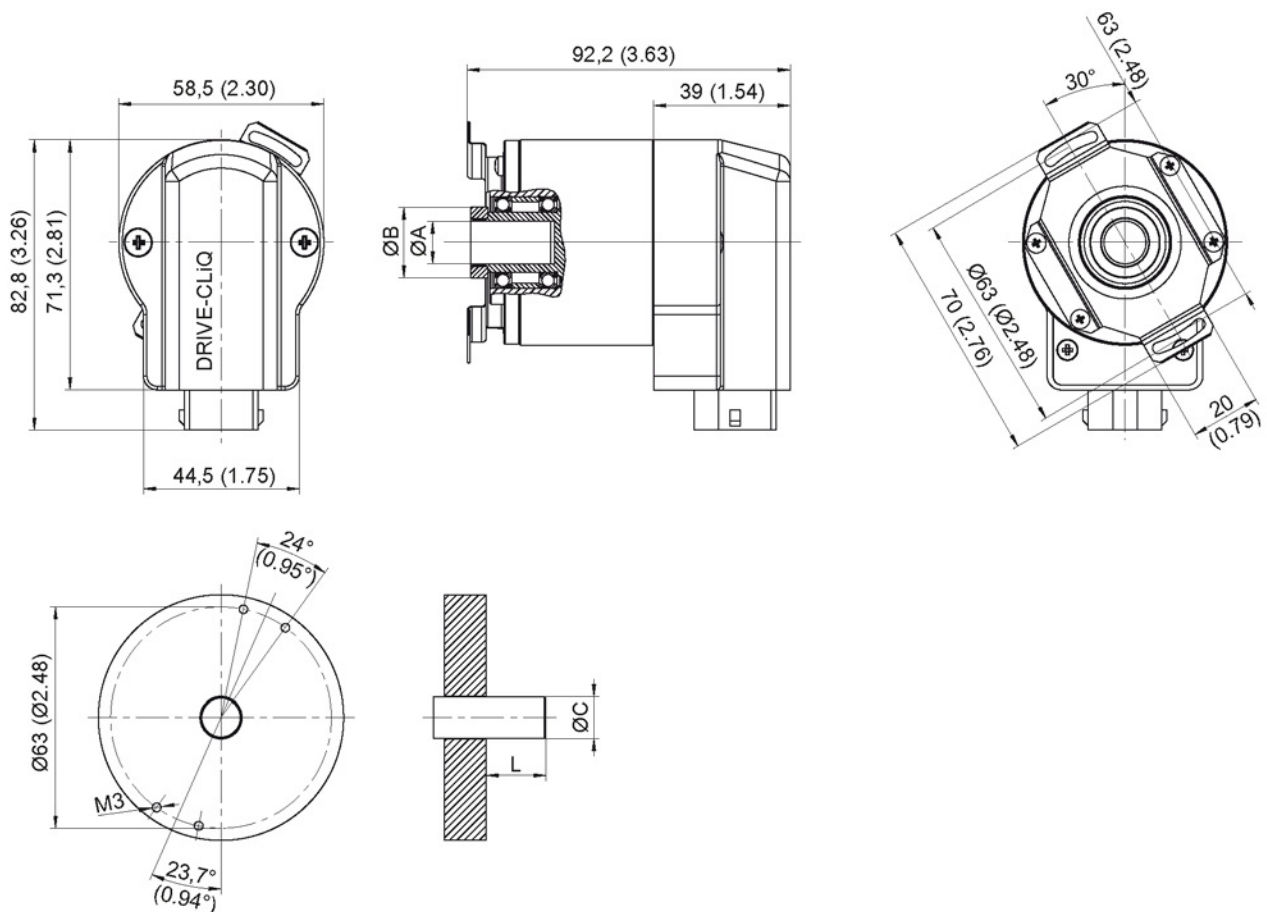


Figure 8-59 Dimension drawing of hollow shaft, all data in mm and (inches)

Table 8- 44 Dimensions

	Dimensions		Unit
Hollow shaft $\varnothing A$	$10^{+0.012}$ (0.39)	$12^{+0.012}$ (0.47)	mm (inch)
Connection shafts $\varnothing C$	10 (0.39)	12 (0.47)	mm (inch)
Clamping ring $\varnothing B$	18 (0.70)	20 (0.78)	mm (inch)
L min.	15 (0.59)	18 (0.70)	mm (inch)
L max.	20 (0.78)	20 (0.78)	mm (inch)
Shaft code	2 (0.07)	7 (0.27)	mm (inch)

L = Engaged depth of the connection shaft into the encoder

8.12.4 Installation

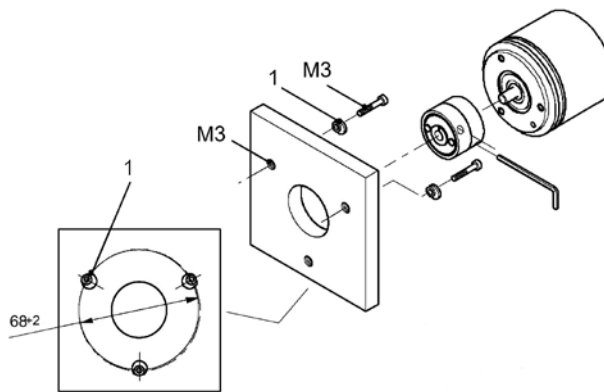


Figure 8-60 Installation: Synchronous flange, 1: Clamp straps

Clamp straps / couplings

Clamp straps and couplings are required as mounting accessories. The clamp straps are used to fix the encoders with a synchronous flange.

Table 8- 45 Selection and ordering data

Designation	Order No.
Clamp strap (No.1 in the drawing) for encoder with synchronous flange (3 units are required)	6FX2001-7KP01
Spring disk coupling Shaft diameter: <ul style="list-style-type: none"> 6 mm / 6 mm 6 mm / 5 mm 	6FX2001-7KF10 6FX2001-7KF06
Plug-in coupling Shaft diameter: <ul style="list-style-type: none"> 6 mm / 6 mm 10 mm / 10 mm 	6FX2001-7KS06 6FX2001-7KS10

Table 8- 46 Installation instructions

Product name	Spring disk coupling	Plug-in coupling
Transmission torque, max.	0.8 Nm	0.7 Nm
Shaft diameter	6 mm both ends or $d_1 = 6 \text{ mm}$, $d_2 = 5 \text{ mm}$	6 mm both ends or 10 mm both ends
Center offset of shafts, max.	0.4 mm	0.5 mm
Axial offset	$\pm 0.4 \text{ mm}$	$\pm 0.5 \text{ mm}$
Angular displacement of shafts, max.	3°	1°
Torsional rigidity	150 Nm / rad	31 Nm / rad
Lateral spring stiffness	6 N / mm	10 N / mm
Moment of inertia	19 gcm ²	20 gcm ²
Max. speed	12000 rpm	12000 rpm
Operating temperature	-20 ... +150 °C	-20 ... +80 °C
Weight, approx.	16 g	20 g

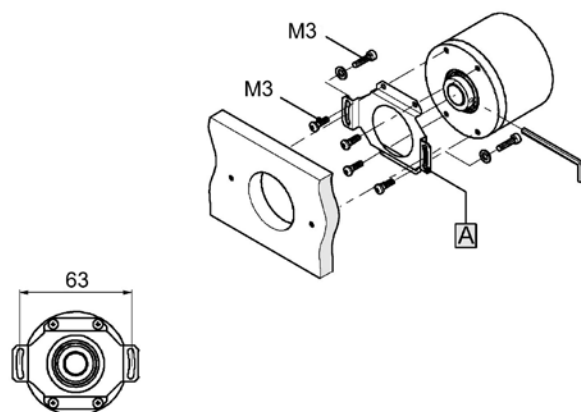


Figure 8-61 Installation: Hollow shaft, A: Spring plate (included in scope of supply)

8.12.5 Technical data

Table 8- 47 Technical data of DRIVE-CLiQ encoders

Design	Unit	Absolute encoder with DRIVE-CLiQ
Operating voltage at encoder	V	24 V -15% / +20%
Power consumption Single-turn Multiturn	mA mA	approx. 245 approx. 325
Interface		DRIVE-CLiQ
Speed electrically permissible mechanical, max.	rpm rpm	14000 10000
Cable length , max.	m	100
Connection		DRIVE-CLiQ connector, radial
Resolution Single-turn Multiturn	Bit Bit	22 34 (22 bit single-turn + 12 bit multiturn)
Accuracy	Angular seconds	±35
Frictional torque	Nm	≤ 0.01 (at 20°C)
Starting torque	Nm	≤ 0.01 (at 20°C)
Shaft load capability d 10 x 19.5 70° n > 6000 rpm n ≤ 6000 rpm		axial 40 N / radial 40 N at the shaft end axial 40 N / radial 60 N at the shaft end
Angular acceleration , , max.	rad/s ²	10 ⁵
Moment of inertia of the rotor Solid shaft Hollow shaft	kgm ² kgm ²	1.90 * 10 ⁻⁶ kgm ² 2.80 * 10 ⁻⁶ kgm ²
Vibration loading acc. to IEC 60068-2-6	m/s ²	≤ 100 (10 - 500 Hz)
Shock (6 ms) acc. to IEC 60068-2-27	m/s ²	≤ 1000 (6 ms)
Operating temperature min. max.	°C °C	-20 100
Degree of protection acc. to IEC 60529		IP67 at the frame IP64 at the shaft input
Weight Single-turn Multiturn	kg kg	0,40 0,44
CE mark		Yes

9.1 Tightening torques for screws and screw connections

For screws and screw connections of components that are described in this manual, the following tightening torques apply:

Table 9- 1 Tightening torques for ground connections, protective conductor screw connections and control cabinet installation

Thread	Tightening torque in Nm
M3	0.8 Nm
M4	1.8 Nm
M5	3.0 Nm
M6	6.0 Nm
M8	13.0 Nm
M10	25.0 Nm

Tolerance → 0 to +30 %

Deviating tightening torques

For screw terminals on components and for mounting individual components in the control cabinet, the following deviating tightening torques apply. The corresponding data are described in the following chapters:

- Installation for SME20 (Page 304), SME25 (Page 310), SME120 (Page 323) and SME125 (Page 336)
- Screw terminals (Page 360)

9.2 Information on control cabinet installation and EMC

Information on control cabinet installation and electromagnetic compatibility (EMC), as well as on overcurrent and overvoltage protection, can be found in the following manuals:

- Components in the booksize format:
SINAMICS S120 Manual for Booksize Power Units (GH2)
- Components in the blocksize format:
SINAMICS S120 Manual AC Drive (GH6)
- Components in the chassis format:
SINAMICS S120 Manual Chassis Power Units (GH3), SINAMICS S120 Manual Chassis Units Liquid-Cooled (GH7)

The requirements to implement EMC are listed in the Configuration Manual "EMC installation guideline" (Order number 6FC5297-0AD30-0xPx).

Appendix

A.1 List of abbreviations

Note

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS family of drives.

Abbreviation	Source of the abbreviation	Meaning
A		
A...	Alarm	Alarm
AC	Alternating Current	Alternating current
ADC	Analog Digital Converter	Analog-digital converter
AI	Analog Input	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analog Output	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced Positioning Control
AR	Automatic Restart	Automatic restart
ASC	Armature Short-Circuit	Armature short-circuit
ASCII	American Standard Code for Information Interchange	American standard code for information interchange
AS-i	AS-Interface (Actuator Sensor Interface)	AS interface (open bus system in automation technology)
ASM	Asynchronmotor	Induction motor
B		
BB	Betriebsbedingung	Operating condition
BERO	-	Proximity switch
BI	Binector Input	Binector Input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	BG Institute for Occupational Safety and Health
BICO	Binector Connector Technology	Binector connector technology
BLM	Basic Line Module	Basic Line Module

Abbreviation	Source of the abbreviation	Meaning
BO	Binector Output	Binector output
BOP	Basic Operator Panel	Basic Operator Panel
C		
C	Capacitance	Capacitance
C...	-	Safety message
CAN	Controller Area Network	Serial bus system
CBC	Communication Board CAN	Communication Board CAN
CBE	Communication Board Ethernet	PROFINET communication module (Ethernet)
CD	Compact Disc	Compact disk
CDS	Command Data Set	Command data set
CF Card	CompactFlash Card	CompactFlash card
CI	Connector Input	Connector Input
CLC	Clearance Control	Clearance control
CNC	Computer Numerical Control	Computerized numerical control
CO	Connector Output	Connector output
CO/BO	Connector Output/Binector Output	Connector/binector output
COB ID	CAN Object-Identification	CAN object identification
CoL	Certificate of License	Certificate of License
COM	Common contact of a change-over relay	Center contact on a changeover contact
COMM	Commissioning	Commissioning
CP	Communication Processor	Communications processor
CPU	Central Processing Unit	Central processing unit
CRC	Cyclic Redundancy Check	Cyclic redundancy check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control unit
CUA	Control Unit Adapter	Control Unit Adapter
CUD	Control Unit DC MASTER	Control Unit DC MASTER
D		
DAC	Digital Analog Converter	Digital-analog converter
DC	Direct Current	Direct current
DCB	Drive Control Block	Drive Control Block
DCBRK	DC Brake	DC braking
DCC	Drive Control Chart	Drive Control Chart
DCN	Direct Current Negative	Direct current negative
DCP	Direct Current Positive	Direct current positive
DDS	Drive Data Set	Drive data set
DI	Digital Input	Digital input
DI/DO	Digital Input/Digital Output	Bidirectional digital input/output
DMC	DRIVE-CLiQ Hub Module Cabinet	DRIVE-CLiQ Hub Module Cabinet
DME	DRIVE-CLiQ Hub Module External	DRIVE-CLiQ Hub Module External

Abbreviation	Source of the abbreviation	Meaning
DMM	Double Motor Module	Double Motor Module
DO	Digital Output	Digital output
DO	Drive Object	Drive object
DP	Decentralized Peripherals	Distributed I/O
DPRAM	Dual Ported Random Access Memory	Dual-Port Random Access Memory
DQ	DRIVE-CLiQ	DRIVE-CLiQ
DRAM	Dynamic Random Access Memory	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic Servo Control
DTC	Digital Time Clock	Timer
E		
EASC	External Armature Short-Circuit	External armature short-circuit
EDS	Encoder Data Set	Encoder data set
EEPROM	Electrically Erasable Programmable Read-Only Memory	Electrically Erasable Programmable Read-Only-Memory
ESD	Elektrostatisch gefährdete Baugruppen	Electrostatic sensitive devices
ELCB	Earth Leakage Circuit Breaker	Residual current operated circuit breaker
ELP	Earth Leakage Protection	Ground-fault monitoring
EMC	Electromagnetic Compatibility	Electromagnetic compatibility
EMF	Electromotive Force	Electromotive force
EMK	Elektromotorische Kraft	Electromotive force
EMV	Elektromagnetische Verträglichkeit	Electromagnetic compatibility
EN	Europäische Norm	European standard
EnDat	Encoder-Data-Interface	Encoder interface
EP	Enable Pulses	Enable pulses
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering System
ESB	Ersatzschaltbild	Equivalent circuit diagram
ESD	Electrostatic Sensitive Devices	Electrostatic sensitive devices
ESM	Essential Service Mode	Essential service mode
ESR	Extended Stop and Retract	Extended stop and retract
F		
F...	Fault	Fault
FAQ	Frequently Asked Questions	Frequently asked questions
FBLOCKS	Free Blocks	Free function blocks
FCC	Function Control Chart	Function control chart
FCC	Flux Current Control	Flux current control
FD	Function Diagram	Function diagram
F-DI	Failsafe Digital Input	Fail-safe digital input
F-DO	Failsafe Digital Output	Fail-safe digital output

Abbreviation	Source of the abbreviation	Meaning
FEM	Fremderregter Synchronmotor	Separately excited synchronous motor
FEPROM	Flash-EPROM	Non-volatile write and read memory
FG	Function Generator	Function generator
FI	-	Residual current
FOC	Fiber-Optic Cable	Fiber-optic cable
FP	Funktionsplan	Function diagram
FPGA	Field Programmable Gate Array	Field programmable gate array
FW	Firmware	Firmware
G		
GB	Gigabyte	Gigabyte
GC	Global Control	Global control telegram (broadcast telegram)
GND	Ground	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as M)
GSD	Gerätestammdatei	Generic station description: describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate supply voltage
GUID	Globally Unique Identifier	Globally Unique Identifier
H		
HF	High frequency	High frequency
HFD	Hochfrequenzdrossel	High-frequency reactor
HLA	Hydraulic Linear Actuator	Hydraulic linear drive
HLG	Hochlaufgeber	Ramp-function generator
HM	Hydraulic Module	Hydraulic Module
HMI	Human Machine Interface	Human machine interface
HTL	High-Threshold Logic	Logic with high fault threshold
HW	Hardware	Hardware
I		
i. V.	In Vorbereitung	Under development: This property is currently not available
I/O	Input/Output	Input/output
I2C	Inter-Integrated Circuit	Internal serial data bus
IASC	Internal Armature Short-Circuit	Internal armature short-circuit
IBN	Inbetriebnahme	Commissioning
ID	Identifier	Identification
IE	Industrial Ethernet	Industrial Ethernet
IEC	International Electrotechnical Commission	International Electrotechnical Commission
IF	Interface	Interface
IGBT	Insulated Gate Bipolar Transistor	Bipolar transistor with insulated control electrode
IGCT	Integrated Gate-Controlled Thyristor	Semiconductor power switch with integrated control electrode

Abbreviation	Source of the abbreviation	Meaning
IL	Impulslöschung	Pulse suppression
IP	Internet Protocol	Internet Protocol
IPO	Interpolator	Interpolator
IT	Isolé Terre	Non-grounded three-phase line supply
IVP	Internal Voltage Protection	Internal voltage protection
J		
JOG	Jogging	Jog
K		
KDV	Kreuzweiser Datenvergleich	Crosswise data comparison
KHP	Know-how protection	Know-how protection
KIP	Kinetische Pufferung	Kinetic buffering
Kp	-	Proportional gain
KTY	-	Special temperature sensor
L		
L	-	Symbol for inductance
LED	Light Emitting Diode	Light emitting diode
LIN	Linearmotor	Linear motor
LR	Lageregler	Position controller
LSB	Least Significant Bit	Least significant bit
LSC	Line-Side Converter	Line-side converter
LSS	Line-Side Switch	Line-side switch
LU	Length Unit	Length unit
FO cable	Lichtwellenleiter	Fiber-optic cable
M		
M	-	Symbol for torque
M	Masse	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND)
MB	Megabyte	Megabyte
MCC	Motion Control Chart	Motion Control Chart
MDI	Manual Data Input	Manual data input
MDS	Motor Data Set	Motor data set
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product code
MM	Motor Module	Motor Module
MMC	Man-Machine Communication	Man-machine communication
MMC	Micro Memory Card	Micro memory card
MSB	Most Significant Bit	Most significant bit
MSC	Motor-Side Converter	Motor-side converter
MSCY_C1	Master Slave Cycle Class 1	Cyclic communication between master (class 1) and slave


Abbreviation	Source of the abbreviation	Meaning
MSC	Motorstromrichter	Motor-side converter
MT	Messtaster	Probe
N		
N. C.	Not Connected	Not connected
N...	No Report	No report or internal message
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for measurement and control in chemical industries
NC	Normally Closed (contact)	NC contact
NC	Numerical Control	Numerical control
NEMA	National Electrical Manufacturers Association	Standardization body in the US
NM	Nullmarke	Zero mark
NO	Normally Open (contact)	NO contacts
LSC	Netzstromrichter	Line-side converter
NVRAM	Non-Volatile Random Access Memory	Non-volatile read/write memory
O		
OA	Open Architecture	Software component (technology package) which provides additional functions for the SINAMICS drive system
OAIF	Open Architecture Interface	Version of the SINAMICS firmware from which the OA-application can be used
OASP	Open Architecture Support Package	Expands the STARTER commissioning tool by the corresponding OA-application
OC	Operating Condition	Operating condition
OEM	Original Equipment Manufacturer	Original equipment manufacturer
OLP	Optical Link Plug	Bus connector for fiber-optic cable
OMI	Option Module Interface	Option Module Interface
P		
p...	-	Adjustable parameters
P1	Processor 1	CPU 1
P2	Processor 2	CPU 2
PB	PROFIBUS	PROFIBUS
PcCtrl	PC Control	Master control
PD	PROFIdrive	PROFIdrive
PDS	Power unit Data Set	Power unit data set
PE	Protective Earth	Protective ground
PELV	Protective Extra Low Voltage	Safety extra-low voltage
PEM	Permanenterregter Synchronmotor	Permanent-magnet synchronous motor
PG	Programmiergerät	Programming device
PI	Proportional Integral	Proportional integral
PID	Proportional Integral Differential	Proportional integral differential
PLC	Programmable Logical Controller	Programmable logic controller

Abbreviation	Source of the abbreviation	Meaning
PLL	Phase-Locked Loop	Phase-locked loop
PM	Power Module	Power Module
PN	PROFINET	PROFINET
PNO	PROFIBUS Nutzerorganisation	PROFIBUS user organization
PPI	Point to Point Interface	Point-to-point interface
PRBS	Pseudo Random Binary Signal	White noise
PROFIBUS	Process Field Bus	Serial data bus
PS	Power Supply	Power supply
PSA	Power Stack Adapter	Power Stack Adapter
PTC	Positive Temperature Coefficient	Positive temperature coefficient
PTP	Point To Point	Point-to-point
PWM	Pulse Width Modulation	Pulse width modulation
PZD	Prozessdaten	Process data
Q		
R		
r...	-	Display parameters (read only)
RAM	Random Access Memory	Read/write memory
RCCB	Residual Current Circuit Breaker	Residual current operated circuit breaker
RCD	Residual Current Device	Residual current operated circuit breaker
RCM	Residual Current Monitor	Residual current monitor
RFG	Ramp-Function Generator	Ramp-function generator
RJ45	Registered Jack 45	Term for an 8-pin socket system for data transmission with shielded or non-shielded multi-wire copper cables
RKA	Rückkühlanlage	Cooling unit
RLM	Renewable Line Module	Renewable Line Module
RO	Read Only	Read only
ROM	Read-Only Memory	Read-only memory
RPDO	Receive Process Data Object	Receive Process Data Object
RS232	Recommended Standard 232	Interface standard for cable-connected serial data transmission between a sender and receiver (also known as EIA232)
RS485	Recommended Standard 485	Interface standard for a cable-connected differential, parallel, and/or serial bus system (data transmission between a number of senders and receivers, also known as EIA485)
RTC	Real Time Clock	Realtime clock
RZA	Raumzeigerapproximation	Space vector approximation
S		
S1	-	Continuous duty
S3	-	Intermittent duty
SAM	Safe Acceleration Monitor	Safe acceleration monitoring

Abbreviation	Source of the abbreviation	Meaning
SBC	Safe Brake Control	Safe brake control
SBH	Sicherer Betriebshalt	Safe operating stop
SBR	Safe Brake Ramp	Safe brake ramp monitoring
SBT	Safe Brake Test	Safe brake test
SCA	Safe Cam	Safe cam
SD Card	SecureDigital Card	Secure digital memory card
SDI	Safe Direction	Safe motion direction
SE	Sicherer Software-Endschalter	Safe software limit switch
SG	Sicher reduzierte Geschwindigkeit	Safely-limited speed
SGA	Sicherheitsgerichteter Ausgang	Safety-related output
SGE	Sicherheitsgerichteter Eingang	Safety-related input
SH	Sicherer Halt	Safe standstill
SI	Safety Integrated	Safety Integrated
SIL	Safety Integrity Level	Safety Integrity Level
SLM	Smart Line Module	Smart Line Module
SLP	Safely-Limited Position	Safely-limited position
SLS	Safely-Limited Speed	Safely-limited speed
SLVC	Sensorless Vector Control	Vector control without encoder (sensorless)
SM	Sensor Module	Sensor Module
SMC	Sensor Module Cabinet	Sensor Module Cabinet
SME	Sensor Module External	Sensor Module External
SMI	SINAMICS Sensor Module Integrated	SINAMICS Sensor Module Integrated
SMM	Single Motor Module	Single Motor Module
SN	Sicherer Software-Nocken	Safe software cam
SOS	Safe Operating Stop	Safe operating stop
SP	Service Pack	Service pack
SP	Safe Position	Safe position
SPC	Setpoint Channel	Setpoint channel
SPI	Serial Peripheral Interface	Serial peripheral interface
SPS	Speicherprogrammierbare Steuerung	Programmable logic controller
SS1	Safe Stop 1	Safe stop 1 (monitored for time and ramping up)
SS2	Safe Stop 2	Safe Stop 2
SSI	Synchronous Serial Interface	Synchronous serial interface
SSM	Safe Speed Monitor	Safe feedback from speed monitor
SSP	SINAMICS Support Package	SINAMICS support package
STO	Safe Torque Off	Safe torque off
STW	Steuerwort	Control word

Abbreviation	Source of the abbreviation	Meaning
T		
TB	Terminal Board	Terminal board
TIA	Totally Integrated Automation	Totally Integrated Automation
TM	Terminal Module	Terminal Module
TN	Terre Neutre	Grounded three-phase line supply
Tn	-	Integral time
TPDO	Transmit Process Data Object	Transmit process data object
TT	Terre Terre	Grounded three-phase line supply
TTL	Transistor-Transistor-Logic	Transistor-transistor logic
Tv	-	Rate time
U		
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UPS	Uninterruptible Power Supply	Uninterruptible power supply
UPS	Unterbrechungsfreie Stromversorgung	Uninterruptible power supply
UTC	Universal Time Coordinated	Universal time coordinated
V		
VC	Vector Control	Vector control
Vdc	-	DC-link voltage
VdcN	-	Partial DC link voltage, negative
VdcP	-	Partial DC link voltage, positive
VDE	Verband Deutscher Elektrotechniker	Verband Deutscher Elektrotechniker [Association of German Electrical Engineers]
VDI	Verein Deutscher Ingenieure	Verein Deutscher Ingenieure [Association of German Engineers]
VPM	Voltage Protection Module	Voltage Protection Module
Vpp	Volt peak to peak	Volt peak to peak
VSM	Voltage Sensing Module	Voltage Sensing Module
W		
WEA	Wiedereinschaltautomatik	Automatic restart
WZM	Werkzeugmaschine	Machine tool
X		
XML	Extensible Markup Language	Extensible markup language (standard language for web publishing and document management)
Y		
Z		
ZK	DC Link	DC Link
ZM	Zero Mark	Zero mark
ZSW	Status word	Status word

A.2 Documentation overview

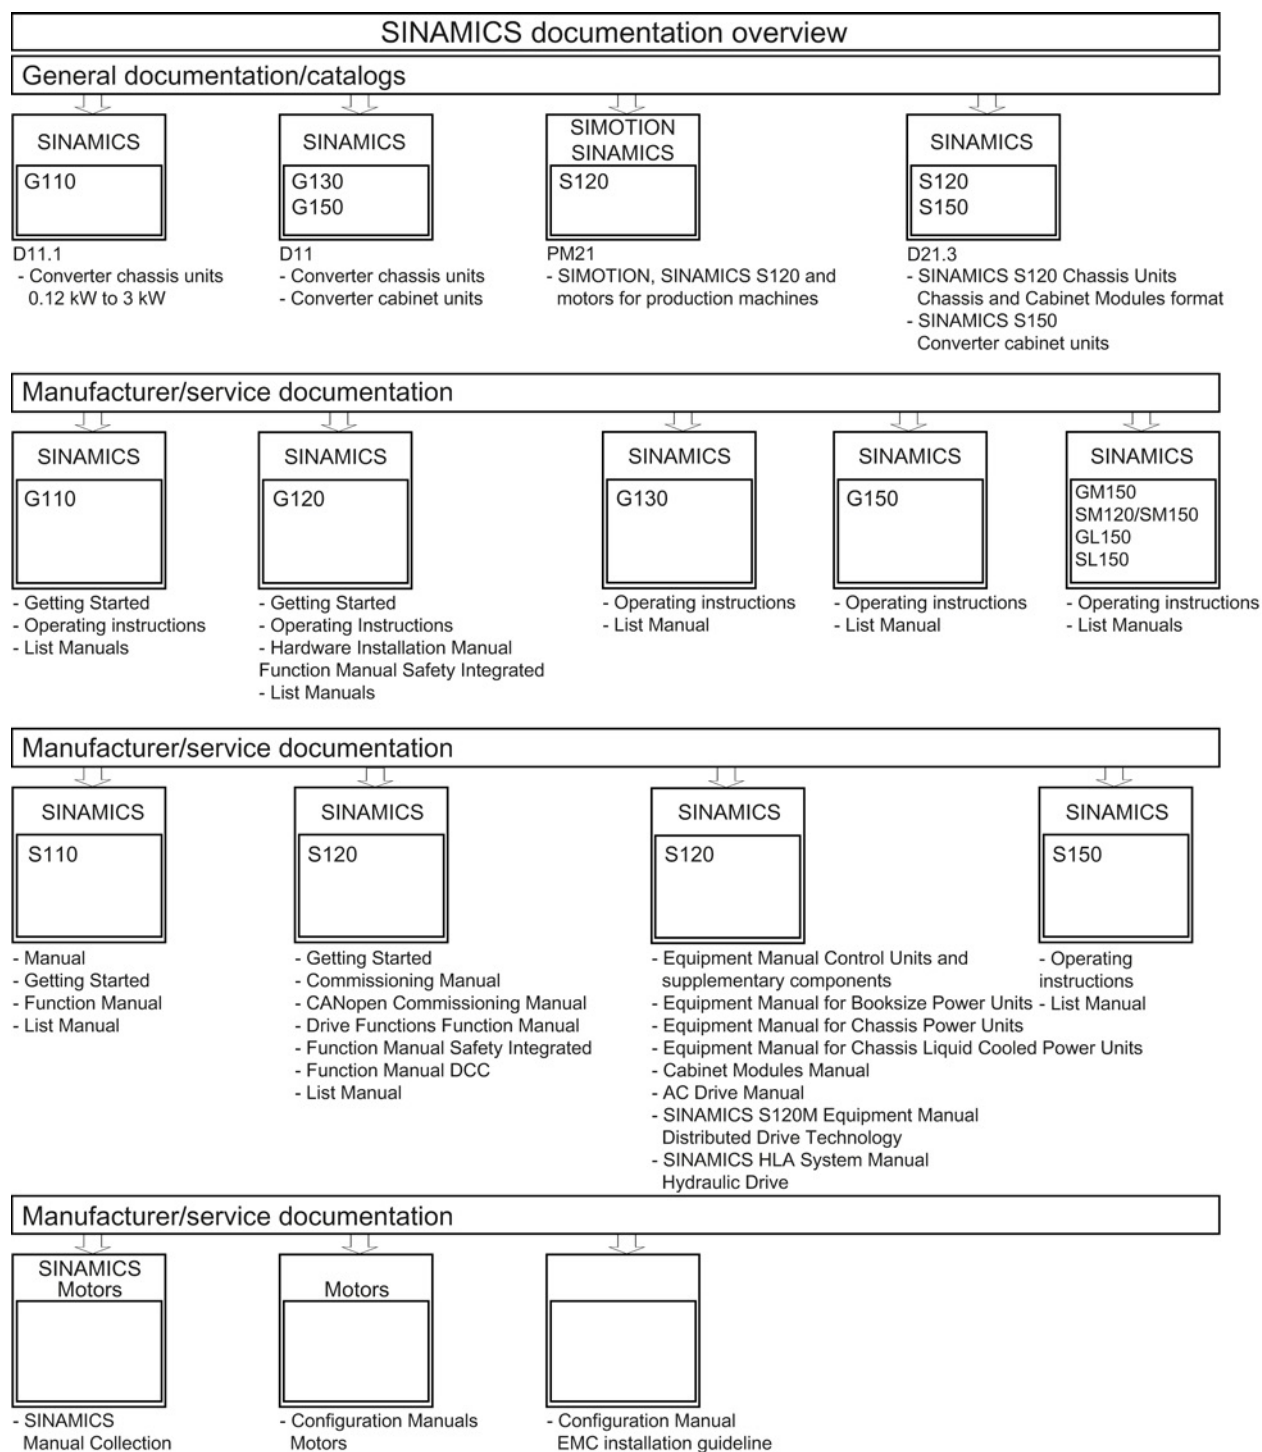

A.3 Terminal description

A.3.1 Spring-loaded terminals

The type of spring-loaded terminal can be taken from the interface description of the particular component.

Table A- 1 Connectable conductor cross-sections for spring-loaded terminals

Spring-loaded terminal type			
1	Connectable cable cross-sections	Rigid Flexible Flexible with end sleeve without plastic sleeve AWG/kcmil	0.14 ... 0.5 mm ² 0.14 ... 0.5 mm ² 0.25 ... 0.5 mm ² 26 ... 20
	Stripped length	8 mm	
2	Connectable cable cross-sections	Flexible	0.08 ... 2.5 mm ²
	Stripped length	8 ... 9 mm	
3	Connectable cable cross-sections	Rigid Flexible Flexible with end sleeve without plastic sleeve Flexible with end sleeve with plastic sleeve AWG/kcmil	0.2 ... 1.5 mm ² 0.2 ... 1.5 mm ² 0.25 ... 1.5 mm ² 0.25 ... 0.75 mm ² 24 ... 16
	Stripped length	10 mm	
4	Connectable cable cross-sections	AWG	25 ... 95 mm ² 4 ... 4/0
	Stripped length	35 mm	
5	Connectable cable cross-sections	Rigid Flexible Flexible with end sleeve without plastic sleeve Flexible with end sleeve with plastic sleeve AWG/kcmil	0.2 ... 10 mm ² 0.2 ... 6 mm ² 0.25 ... 6 mm ² 0.25 ... 4 mm ² 24 ... 8
	Stripped length	15 mm	

A.3.2 Screw terminals

The type of screw terminal can be taken from the interface description of the particular component.

Table A- 2 Connectable conductor cross-sections and tightening torques for screw terminals

Screw terminal type			
1	Connectable cable cross-sections	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.08 ... 1.5 mm ² 0.25 ... 1.5 mm ² 0.25 ... 0.5 mm ²
	Stripped length	7 mm	
	Tool	Screwdriver 0.4 x 2.0 mm	
	Tightening torque	0.22 ... 0.25 Nm	
1_1	Connectable cable cross-sections	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.14 ... 1.5 mm ² 0.25 ... 1.5 mm ² 0.25 ... 0.5 mm ²
	Stripped length	7 mm	
	Tool	Screwdriver 0.4 x 2.5 mm	
	Tightening torque	0.22 ... 0.25 Nm	
2	Connectable cable cross-sections	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve AWG / kcmil	0.2 ... 2.5 mm ² 0.2 ... 2.5 mm ² 0.2 ... 1.5 mm ² 22 ... 12
	Stripped length	6 ... 7 mm	
	Tool	Screwdriver 0.5 x 3 mm	
	Tightening torque	0.4 ... 0.5 Nm	
3	Connectable cable cross-sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.2 ... 2.5 mm ² 0.25 ... 1 mm ² 0.25 ... 1 mm ²
	Stripped length	9 mm	
	Tool	Screwdriver 0.6 x 3.5 mm	
	Tightening torque	0.5 ... 0.6 Nm	
4	Connectable cable cross-sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.2 ... 4 mm ² 0.25 ... 4 mm ² 0.25 ... 4 mm ²
	Stripped length	7 mm	
	Tool	Screwdriver 0.6 x 3.5 mm	
	Tightening torque	0.5 ... 0.6 Nm	
5	Connectable cable cross-sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.5 ... 6 mm ² 0.5 ... 6 mm ² 0.5 ... 6 mm ²
	Stripped length	12 mm	
	Tool	Screwdriver 1.0 x 4.0 mm	
	Tightening torque	1.2 ... 1.5 Nm	

Screw terminal type			
6	Connectable cable cross-sections	Flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.5 ... 10 mm ² 0.5 ... 10 mm ² 0.5 ... 10 mm ²
	Stripped length	11 mm	
	Tool	Screwdriver 1.0 x 4.0 mm	
	Tightening torque	1.5 ... 1.8 Nm	
7	Connectable cable cross-sections	0.5 ... 16 mm ²	
	Stripped length	14 mm	
	Tool	Screwdriver 1.0 x 4.0 mm	
	Tightening torque	1.5 ... 1.7 Nm	

Index

A

- Address
 - Setting the PROFIBUS address, 76
- Ambient temperature, 35

B

- Basic Operator Panel BOP20, 91

C

- CAN CBC10 Communication Board, 98
- CBE20 Ethernet Communication Board, 103
- Communication Board Ethernet CBE25, 108
- Components
 - Basic Operator Panel BOP20, 91
 - CAN CBC10 Communication Board, 98
 - CBE20 Ethernet Communication Board, 103
 - Communication Board Ethernet CBE25, 108
 - Control Unit CU320-2 DP, 65
 - Control Unit CU320-2 PN, 43
 - DRIVE-CLiQ encoder, 339
 - DRIVE-CLiQ Hub Module DMC20, 214
 - DRIVE-CLiQ Hub Module External DME20, 222
 - Sensor Module Cabinet-Mounted SMC10, 255
 - Sensor Module Cabinet-Mounted SMC20, 264
 - Sensor Module Cabinet-Mounted SMC30, 272
 - Sensor Module Cabinet-Mounted SMC40, 290
 - Sensor Module External SME120, 313
 - Sensor Module External SME125, 326
 - Sensor Module External SME20, 300
 - Sensor Module External SME25, 307
 - Terminal Board TB30, 115
 - Terminal Module TM120, 188
 - Terminal Module TM15, 125
 - Terminal Module TM150, 201
 - Terminal Module TM31, 138
 - Terminal Module TM41, 156
 - Terminal Module TM54F, 169
 - Voltage Sensing Module, 229
- Connector coding
 - Terminal Module TM15, 135
 - Terminal Module TM31, 154
- Control Unit CU320-2 DP, 65
 - LEDs after booting, 83

- LEDs during booting, 82
- Control Unit CU320-2 PN, 43
 - LEDs after booting, 61
 - LEDs during booting, 60

D

- Diagnostics via LEDs
 - CAN CBC10 Communication Board, 101
 - CBE20 Ethernet Communication Board, 105
 - Communication Board Ethernet CBE25, 111
 - Control Unit CU320-2 DP, 83
 - Control Unit CU320-2 PN, 61
 - DRIVE-CLiQ Hub Module DMC20, 218
 - Sensor Module Cabinet SMC10, 259
 - Sensor Module Cabinet SMC20, 268
 - Sensor Module Cabinet SMC30, 281
 - Sensor Module Cabinet SMC40, 296
 - Terminal Module TM120, 196
 - Terminal Module TM15, 131
 - Terminal Module TM150, 208
 - Terminal Module TM31, 150
 - Terminal Module TM41, 164
 - Terminal Module TM54F, 182
 - Voltage Sensing Module VSM10, 242
- Dimension drawings
 - Control Unit CU320-2 DP, 85
 - Control Unit CU320-2 PN, 63
 - DRIVE-CLiQ encoder, 340
 - DRIVE-CLiQ Hub Module DMC20, 219
 - DRIVE-CLiQ Hub Module External DME20, 226
 - Sensor Module Cabinet SMC10, 260
 - Sensor Module Cabinet SMC20, 269
 - Sensor Module Cabinet SMC30, 282
 - Sensor Module Cabinet SMC40, 297
 - Sensor Module External SME120, 323
 - Sensor Module External SME125, 336
 - Sensor Module External SME20, 304
 - Sensor Module External SME25, 310
 - Terminal Module TM120, 197
 - Terminal Module TM15, 132
 - Terminal Module TM150, 209
 - Terminal Module TM31, 151
 - Terminal Module TM41, 165
 - Terminal Module TM54F, 184
 - Voltage Sensing Module VSM10, 243
- DRIVE-CLiQ encoder, 339
- DRIVE-CLiQ Hub Module DMC20, 214

DRIVE-CLiQ Hub Module External DME20, 222

F

Field of application, 27

I

Installation

- Basic Operator Panel BOP20, 94
- CBE20 Ethernet Communication Board, 107
- Communication Board CBC10, 102
- Communication Board Ethernet CBE25, 113
- Control Unit CU320-2 DP/PN, 87
- DRIVE-CLiQ encoder, 342
- DRIVE-CLiQ Hub Module DMC20, 220
- Sensor Module Cabinet, 261, 270, 283
- Sensor Module External SME120, 323
- Sensor Module External SME125, 336
- Sensor Module External SME20/SME25, 304, 310
- Sensor Modules Cabinet SMC40, 298
- Terminal Board TB30, 120
- Terminal Module TM120, 198
- Terminal Module TM150, 210
- Terminal Modules, 133, 152, 166, 185
- Voltage Sensing Module VSM10, 244

Interface descriptions

- Basic Operator Panel BOP20, 91
- CAN CBC10 Communication Board, 98
- CBE20 Ethernet Communication Board, 103
- Communication Board Ethernet CBE25, 109
- Control Unit CU320-2 DP, 66
- Control Unit CU320-2 PN, 44
- DRIVE-CLiQ Hub Module DMC20, 215
- DRIVE-CLiQ Hub Module External DME20, 223
- Sensor Module Cabinet SMC10, 255
- Sensor Module Cabinet SMC20, 264
- Sensor Module Cabinet SMC30, 272
- Sensor Module Cabinet SMC40, 291
- Sensor Module External SME120, 314
- Sensor Module External SME125, 327
- Sensor Module External SME20, 300
- Sensor Module External SME25, 307
- Terminal Board TB30, 115
- Terminal Module TM120, 189
- Terminal Module TM150, 202
- Terminal Module TM31, 139
- Terminal Module TM41, 157
- Terminal Module TM54F, 170
- Voltage Sensing Module VSM10, 232

Interface Descriptions

Terminal Module TM15, 126
Introduction, 30

L

LEDs

- CAN CBC10 Communication Board, 101
- CBE20 Ethernet Communication Board, 105
- Communication Board Ethernet CBE25, 111
- Control Unit CU320-2 DP, 83
- Control Unit CU320-2 PN, 61
- DRIVE-CLiQ Hub Module DMC20, 218
- Sensor Module Cabinet SMC10, 259
- Sensor Module Cabinet SMC20, 268
- Sensor Module Cabinet SMC30, 281
- Sensor Module Cabinet SMC40, 296
- Terminal Module TM120, 196
- Terminal Module TM15, 131
- Terminal Module TM150, 208
- Terminal Module TM31, 150
- Terminal Module TM41, 164
- Terminal Module TM54F, 182
- Voltage Sensing Module VSM10, 242

P

Platform Concept, 28

PROFIBUS

- Setting the address, 76

Protective conductor connection and shield support

- DRIVE-CLiQ Hub Module DMC20, 221
- Terminal Module TM120, 199
- Terminal Module TM15, 134
- Terminal Module TM150, 211
- Terminal Module TM31, 153
- Terminal Module TM41, 167
- Terminal Module TM54F, 186
- Voltage Sensing Module VSM10, 245

S

Safety instructions

- Control Units, 41
- Hub Modules, 213
- Option boards, 97
- Sensor Module External, 313, 326
- Sensor Modules and encoders, 252
- Terminal Modules, 123
- Voltage Sensing Modules VSM10, 230
- Sensor Module Cabinet-Mounted SMC10, 255
- Sensor Module Cabinet-Mounted SMC20, 264

Sensor Module Cabinet-Mounted SMC30, 272
Sensor Module Cabinet-Mounted SMC40, 290
Sensor Module External SME120, 313
Sensor Module External SME125, 326
Sensor Module External SME20, 300
Sensor Module External SME25, 307
Sensor Modules
 Overview, 250
Specification of encoder systems and encoders
 Sensor Module Cabinet SMC30, 286
Storage, 35
Switches for PROFIBUS address, 76

T

Technical data
 CAN CBC10 Communication Board, 102
 Control Unit CU320-2 DP, 86
 Control Unit CU320-2 PN, 64
 DRIVE-CLiQ encoder, 345
 DRIVE-CLiQ Hub Module DMC20, 221
 DRIVE-CLiQ Hub Module External DME20, 227
 Electronics power supply, 34
 Sensor Module Cabinet SMC10, 262
 Sensor Module Cabinet SMC20, 271
 Sensor Module Cabinet SMC30, 285
 Sensor Module Cabinet SMC40, 299
 Sensor Module External SME120, 324
 Sensor Module External SME125, 337
 Sensor Module External SME20, 305
 Sensor Module External SME25, 311
 Terminal Board TB30, 121
 Terminal Module TM120, 200
 Terminal Module TM15, 136
 Terminal Module TM150, 212
 Terminal Module TM31, 155
 Terminal Module TM41, 168
 Terminal Module TM54F, 187
 Voltage Sensing Module VSM10, 246
Terminal Board TB30, 115
Terminal Module TM120, 188
Terminal Module TM15, 125
Terminal Module TM150, 201
Terminal Module TM31, 138
Terminal Module TM41, 156
Terminal Module TM54F, 169
Tightening torques, 347
Totally Integrated Automation, 28
Transport, 35

V

Voltage Sensing Module, 229

Siemens AG
Industry Sector
Drive Technologies
Motion Control Systems
Postfach 3180
91050 ERLANGEN
GERMANY

Subject to change without prior notice
© Siemens AG 2004 - 2014

www.siemens.com/motioncontrol