



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
zh 安裝指導

Stellantriebe + Ventile
Actuators + Valves
Servomoteur + Vannes
Ställdon + Ventiler
Servomotoren + Afsluiters
Servocomandi + Valvole
Toimimootorit + Venttiilit
Actuadores + Válvulas
Motorer + Ventiler
Siłowniki + Zawory
Pohony + Ventily
Motorok + Szelepek
Κινητήρες + Βάνες
执行器 + 阀门

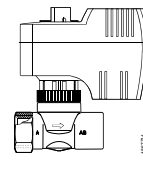


MVI421..

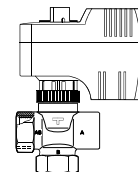


MXI421..

1

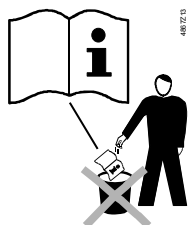


2

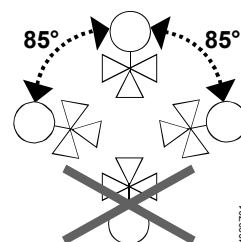



3

MVI421..

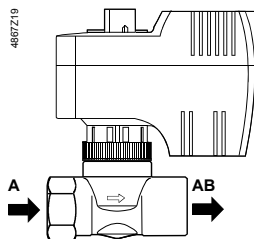



A = 0...100%
 AB = 0...100%




 
MXI421..

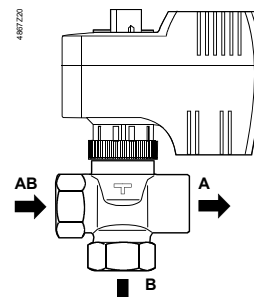



AB → A = 0...100 %
 AB → B = 70...0 %

4

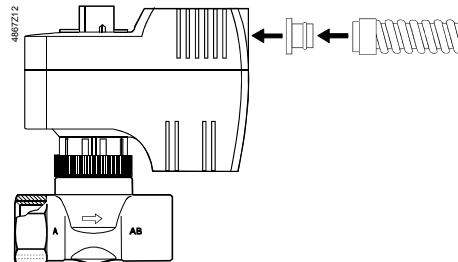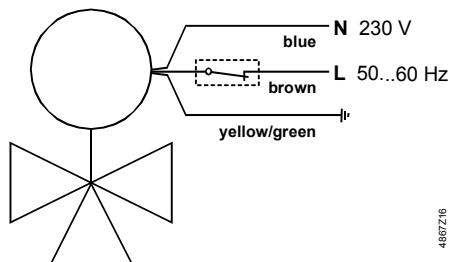

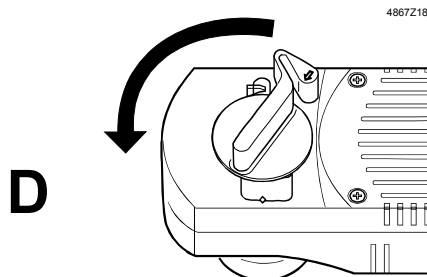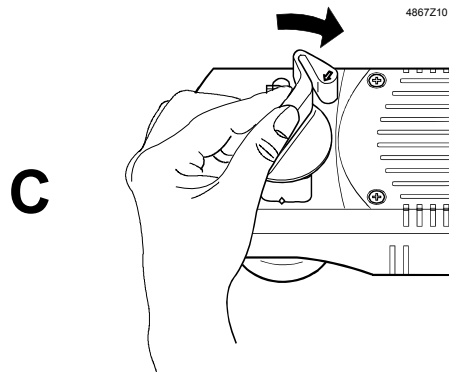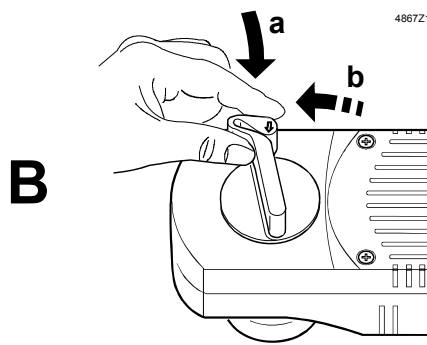
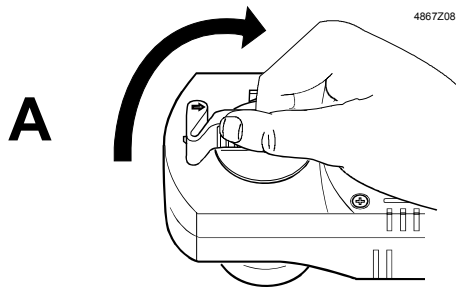


MVI421..

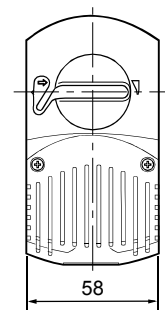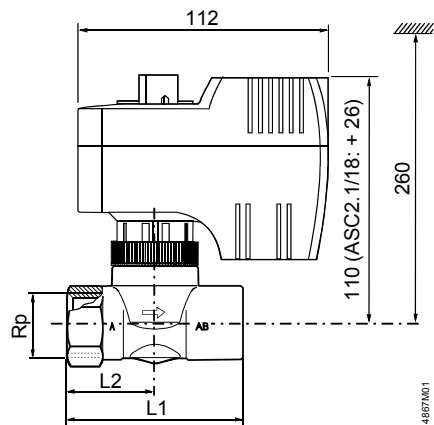

| Type | DN | Rp [inches] | L1 [mm] | L2 [mm] | W [kg] |
|-----------|----|----------------|------------|------------|-----------|
| MVI421.15 | 15 | Rp½ | 60 | 30 | 0.865 |
| MVI421.20 | 20 | Rp¾ | 65 | 32.5 | 0.895 |
| MVI421.25 | 25 | Rp1 | 84 | 42 | 1.105 |

MXI421..

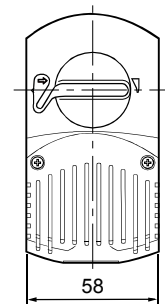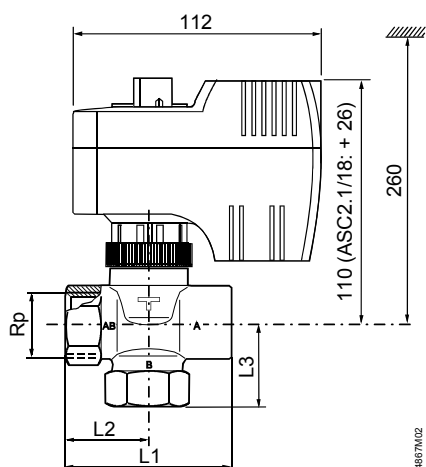

| Type | DN | Rp [inches] | L1 [mm] | L2 [mm] | L3 [mm] | W [kg] |
|-----------|----|----------------|------------|------------|------------|-----------|
| MXI421.15 | 15 | Rp½ | 60 | 30 | 30 | 0.934 |
| MXI421.20 | 20 | Rp¾ | 65 | 32.5 | 32.5 | 0.965 |
| MXI421.25 | 25 | Rp1 | 84 | 42 | 40 | 1.215 |